
FLOOR DOOR - Angled Existing Floor Door - FLDE Installation & Maintenance Guide

GENERAL:

Floor doors are designed for safe and easy access using ladders and stairways. The following instructions are general guideline recommendations. Prior to installing, floor door should be stored in a dry area, free from dirt and debris.

Caution: The floor door cover is spring loaded, so standard practice precautions should be taken when handling. Be sure the floor door is in a horizontal, upright position prior to opening cover.

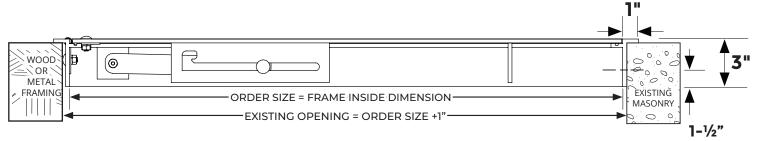

INSTALLATION:

- 1. The Existing Floor Door is designed to be retrofit and installed into an existing floor opening. Verify that existing opening is 1" larger than order size.
- 2. Clean installation are of debris and dirt.
- 3. Place floor door in existing opening that is 3" deep or more. Verify that the floor door is square and level. Shim as necessary (by others).
- 4. Floor door frame is pre-drilled with .28" dia. mounting holes located 1-½" from bottom of frame. Use hardware of sufficient length and diameter to secure the door. (Minimum recommendation is 1/4" x 1-¾" Tapcon[®] screws or expansion anchors, hex head bolts or wood screws) To accommodate larger hardware, drill out existing holes. Attach using mechanical fasteners.

OPERATION:

The basic components for floor door operation include slam latch with a L handle external key, gas springs to provide lift assistance, hinges, and a locking hold open arm to automatically hold the door in the open position.

- **Opening:** To open the floor door cover; use the slam latch lever handle from the interior or the L handle key (FLD-KIT-LKEY) from the exterior. Open the door fully, until the locking hold open arm engages.
- **Closing:** To close the floor door cover; disengage the locking hold open arm, then slowly close the cover making sure the slam latch engages the catch.

MAINTENANCE:

- Manually operate at least once a year to check functionality of moving parts such as latches, hinges & handles.
- Test outside and inside manual operation of latches.
- Lubricate moving parts such as hinges and latches with a silicone spray as required to maintain a smooth opening/closing of door.
- Mill finish aluminum can be washed periodically if needed or desired to maintain a clean appearance.

800-554-6077
sales@activarcpg.com
www.activarcpg.com

Installation & Maintenance Guide

9702 Newton Ave S. Bloomington, MN 55431 | Many Locations Nationwide

CONSTRUCTION PRODUCTS GROUP INC