


# ACCESS PANEL - SM INSTALLATION & MAINTENANCE GUIDE

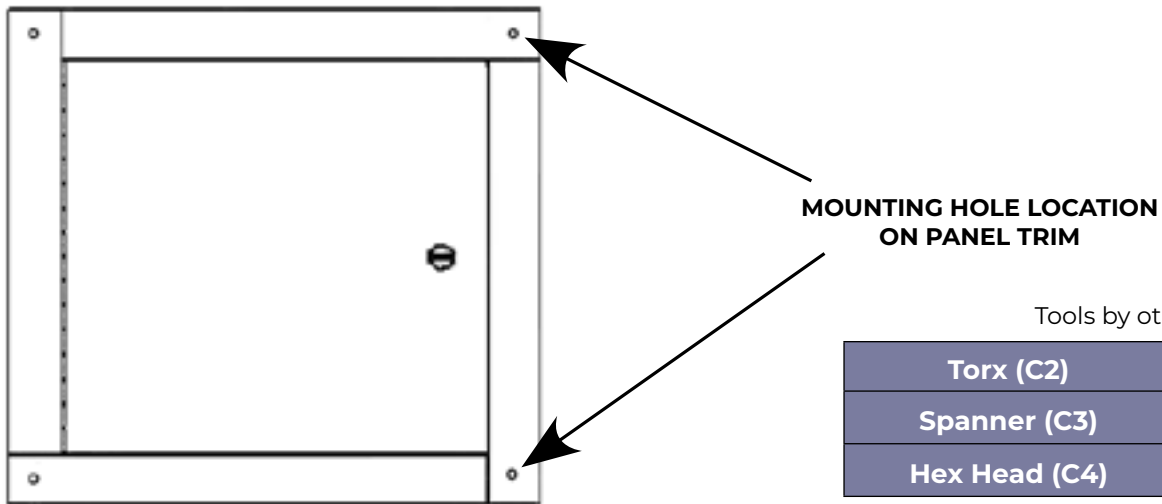

Tools by others

Torx (C2)	T-25
Spanner (C3)	#10 Spanner
Hex Head (C4)	4mm Allen

## WALLBOARD OR PLASTER INSTALLATION

1. With metal or wood studding, install a framed opening at specified location. Open dimensions should be the same as the size of the door panel; i.e., for a 12" x 12" panel, opening should be 12" x 12".
2. Frame above and below access panel. On panels larger than 16" x 16", install a double stud on both sides in the same manner as at passage panels.
3. Place panel in position in opening and mark location of attachments on studding using holes in the front of the panel trim as marking guides.
4. Remove panel and drill 5/32" holes through studs at marked points.
5. For Masonry installation: install expansion shields in wall at marked points.
6. Place panel in position and attach with #10 sheet metal or machine screws.

## MAINTENANCE:

Our Access Panels are designed to be maintenance free. However, it is recommended that the outer surface of the panel, and the hinge area, be kept clear from debris and dirt, to ensure correct operation of the hinged door.

- If latches, locks or hinges need to be lubricated, use a "3 in 1" type light oil, removing excess with a cloth.
- To clean painted surfaces, use a soft cloth and mild soap and water.
- To clean stainless steel, use a soft cloth and mild soap and water solution. After cleaning, thoroughly rinse with clear water to remove all traces of the solution and wipe dry to prevent water marks from forming. Stains which resist that treatment can usually be removed by polishing in the direction of the grain with a soft cloth and a non-abrasive stainless steel polish. Test in an unobtrusive location.



800-554-6077

sales@activarcpg.com

www.activarcpg.com

9702 Newton Ave S. Bloomington, MN 55431 | Many Locations Across North America

NOTE - This is not a Fire-Rated Access Panel - See Models FD and FDP if a fire-rated unit is required.