

Tools by others	
Torx (C2)	T-25
Spanner (C3)	#10 Spanner
Hex Head (C4)	4mm Allen

WALLBOARD OR PLASTER INSTALLATION

1. With metal or wood studding, install a framed opening at specified location. Open dimensions should be 1/2" larger than door size of panel; i.e., for a 12" x 12" panel, opening dimensions should be 12-1/2" x 12-1/2".
2. Frame above and below access panel. On panels larger than 16" x 16", install a double stud on both sides in the same manner as at passage panels.
3. Place panel in position in opening and mark location of attachments on studding using holes in sides of panel frame as marking guide.
4. Remove panel and drill 5/32" holes through studs at marked points.
5. Place panel in position and attach with #10 sheet metal or machine screws.
6. Check panel for freedom of movement. If it binds, shim as necessary to remove any racking of frame at attachments to studding.

MASONRY INSTALLATION

1. Opening should be planned to dimensions 3/8" larger than door size of panel; i.e., for a 12" x 12" panel, opening should be 12-1/2" x 12-1/2".
2. Position panel in opening and mark location of attachments on wall using holes in insides of panel frame as marking guide.
3. Remove panel and install expansion shields in wall at marked points.
4. Place panel in position and attach with #10-32 x 1" long flat head steel machine screws or equivalent.
5. Check panel for freedom of movement. If it binds, shim as necessary to remove any racking of frame at attachments to masonry.



JL INDUSTRIES

9702 Newton Ave S. Bloomington, MN 55431 | Many Locations Nationwide

800-554-6077

sales@activarcpg.com

www.activarcpg.com

Due to the wide variety of wall assemblies, these drawings are representative of a typical installation scenario, but are not meant to be a guideline for wall construction. Please consult your local AHJ for current wall construction codes.


NOTE - This is not a Fire-Rated Access Panel - See Models FD and FDP if a fire-rated unit is required.

- Our Access Panels are designed to be maintenance free. However, it is recommended that the outer surface of the panel, and the hinge area, be kept clear from debris and dirt, to ensure correct operation of the hinged door.
- If latches, locks or hinges need to be lubricated, use a “3 in 1” type light oil, removing excess with a cloth.
- To clean painted surfaces, use a soft cloth and mild soap and water.
- To clean stainless steel, use a soft cloth and mild soap and water solution. After cleaning, thoroughly rinse with clear water to remove all traces of the solution and wipe dry to prevent water marks from forming. Stains which resist that treatment can usually be removed by polishing in the direction of the grain with a soft cloth and a non-abrasive stainless steel polish. Test in an unobtrusive location.



JL INDUSTRIES

9702 Newton Ave S. Bloomington, MN 55431 | Many Locations Nationwide

 **800-554-6077**

 **sales@activarcpg.com**

 **www.activarcpg.com**

OPERATION AND MAINTENANCE