

## Barrier Wall Control Joint

The AR Barrier Wall Control Joint is a pre-manufactured extruded PVC forming insert used in controlling the location of shrinkage cracks in concrete barrier walls. The Barrier Wall Control Joint is installed by mechanically attaching it to the edge of the concrete form at a predetermined joint spacing specified by the engineer. The spacing and location of the Barrier Wall Control Joint is calculated based on the concrete mass and length of wall cast. Comes as a 3 metre (10') length. Available in steel as a special order upon request.

NOTE: If properly installed may be reused a number of times. Referred in the OPSS904 specification as special provision 109S25.

To order, please specify  
the following information

EXAMPLE

Name ..... Barrier Wall Control Joint  
Quantity ..... 200

