


Spreader Cleat

The AR Spreader Cleat is used to spread and hold the top and bottom of forms during concrete pour. The nail holes can be used to secure the cleats to the form. Available in 6"-12" standard sizes, for use with 3/4" and 1-1/8" plywood systems. Additional sizes available on request.

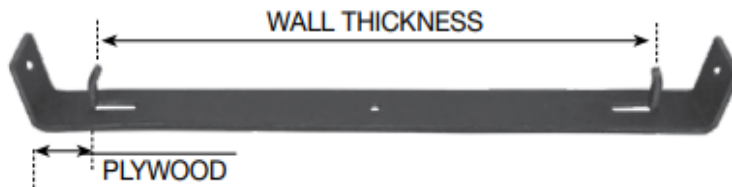

Plywood Size	Size	SWL (lbs)	Box Qty
1-1/8"	5-5/8"	1,500	100
	6"		
	7-5/8"		
	8"		
	9"		
	10"		
	11-5/8"		
12"			

**APPROXIMATE SAFE
WORKING LOAD
2:1 Safety Factor**