


# DriftTrak® DTSL Installation Instructions



## Vertical Deflection & Drift @ Head of Wall

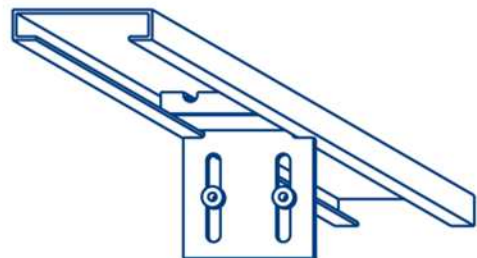


Standard Step Bushing  
(DO NOT REMOVE  
FROM SLOTS)




Stiffening Plate  
(DO NOT REMOVE  
FROM CLIP)

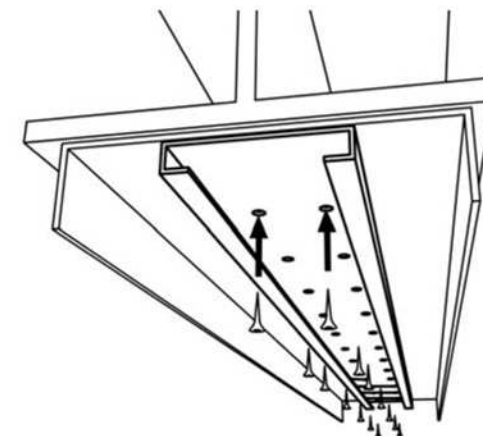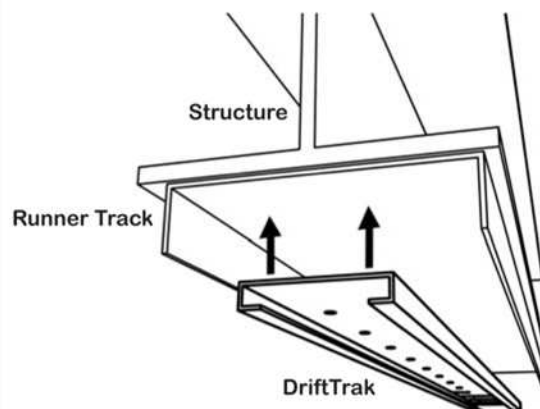

Refer to Design Drawings  
for fastener size and amount

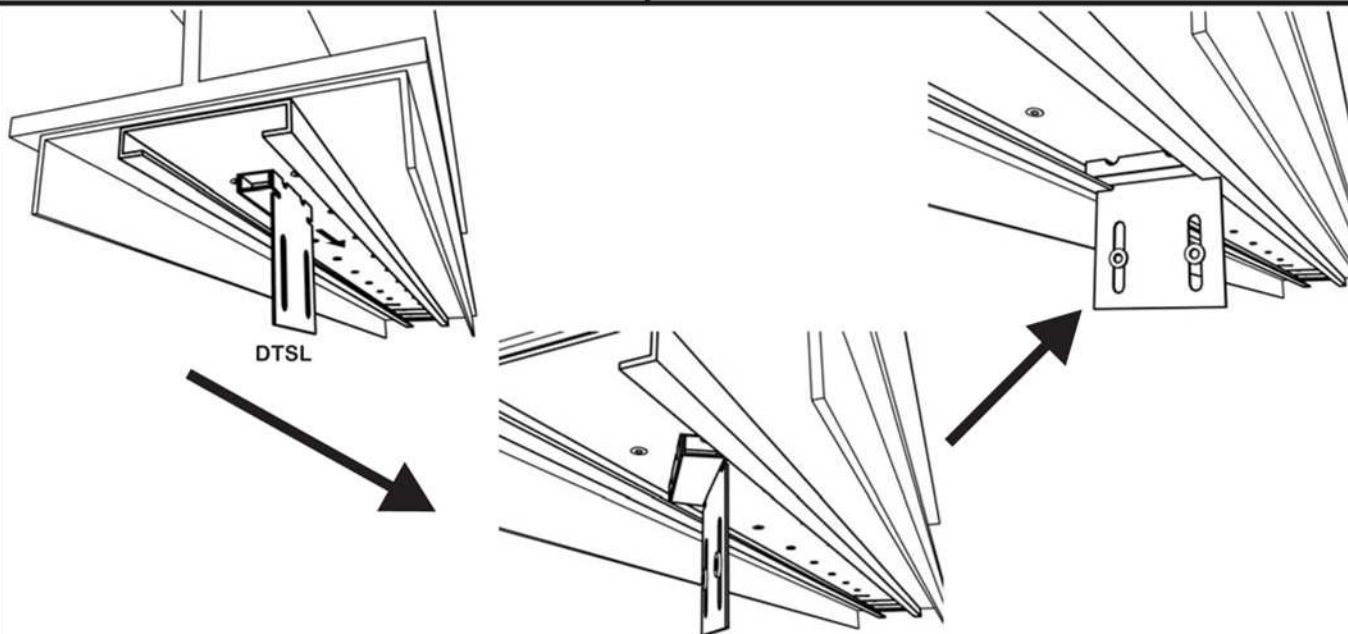

Install screws using a screw gun that  
does not exceed 2,500 rpm.

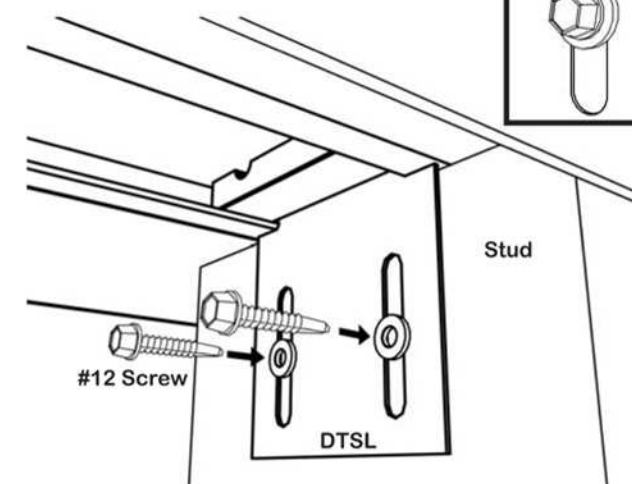

Screw gun must be equipped with torque  
limiting clutch to avoid fastener overdrive.

Rev 2