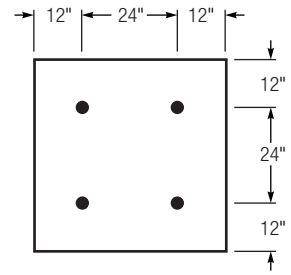
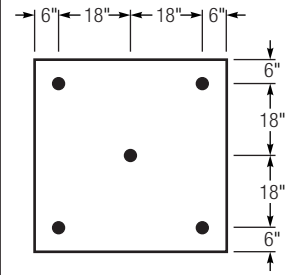
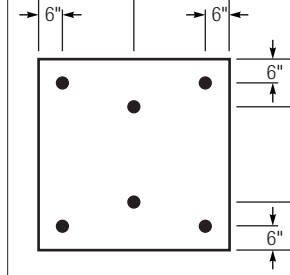
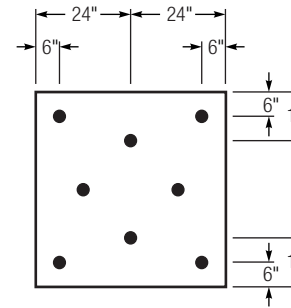
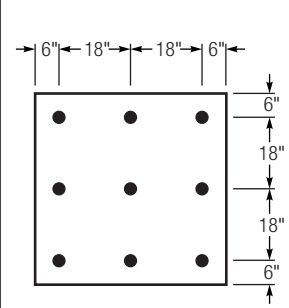
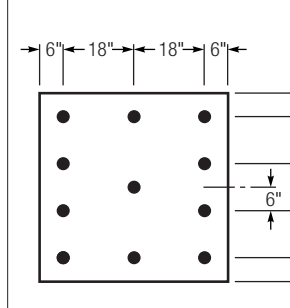
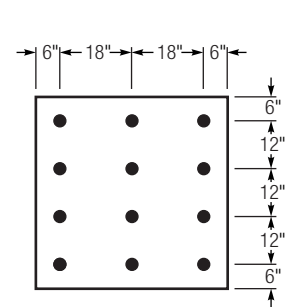
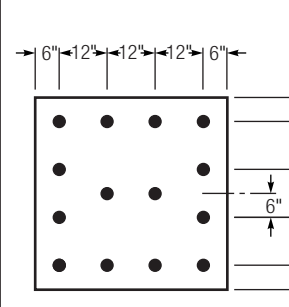
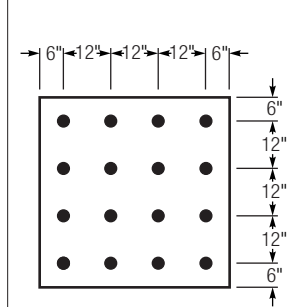


SECUROCK® High-Performance Roof Boards






Proper fastener spacing is critical to achieve wind-uplift performance. Always use fasteners specified in accordance with Factory Mutual Global (FMG) requirements and the roof membrane manufacturer’s written recommendations. Fasteners should be installed in compliance with the roof manufacturer’s installation recommendations and FMG Loss Prevention Data Sheet 1-29.

4' x 4'
Roof Board

4 Fasteners	5 Fasteners	6 Fasteners
		
8 Fasteners	9 Fasteners	11 Fasteners
		
12 Fasteners	14 Fasteners	16 Fasteners
		

Fastener Patterns

4' x 8'
Roof Board

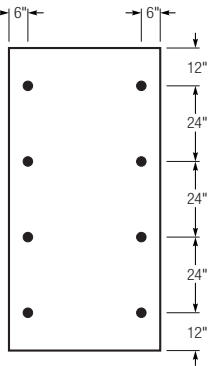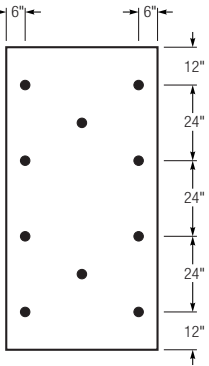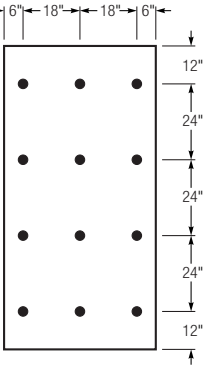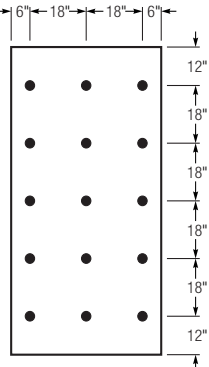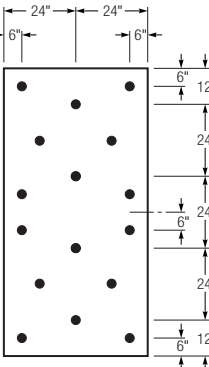8 Fasteners	10 Fasteners	12 Fasteners
		
15 Fasteners	16 Fasteners	
		
24 Fasteners	32 Fasteners	
