



## WEEKLY MAINTENANCE

**ALL MAINTENANCE SHOULD BE PERFORMED PRIOR TO THE START OF THE FIRST DAY OF THE WORK WEEK**

**1. Clean and lubricate transfer pumps in the following manner:**

- A. Remove air cylinder from pump by grabbing center of cylinder and turning counter clockwise.
- B. Wipe all parts and the inside of the cylinder with a clean rag.
- C. Use white lithium grease to lubricate the inside of the cylinder.
- D. Re-install cylinder taking care to not “cross thread.” It should turn easily. If there is any resistance, it is probably not aligned.



Re-install cylinder taking care to not “cross thread.”

**2. Clean both the “A” and “B” filters on the machine in the following manner:**

- A. Close the material supply valves.
- B. Remove the filters and clean with gun cleaner and blow clean with air.
- C. Hold up to the light and see if the screen is clean; if not, repeat the above procedure.
- D. When you are sure the filters are clean, re-install and OPEN the supply valves.




**3. Clean the filters on the gun in the following manner:**

- A. Remove the gun from the block.
- B. Remove the check valves and remove the screens from the check valve. Be sure to keep A and B parts separate.
- C. Clean the filters with gun cleaner and blow clean with air.
- D. Hold up to the light and see if the screen is clean; if not, repeat the above procedure.
- E. Blow out check valve with air.
- F. Wipe everything clean with a clean rag.
- G. Re-install screen on the check valve.
- H. Lubricate “O” ring with white lithium grease and re-install in gun.
- I. Wipe off valve block with clean rag and coat with lithium grease.
- J. Re-install gun.


\* Refer to the FleeceBACK Field Guide for monthly maintenance and storage procedures.

# FUSION GUN BREAKDOWN

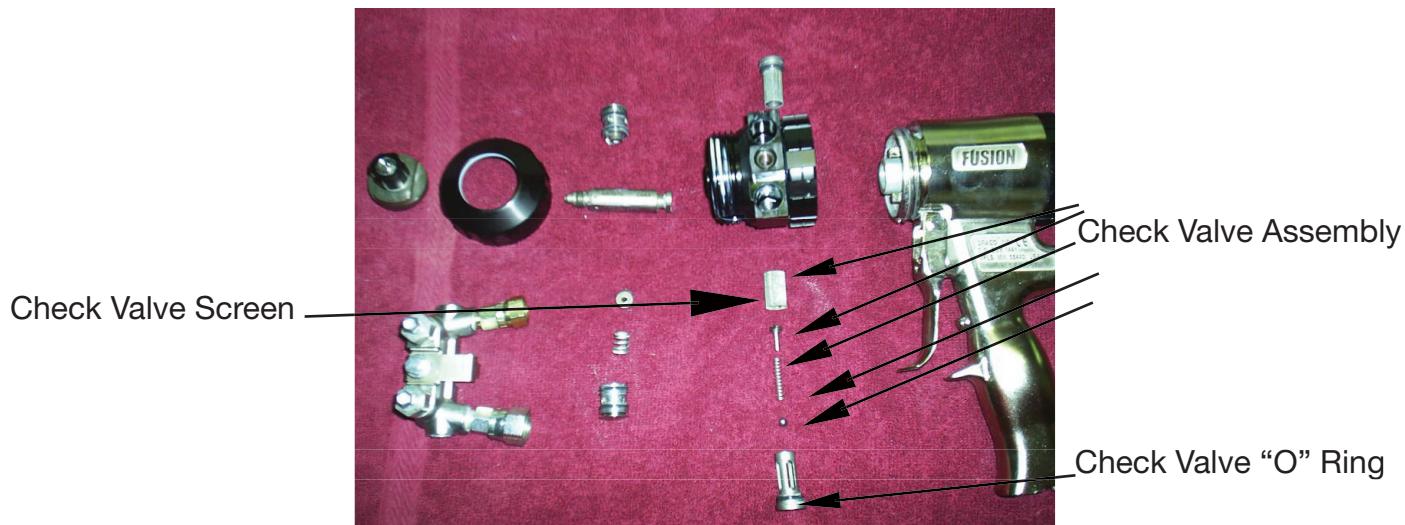

#### 4. Check the packing nut on the pump cylinders "A" and "B" and tighten as needed.

- A. NOTE: On new or re-built machines, this packing should be checked and tightened the first three days of operation, then during weekly maintenance.

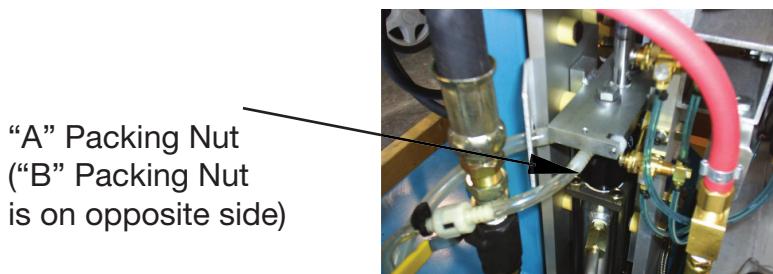

#### Carlisle SynTec contacts:

Kris Costas - 717-609-9440

Paul Markel - 877-663-2451

Dre Didriksen- 541-653-7815

#### Equipment contacts:

Graco Gusmer - 800-367-4767

Foam Pak, Inc. - 888-458-2928