

**CertainTeed** 

**Certa-SNAP™**  
**WRAP**

TRANSFORMS WOOD POSTS IN A SNAP

# STEP-BY-STEP

## INSTALLATION INSTRUCTIONS FOR

# CERTA-SNAP™

Assembly for: 4 x 4 and 6 x 6 post wraps

Virtually Maintenance Free | Lifetime Limited Warranty

## BEFORE YOU BEGIN

### HELPFUL HINTS

Read these instructions thoroughly before beginning the assembly.

- Use carbide-tipped multipurpose blade for cutting.
- Do not lay vinyl components on abrasive surfaces.
- If any components are missing or defective, please call us at:  
**800-333-0569**

### TOOLS REQUIRED


Chop/mitre saw –  
with carbide-tipped multi-purpose blade  
Tape measure  
Pencil  
Hammer  
Siding snips

### TIPS


- Make sure you have all the pieces you need to complete the job.
- Don't forget - if using CERTA-SNAP trim on the top and bottom of the post, notch out the CERTA-SNAP and shorten corner pieces.
- For undersized posts, screws are included to secure CERTA-SNAP panels to the post.
- Silicone adhesive may also be used to secure corners to the CERTA-SNAP panel with undersized posts and high wind conditions.

### IMPORTANT:


**ALWAYS WEAR SAFETY  
GLASSES WHEN CUTTING AND  
DRILLING VINYL/ALUMINUM  
RAILING PRODUCTS.**

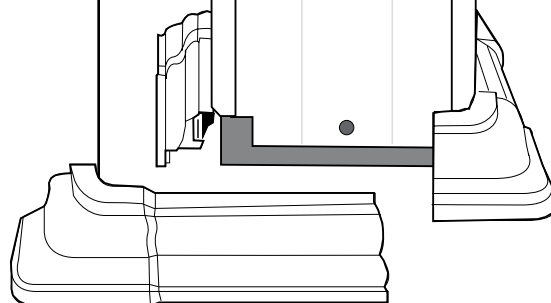


# ASSEMBLING CERTA-SNAP™

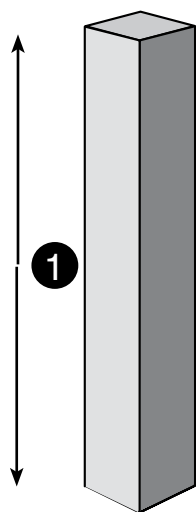


1

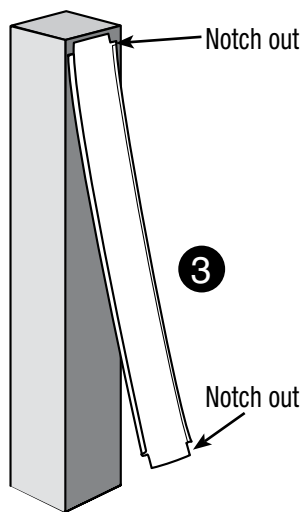

3



4

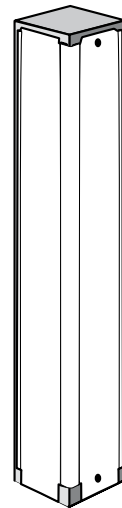

5

**Step 1:** Measure the post to be wrapped.

**Step 2:** Measure the post wrap panels and cut to length; repeat step with corner pieces.

**Tip:** If using trims at top & bottom, notch out corners of CERTA-SNAP panels and shorten corner pieces.

**Step 3:** Place first post wrap panel against post.

**Step 4:** Place first corner piece over one corner of post wrap.

**Step 5:** Install second post wrap panel into first corner piece.

**Step 6:** Install third post wrap panel into second corner piece.


**Step 7:** Install fourth post wrap panel into third corner piece.

**Step 8:** Snap fourth corner piece over remaining corner of post.


**Step 9:** Assemble 4-piece post trim at top of post, snap together and position to ceiling.

**Step 10:** Assemble 4-piece post trim at bottom on floor and snap together.

## ASSEMBLING CERTA-SNAP™ TRIM ACCESSORY

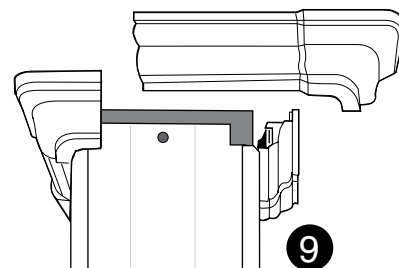


9

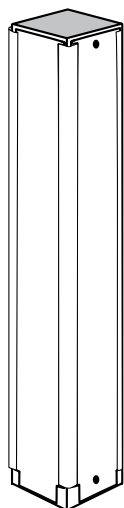


6



7

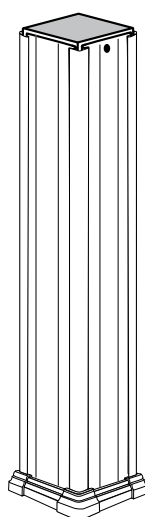

8

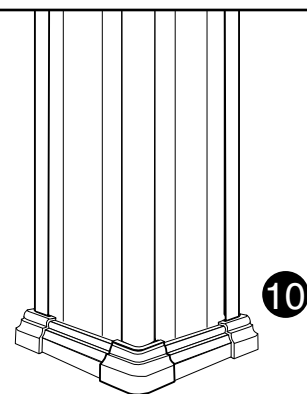

10