

APPLICATION PROCEDURE

HYDRO ACTIVE® GROUTS

Standard Application Procedures for Sealing Leaking Cracks or Joints with HYDRO ACTIVE® Grouts

CRACK INJECTION PROCEDURES

HYDRO ACTIVE® Polyurethanes, as well as some acrylics and acrylates, are commonly installed into joints and cracks for the purpose of stopping leaks and sealing voids. This process is very reliable if these steps are followed:

STEP 1: IDENTIFY AND PREPARE THE CRACK SURFACE

This step helps to identify the characteristics of the crack to be injected.

- Use a wire brush to physically remove mineral deposits and dirt
- Water can be used to help clean the area
- If severe deposits exist, a chemical cleaner can be used, but **MUST** be neutralized prior to continuing
- If it is a wide crack or high water flows are encountered, it will be necessary to seal the surface of the crack with a surface sealing material; (example: hydraulic cement, epoxy gel, or oakum saturated with polyurethane grout).
- The surface sealing can be done before or after drilling the injection holes.




STEP 2. MARK PORT SPACING

PART A: Calculate Port Distance From Crack


Unlike epoxies, polyurethanes are injected at an angle to intersect the crack at its midpoint, allowing for a complete seal.

To intersect a crack at its mid-point, drill at a 45 degree angle at a distance of one half the thickness of the wall.


ex. 12 inch thick wall = drill holes 6 inches from crack

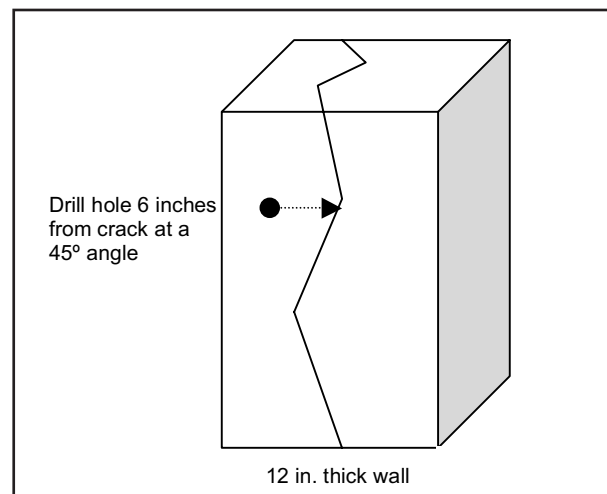


STEP 2. PART A (CONTINUED):

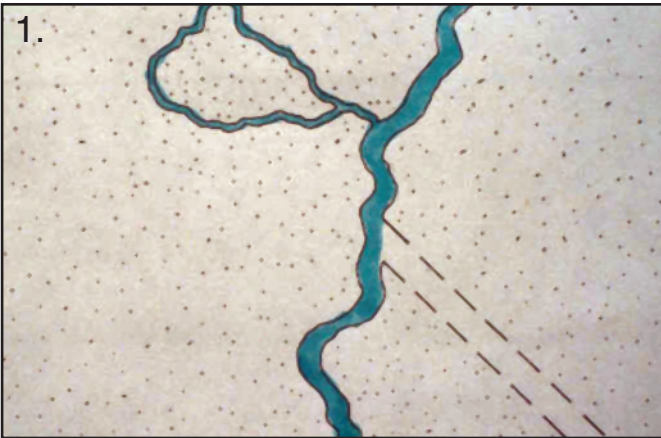

Drill holes should intersect the crack or joint at its mid-point.

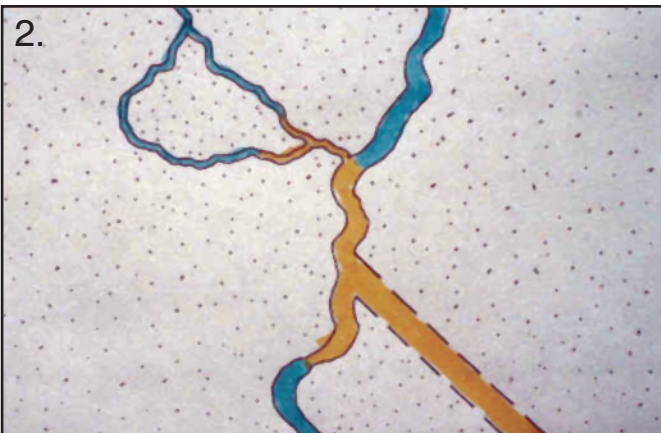

Grout can then easily travel towards the front and back of the crack, filling other voids along the way.

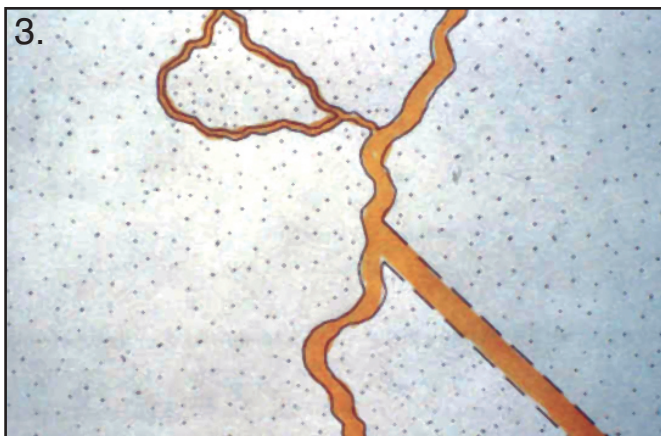


Injection pressure and the expansion pressure of the foam cause the resin to seal the entire width of the substrate, and secondary cracks, as well as various other defects that may be present - ensuring a water tight seal.

STEP 2. PART B

Polyurethanes are injected to allow port-to-port travel. Port spacing is therefore determined by the width of the crack.

- The narrower the crack, the closer the ports must be placed. The wider the crack the further apart they can be placed

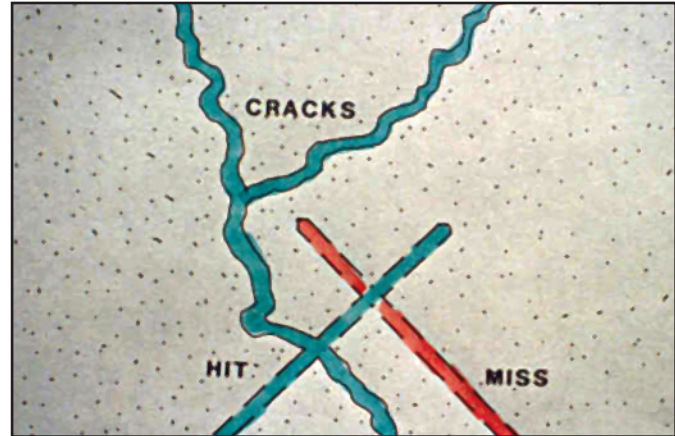

Ports are alternated from side to side to ensure intersection of the crack as well as to prevent a weak side of the crack.

STEP 3. DRILLING THE INJECTION HOLES

The standard drill hole will be 1/2 inch or 5/8 inch in diameter, proportional to the packer being used.

- Drill at a 45 degree angle, alternating sides, as described above.
- Flush drill holes with water to remove dust and debris before inserting packer.



STEP 4. INSTALL INJECTION PORTS OR PACKERS

DeNeef supplies a variety of packers that are suited for various types of applications.



- Place the selected packer in the drilled 1/2 inch or 5/8 inch diameter hole so that the top of the sleeve is just below the concrete surface.
- Tighten by a ratchet, socket or open-end wrench by turning clockwise until firm and secure.
- Packers or injection ports are supplied with a one-way ball valve or check valve.

STEP 5. PREPARE INJECTION EQUIPMENT

Because HYDRO ACTIVE® grouts are water activated, it is highly advisable to have two pumps on site. One for water, the other for grout. **Never use the water pump for grouting. Always insure that water is never introduced into the grout pump.** Using DeNeef Washing Agent, flush the grout pump prior to injection and immediately after injection. Flushing the pump eliminates the moisture in the pump and hoses and lubricates the system.



(STEP 6. FLUSH CRACK)

STEP 6. FLUSH CRACK

Flushing the crack will ensure that the crack is wet enough to react the grout when it is introduced into the crack.

- Using the water pump, attach the water pump hose to the zerk connector
- Turn the pump on and inject the crack or joint
- Continue until water flushes crack clean

Once the drilled holes and the crack have been flushed, the packers can be removed so that migration of the injected grout can be monitored (optional).

STEP 7. INJECTION OF HYDRO ACTIVE® GROUTS

Depending on the nature of the crack, different polyurethane grouts can be injected. Please review the technical data in the DeNeef catalog for the proper selection of the grout to be used. **Always read and have on site the MSDS for the product and Washing Agent.** The following information will provide help in making the product selection.

HYDRO ACTIVE® Cut – Is used for non-moving (static) cracks and gushing water.

HYDRO ACTIVE® Flex LV and Flex SLV – Are used for moving (dynamic) cracks or construction joints above and below grade.

HYDRO ACTIVE® Sealfoam and Sealfoam NF – Are used for moving cracks in continuously moist/wet environments.

SUPERFLEX Methacrylic Acrylate Copolymer Grout – Is used for extremely tight hairline cracks and spider cracking in moving and non-moving structures.

Remember: always flush the grout injection pump with Washing Agent before starting the injection process.



- Mix the predetermined accelerator dosage with the HYDRO ACTIVE® Grout. Remember, no reaction will occur until grout with accelerator comes into contact with water.

- Begin the injection at the lowest packer installed on a vertical crack, or at the first packer flushed for a horizontal crack. During injection, you will notice that the HYDRO ACTIVE® Grout displaces water from the crack.
- Continue injecting until the grout appears at the adjacent packer hole.
- Stop pumping and reinstall the packer in the adjacent hole, tighten and begin injecting on it.
- Continue this process until 3–4 packers have been grouted.
- Disconnect and go back to the first packer and inject all the ports for the second time. Some of the ports may take additional grout and further densify the material in the crack. Continue this process until the length of the prepared crack is injected.

Note: Injection pressure will vary from 200 psi to 2500 psi depending on the width of the crack, thickness of concrete and condition of concrete.

STEP 8. RE-INJECT PACKERS WITH WATER

- Re-inject each packer with a small amount of water. This will ensure a full reaction of all resin in the drill holes.



STEP 9. SURFACE CLEANING AND REPAIR

- Use scraper to remove partially cured resin from the surface.
- Fully cured resin can be removed through mechanical methods including grinding.
- Let grout fully cure inside injected areas.
- Cut packers flush with surface or remove packers completely.
- Repair surface with appropriate material.

STEP 10. EQUIPMENT CLEANING

- Flush grout pump immediately with WASHING AGENT until resin in line is displaced by cleaner. Resin should be washed out into a waste bucket.
- Circulate WASHING AGENT through pump for 10-20 minutes by connecting intake and outlet in an open five gallon pail.

- Flush lines one last time with fresh WASHING AGENT to remove contaminants.
- Store pump and hoses with vegetable oil or other environmentally friendly lubricant to protect lines and fittings.

STEP 11. SAFETY

A safety meeting should be held with the entire injection crew. An overview of the procedure should be discussed and the data sheets and MSDS should be reviewed for all of the products that will be used during the injection process. Safety equipment should be reviewed and care should be taken to insure that all members of the crew are properly outfitted with the appropriate safety equipment. In addition to the Safety equipment required for the job site, each member of the injection crew should have, rubber boots, Tyvek suits, rubber gloves, safety goggles or full-face shields. Inspect the pumping equipment to insure proper operation and that the hoses that will be used for injection are not crimped, frayed or in general need of repair.

STEP 12. EQUIPMENT REQUIREMENTS

- HYDRO ACTIVE® Grout and accelerator
- Drill and bits appropriate for substrate
- Injection ports and packers
- Tools for installation
- Dedicated grout pump (395ST or higher)
- Dedicated water pump (395ST or higher)
- Clean 5 gallon buckets (5-6) labeled GROUT, WATER WASTE, WASHING AGENT
- PPE (see SAFETY)
- Accessories to include: Plastic sheeting, tape, oakum, rags, hand tools

NOTE:

Our recommendations for use of the product are based upon many years of actual field application and are believed to be reliable and should be used as a guide. This procedure may be modified to suit the actual jobsite conditions. However, since field conditions vary widely, the user must determine the suitability of the product for the particular use and specific method(s) of application.

All information and statements in this document are believed to be accurate at the time of publication, but DeNeef Construction Chemicals Inc. and its affiliates make no representation or warranty with respect thereto, including, but not limited to, any results obtained or the infringement of any proprietary right. All information and statements are intended for persons having the required skill and know-how and do not relieve the user from verifying the suitability of the information and statements given for a specific purpose prior to use. Use or application of such information or statements is at user's sole discretion and risk, without any liability on the part of DeNeef Construction Chemicals Inc. or its affiliates. Nothing herein shall be construed as a license of or recommendation for use of any proprietary rights.