



KWIK Bolt 3 Expansion Anchor 3.3.6


3.3.6.5 Installation Instructions

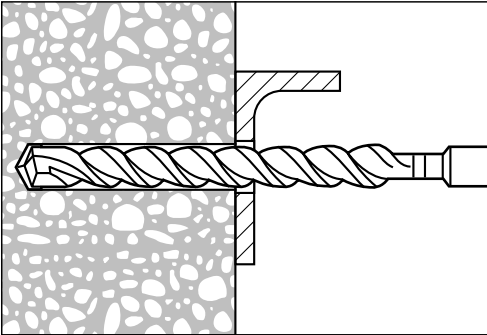


1. Hammer drill a hole to the same nominal diameter as the KWIK Bolt 3. The hole depth must exceed the anchor embedment by at least one diameter. The fixture may be used as a drilling template to ensure proper anchor location.

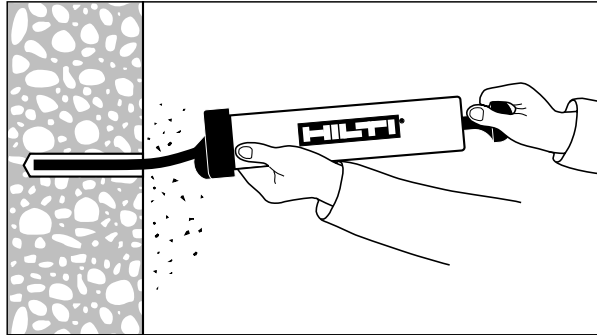

2. Clean hole.

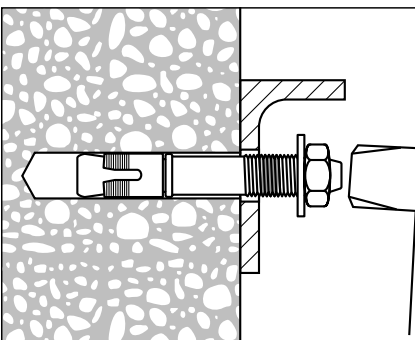


3. Drive the KWIK Bolt 3 into the hole using a hammer. The anchor must be driven until at least 6 threads are below the surface of the fixture.

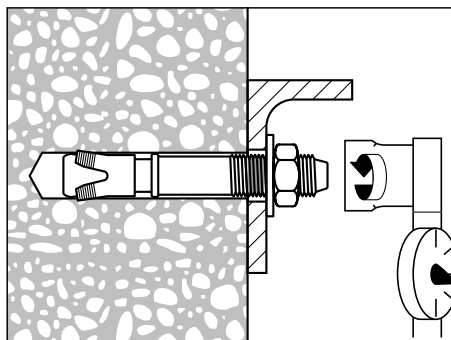


4. Tighten the nut to the installation torque.

3.3.6 KWIK Bolt 3 Expansion Anchor


Countersunk KWIK Bolt 3 Anchor Installation Instructions

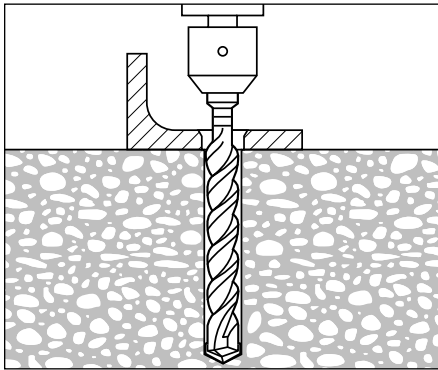


1. Drill.

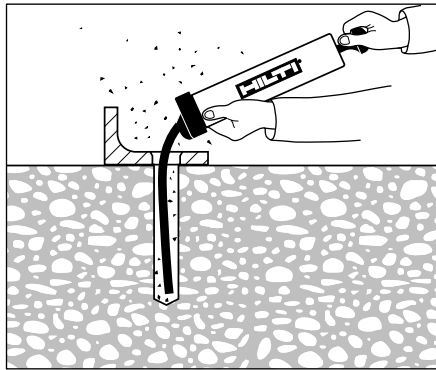


2. Clean.

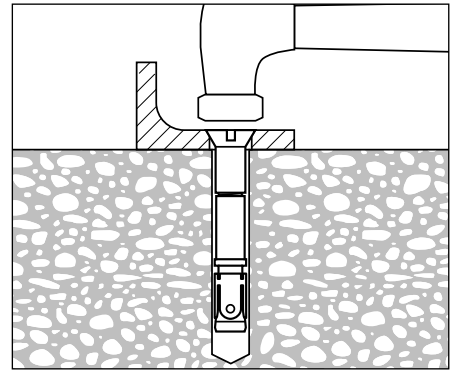


3. Thread post nut completely onto anchor. Tap into hole.

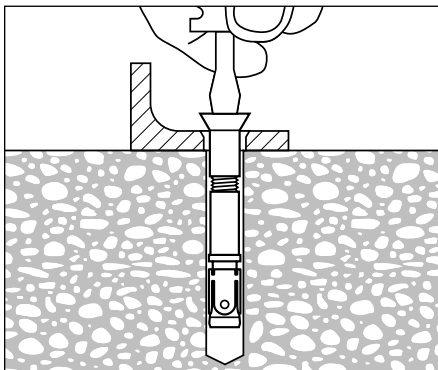

4. Loosen screw two full turns.

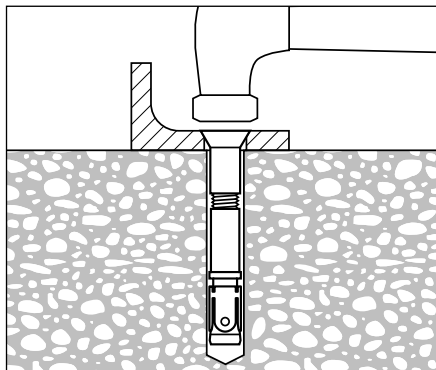


5. Tap-in again.

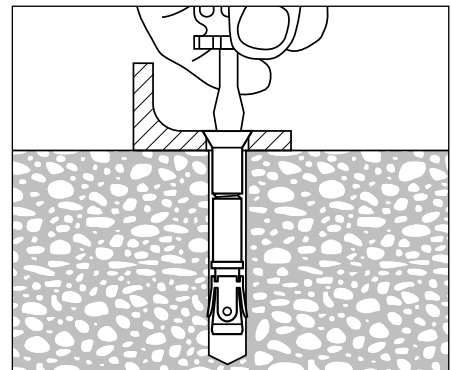


6. Tighten.


Rod Coupling KWIK Bolt 3 Anchor Installation Instructions

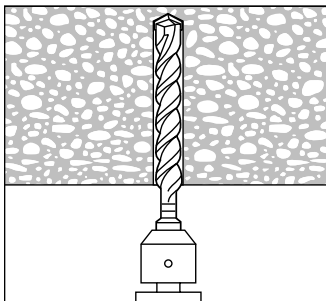


1. Drill.

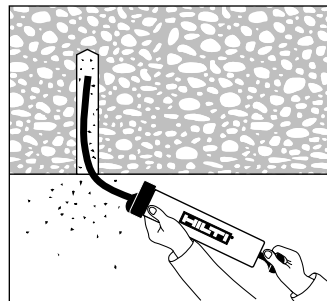

2. Clean.

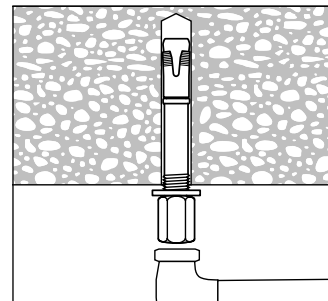


3. Tap-in.

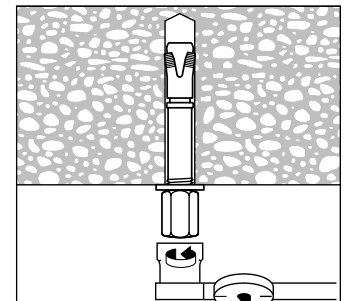


4. Tighten.


Hilti Ceiling KWIK Bolt (HHDCA) Anchor Installation Instructions

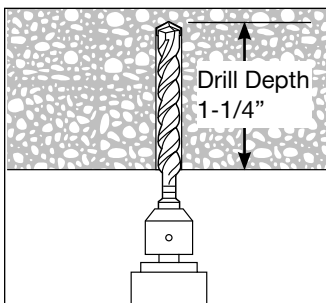

1. Drill hole using 1/4" bit.

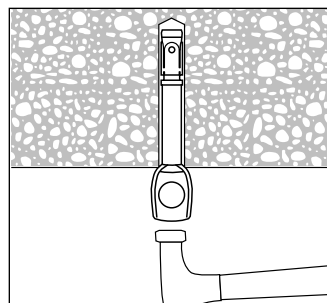

2. Tap in.

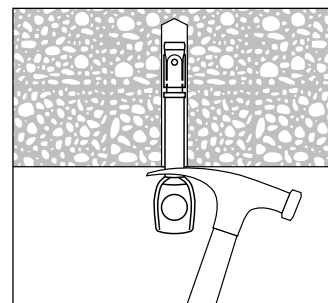

3. Pry downward.