



SPALLS AT PREMOLDED EXTERIOR JOINTS

1. Cut out spall to minimum depth of 3/4", 1" if possible.

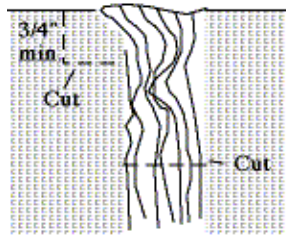

2. Remove premolded filler and concrete laitance to approx. 1 to 1 1/2" depth.

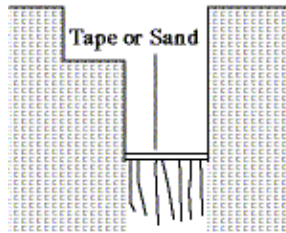

Form a barrier by applying tape or sand to separate filler from MM-80

3. Mix MM-80 then add 2 1/2" parts silica sand. Install flush.

