

ADEKA ULTRASEAL® A-30 will provide a cost effective watertight interlock.

Measure gap between interlocks (Figure 1).

Level sheet pile open interlock facing up. Plug or tape ends.

Pour A-30 into the level interlock to a depth slightly more than 1/2 of the measured gap.

For example—if gap is 1/8", apply approximately 1/16"+.

Keep piles level until A-30 is cured to a firm rubber.

Protect from moisture prior to driving.


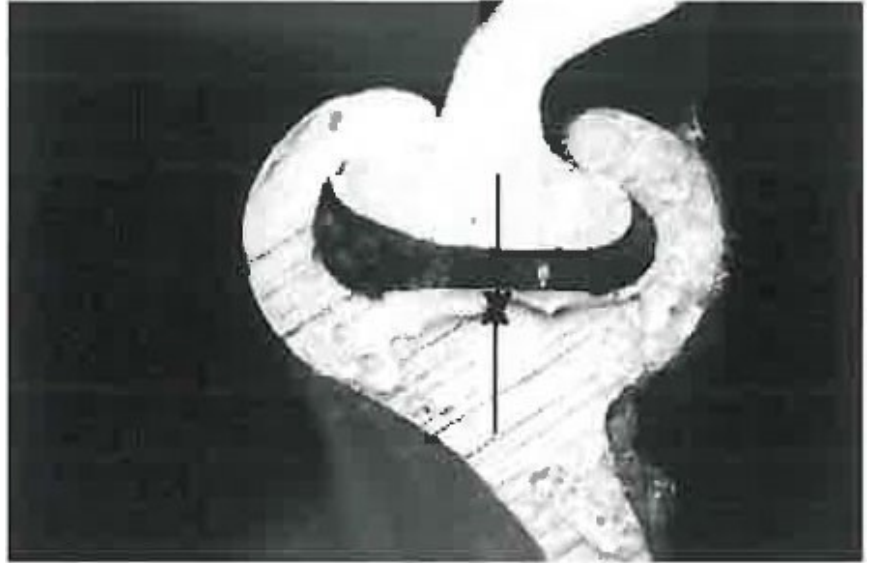


FIGURE 1

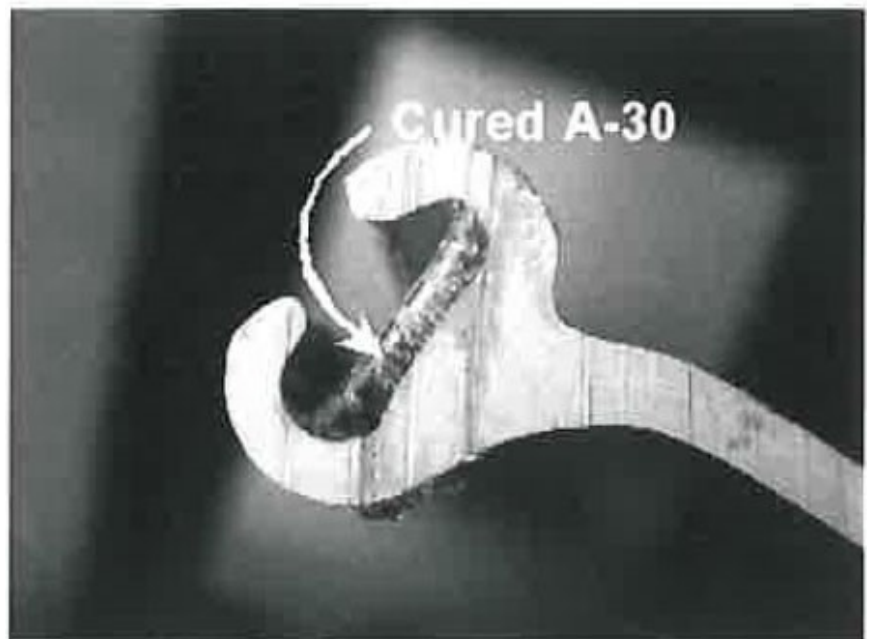

OCM, Inc.

1120 Peterson Road, Grayslake, IL 60030

Toll Free: 866-457-5710 • Phone: 847-462-4258 • FAX: 847-462-4259

www.adeka.com • www.ocm-inc.com • sales@ocm-inc.com