
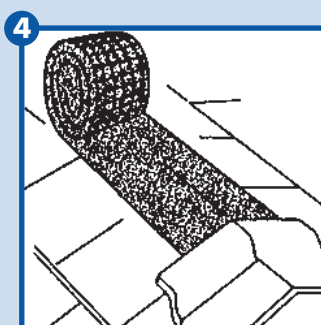
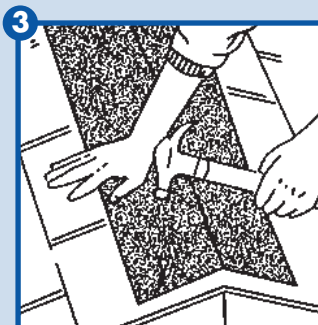


AirFlo Ridge Vent Installation Instructions

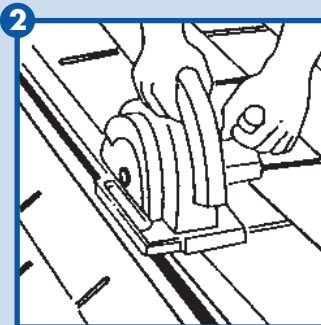

- 1 Remove ridge cap shingles along entire length of roof.
- 2
 - a. Measure 1" from ridge peak on each side of ridge. For ridge board construction measure 1 $\frac{3}{4}$ " on each side of ridge.
 - b. Snap chalk line along entire length of ridge.
 - c. Cut opening in sheathing along ridge. DO NOT CUT through roof trusses or ridge board.
 - d. Remove sheathing to create slot.
 - e. Leave a minimum of 12" of sheathing closed at each end of ridge.
- 3 Tack one end of AirFlo® ridge vent, with netting side down, over the slot to hold in place at one end of the ridge. Unroll entire length of vent, pull to remove sags and tack in place so vent is snug and centered over slot. If more than one piece of AirFlo® is needed, simply butt the multiple pieces together and tack in place with a nail.
- 4 Install ridge cap shingles directly over AirFlo®. Use galvanized roofing nails included in package to secure in place. To obtain a uniform look and prevent shingle damage, do NOT drive nails through shingle.

NAILS INCLUDED

- 1 Quitar las planchillas del caballete de techo a lo largo de todo el caballete.
- 2
 - a. Medir 1" desde la punta de cada lado del caballete. Para la construcción de un caballete de tablero, medir 1 $\frac{3}{4}$ " en cada lado del caballete.
 - b. Con la ayuda de una tiza, trace una línea a lo largo del caballete.
 - c. Cortar la apertura de la funda a lo largo del caballete. NO CORTE las ataduras del techo ni el borde del caballete.
 - d. Quitar la funda para crear una ranura.
 - e. Dejar un mínimo de 12" de funda cerrada en cada tramo del caballete.
- 3 Clavar con tachuelas un extremo del AirFlo® ventilador para caballete (la malla para abajo) en la ranura para sostenerlo en su lugar en uno de los extremos del caballete. Desenrollar el ventilador completamente, ir tirando para eliminar las holguras y Clavar en su var en su lugar para ajustarlo centrarlo con la ranura. Si se necesita más de un rollo del AirFlo® ventilador para caballete, simplemente, junte múltiples pedazos y clávelos en su lugar con tachuelas.
- 4 Instalar las planchillas directamente sobre el AirFlo® ventilador para caballete de techo. Sujetar las planchillas y el ventilador para caballete al techo usando clavos incluidos con el ventilador de caballete. Para obtener una terminación uniforme y prevenir que las planchillas se dañen, NO aplaste los clavos hasta las planchillas.

TACHUELAS INCLUIDO.

AirFlo
Ridge Vent

For Performance and Value