

# Armor-Tile


## Tactile Systems

# Installation Instructions

## Cast-In-Place Inline Dome Tile

View installation slide show, drawings and specifications on our website - [www.armor-tile.com](http://www.armor-tile.com)

Call 1-800-682-2525 if you have any questions

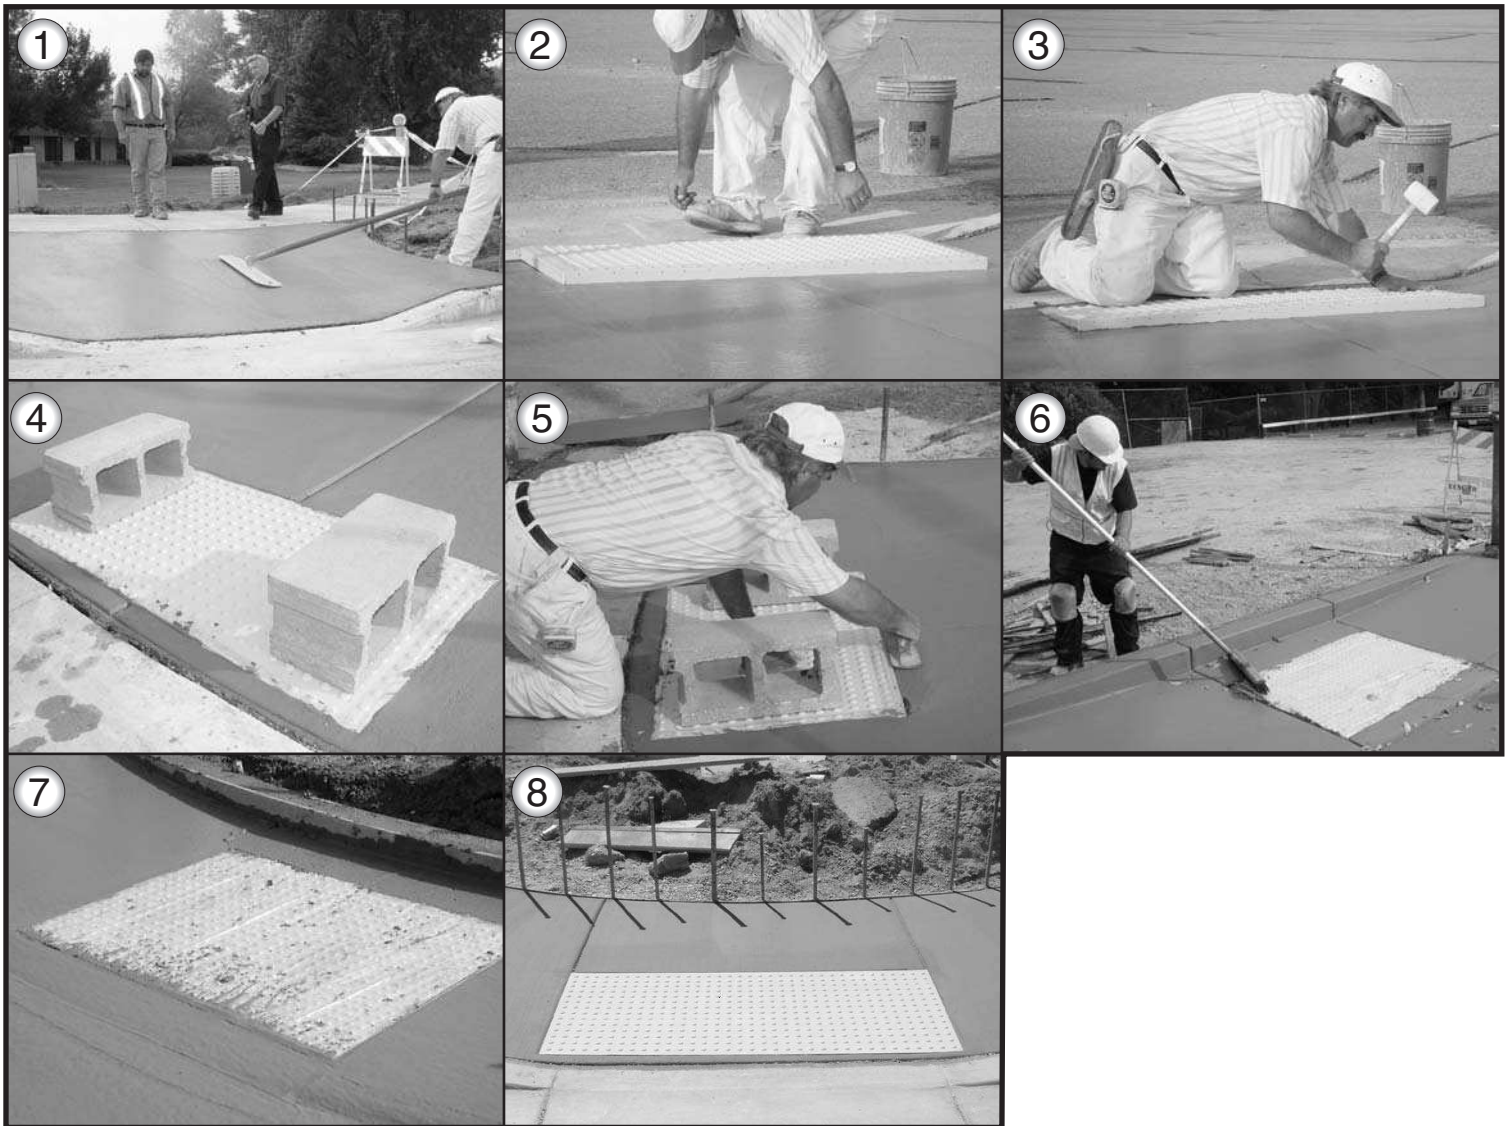

1. Maintaining a 4-7 slump range, pour and float the concrete.
2. Without removing any concrete, place the tile on the curb ramp 6"-8" from the curb line (face of curb).
3. Tamp the tile in grid pattern across the top face, embedding the tile into the concrete using a white or (non-marring) rubber mallet or vibrate into place using a vibrating mechanism fixed with a soft base such as wood, at least 1 foot square.
4. Place two cinder blocks or 25lb weights on the tile to prevent floating.
5. Create an edge around the perimeter of the tile using a 3/8" radius edging tool then float the concrete around the tile's perimeter using a steel trowel.
6. Apply a broom-finish to the curb ramp.
7. After the concrete has substantially cured, remove the protective plastic wrap by cutting the plastic with a sharp knife tight to the concrete/tile interface.
8. If concrete bled under the plastic, a soft wire brush will clean the residue without damage to the tile surface.



ENGINEERED PLASTICS INC.

300 International Dr., Suite 100, Williamsville, NY 14221 Tel: 1-800-682-2525 Fax: 1-800-769-4463

[www.armor-tile.com](http://www.armor-tile.com)

r1015