
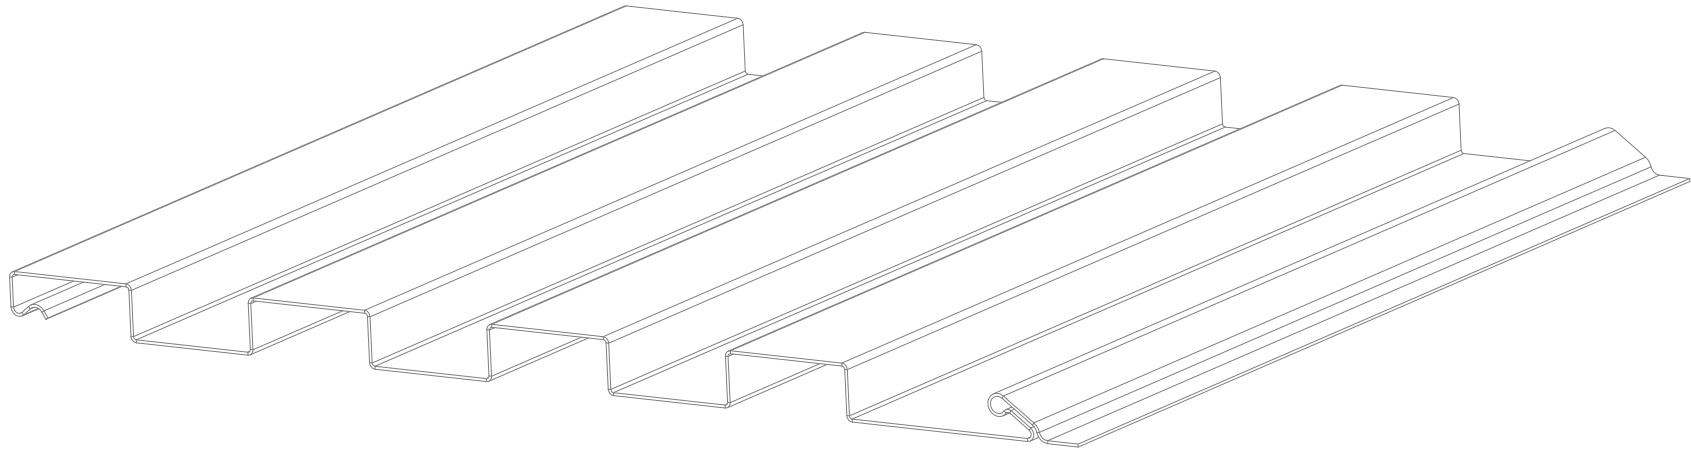



Note: * denotes color side.

						Metafor Panel Profile Detail	
						DWG. NO.	DATE
						KRK	8/11/2014
						APP	DATE
						MATERIAL	
REV. NO.	DATE	DESCRIPTION OF REVISION		BY	APP	SH. SIZE	SCALE
						B	X:X

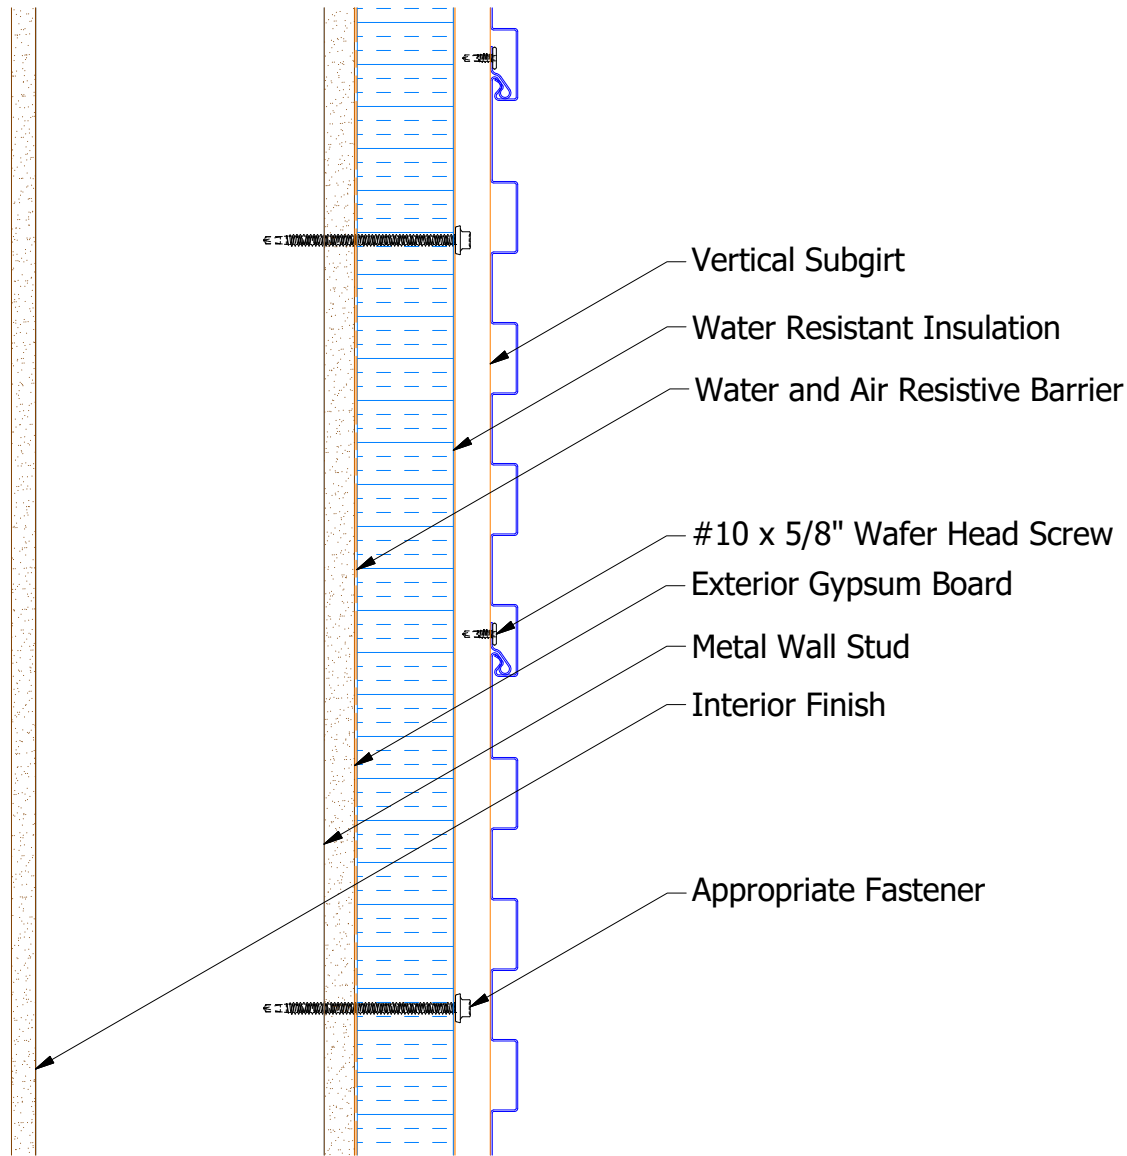


Horizontal Application

Note: * denotes color side.

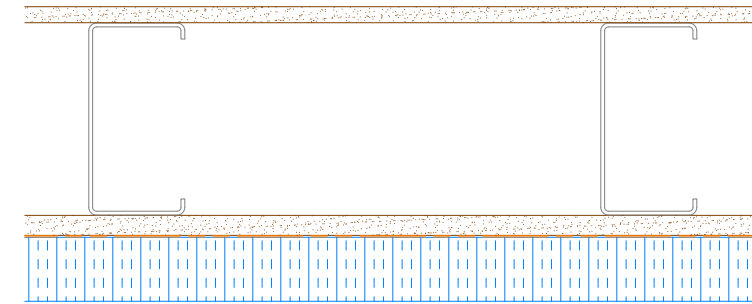


Step 1

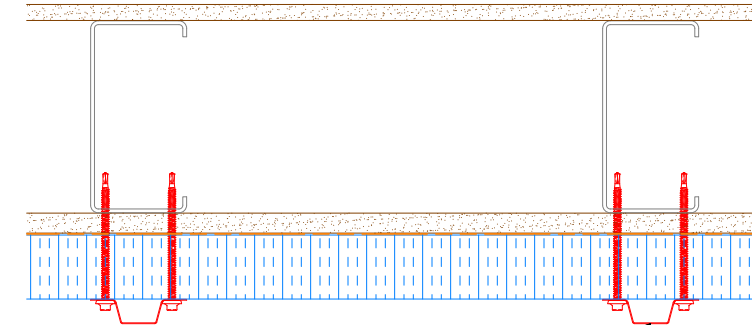


Attach Subgirts into Metal Wall Studs using Appropriate Fasteners

Step 2

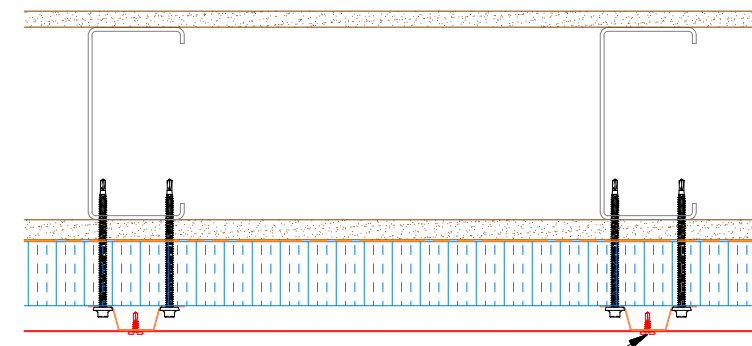


Attach Panel System to Subgirts using #10 x 5/8" Wafer Head Fasteners.

Step 3

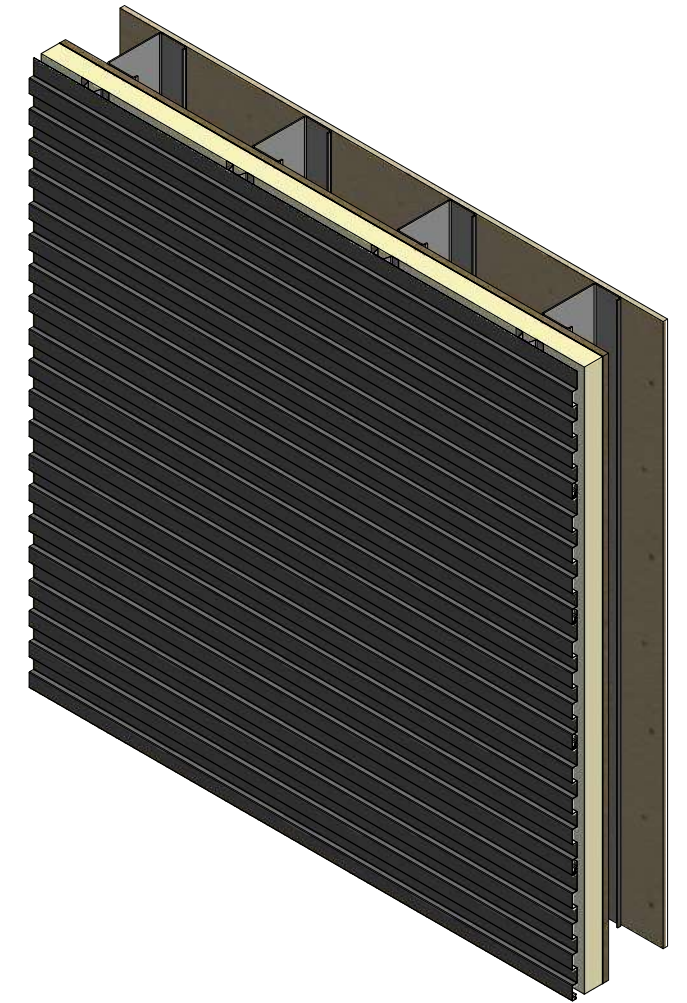




2 Stage Method of Weather Proofing

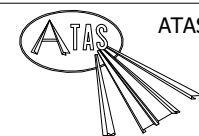

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210


TITLE			Metafor Fastening Detail		
DWG. NO.		DR	KRK	DATE	8/13/2014
MATERIAL		APP		DATE	
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP	SH. SIZE B SCALE X:X

Vertical Panel

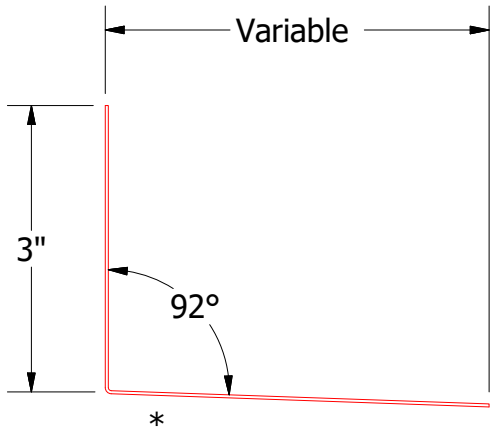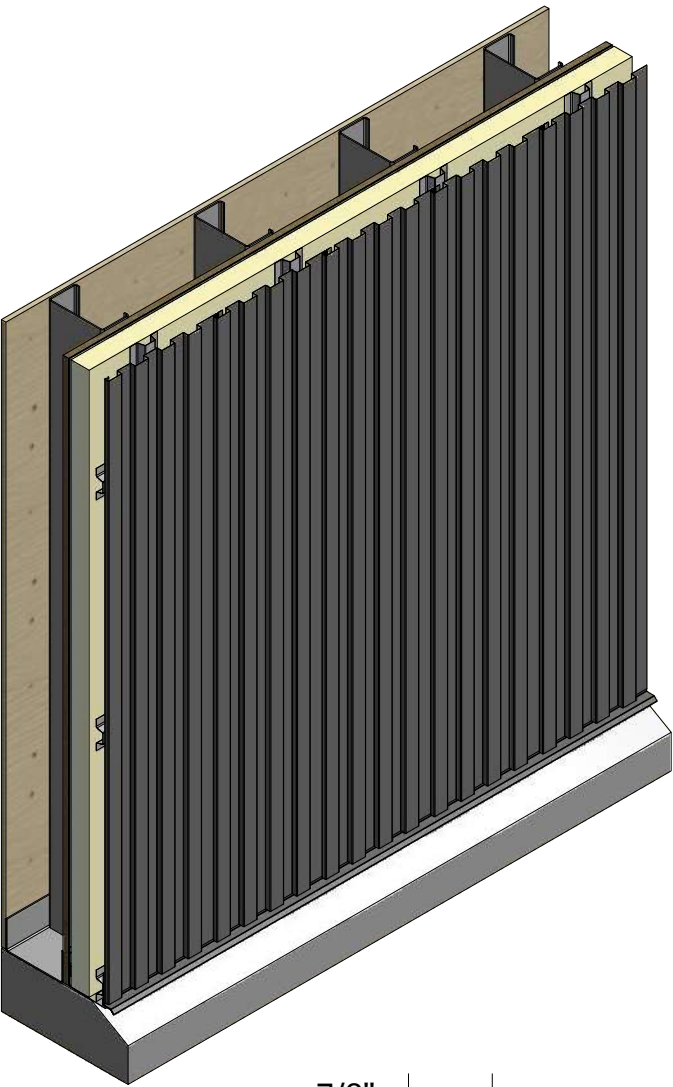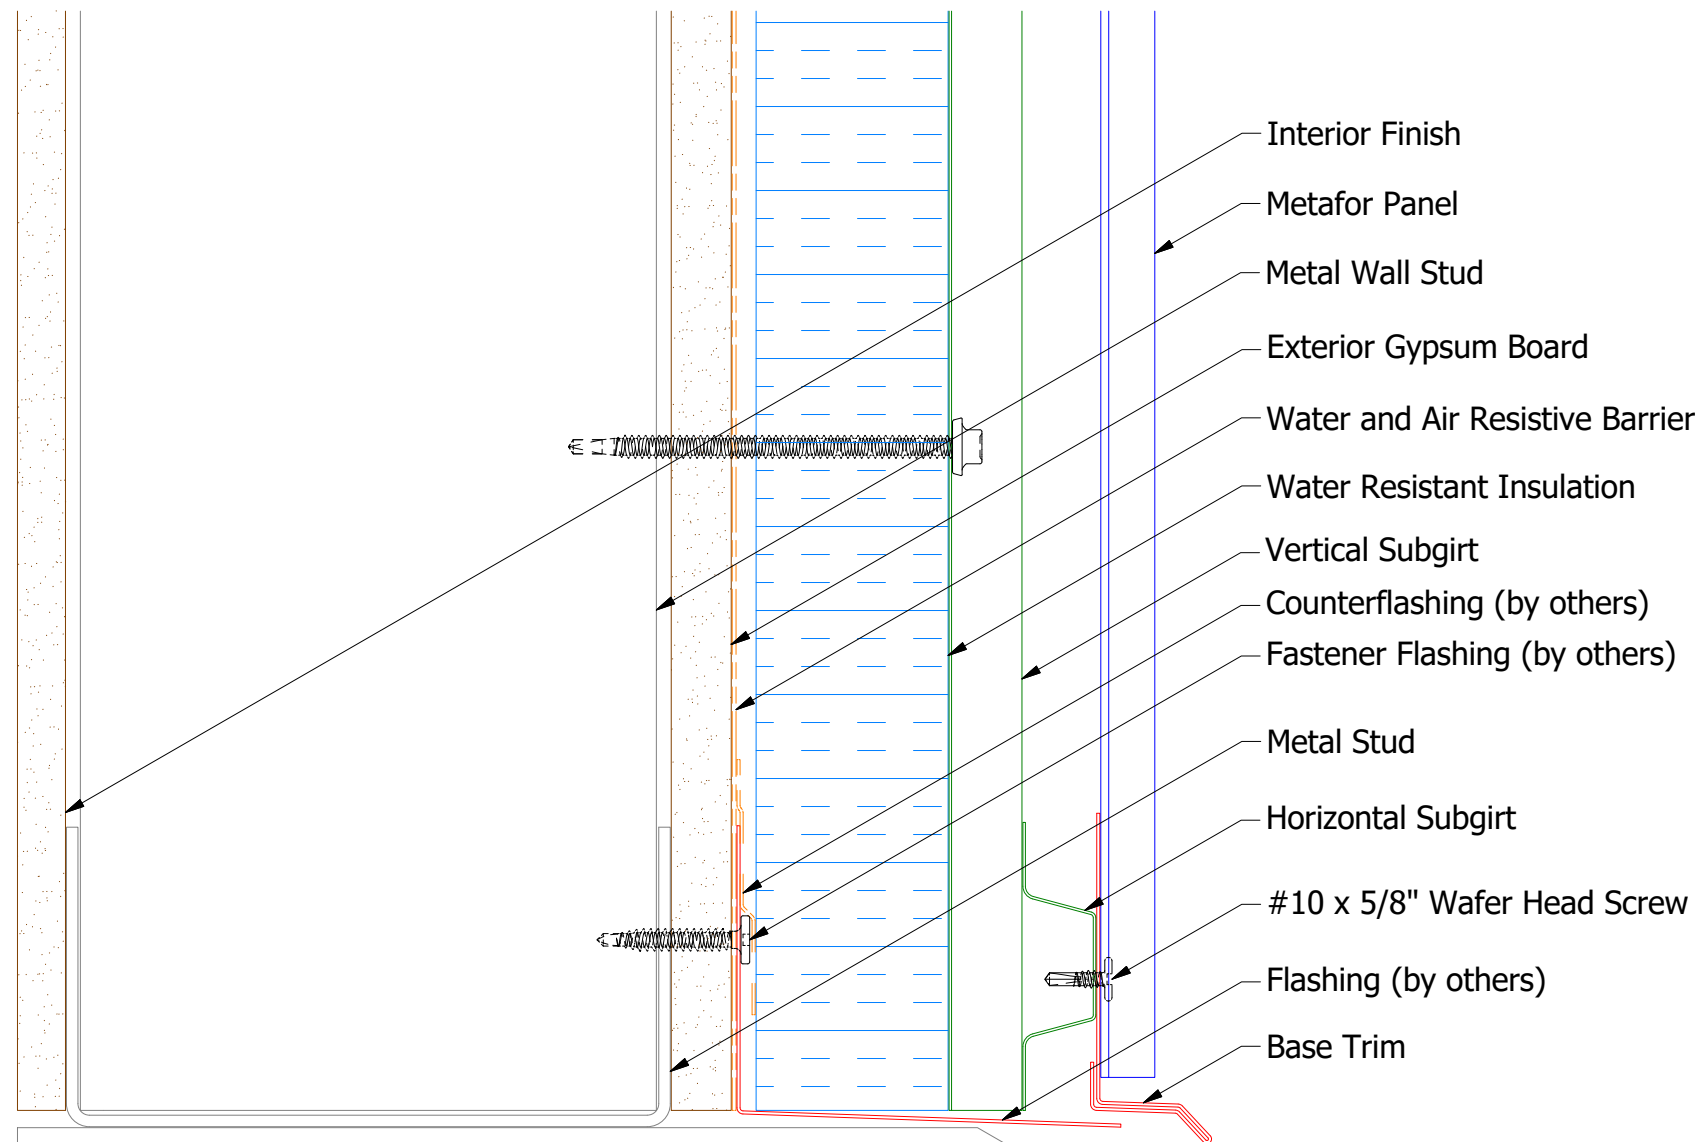

Flashing


(Field Fabricated from Color Matched Flat Stock)

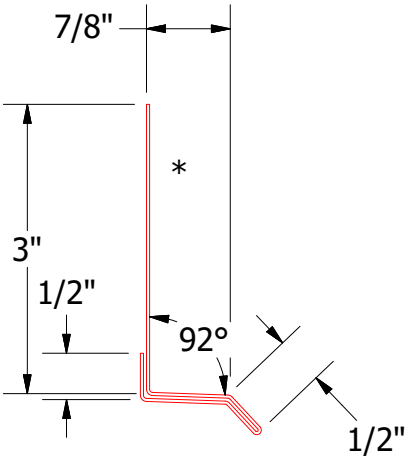

MFA661 - Base Trim


Note: * denotes color side.

REV. NO.		DATE		DESCRIPTION OF REVISION		BY	APP	TITLE	
								Metafor Base Detail	
								DWG. NO.	DR
									KRK
								APP	DATE
								MATERIAL	DATE
								SH. SIZE	SCALE
								B	X:X

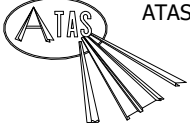


ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210



Vertical Panel

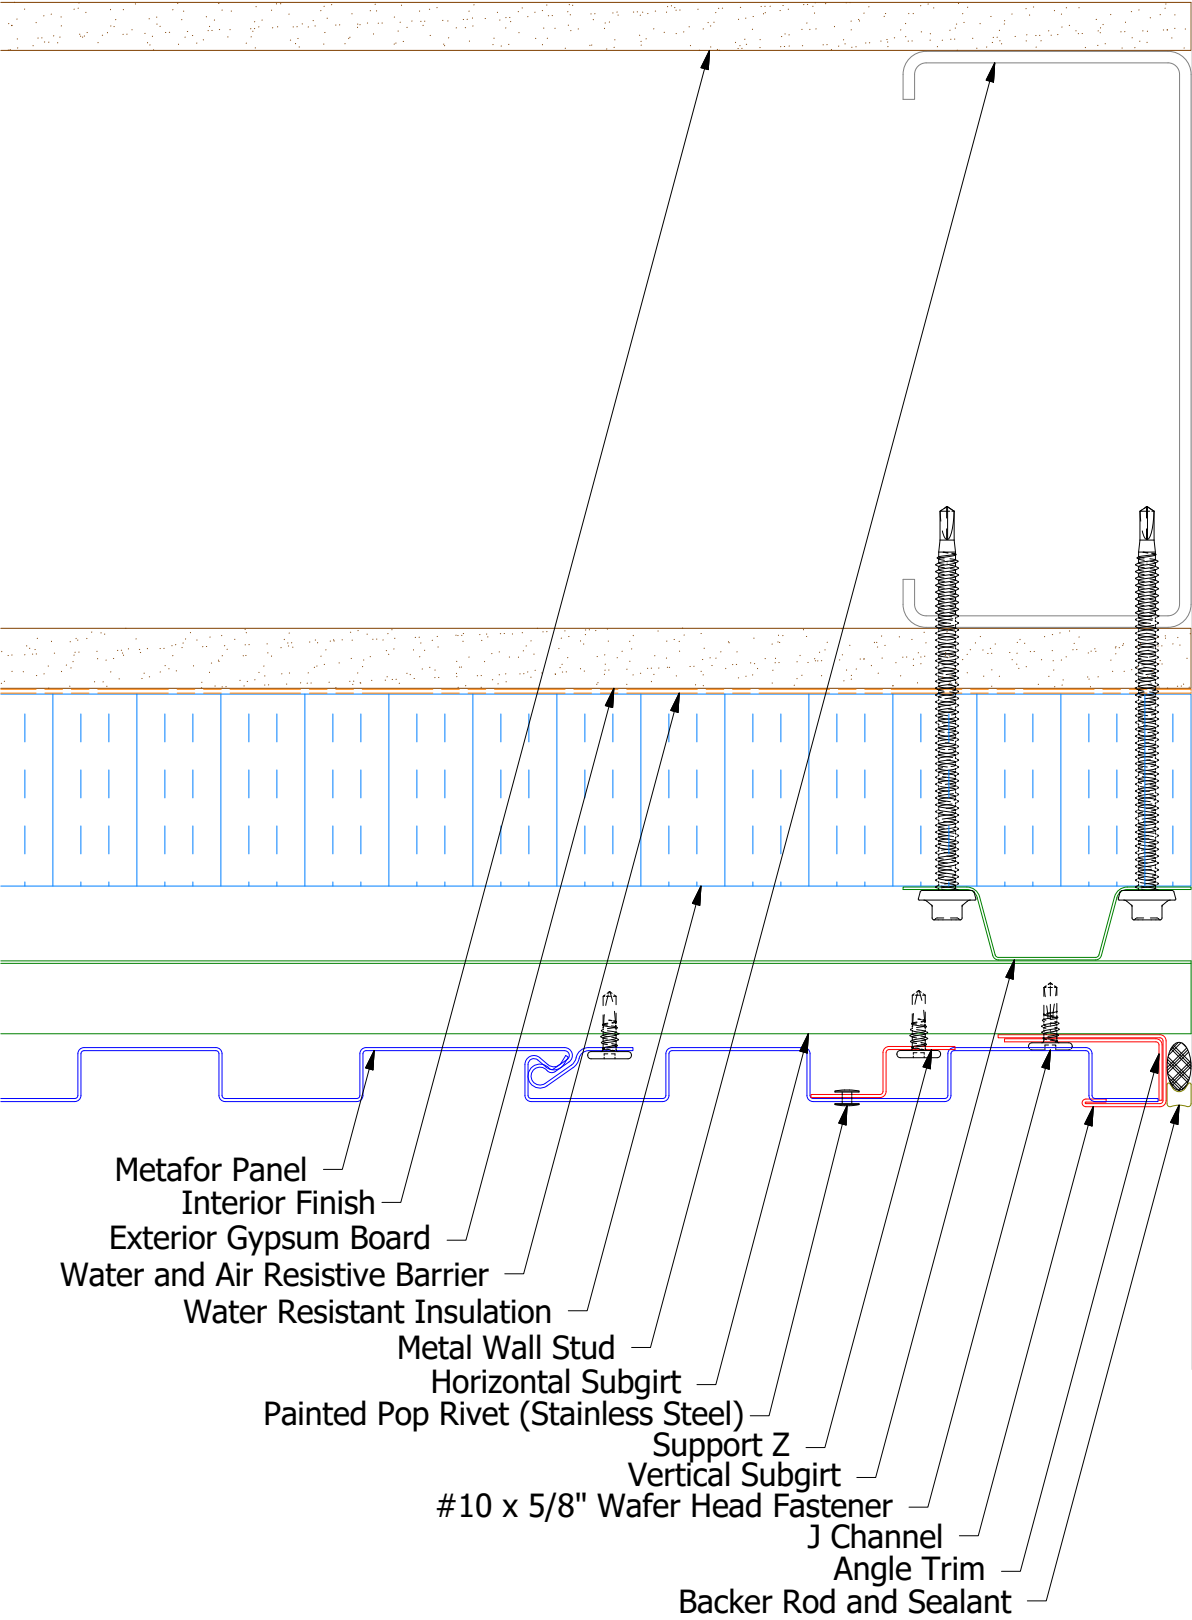


- Metafor Panel
- Interior Finish
- Exterior Gypsum Board
- Water and Air Resistive Barrier
- Water Resistant Insulation
- Metal Wall Stud
- Horizontal Subgirt
- Painted Pop Rivet (Stainless Steel)
- Support Z
- Vertical Subgirt
- #10 x 5/8" Wafer Head Fastener
- J Channel
- Angle Trim
- Backer Rod and Sealant

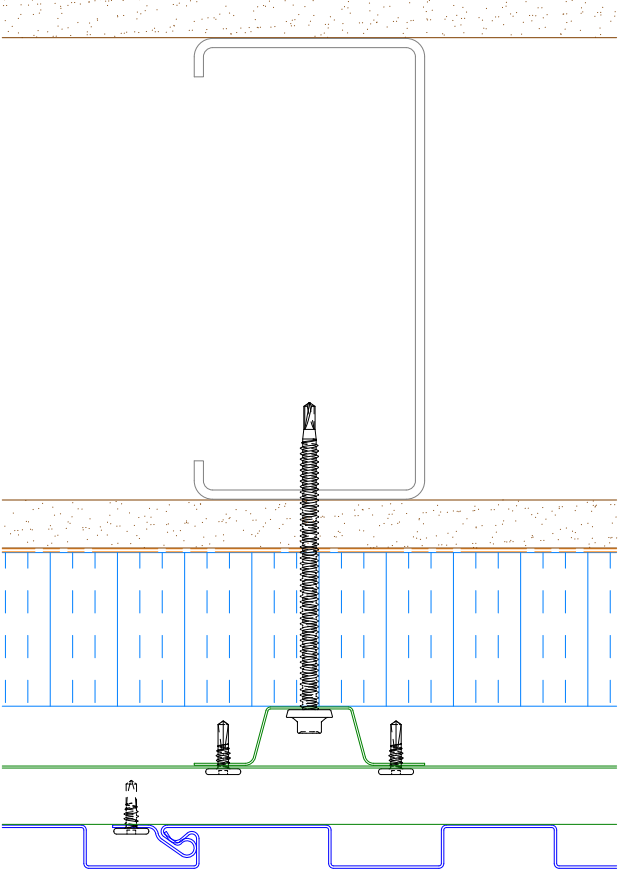


Alternate Subgirt Orientation

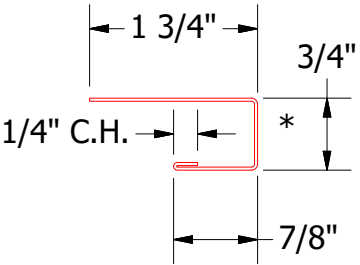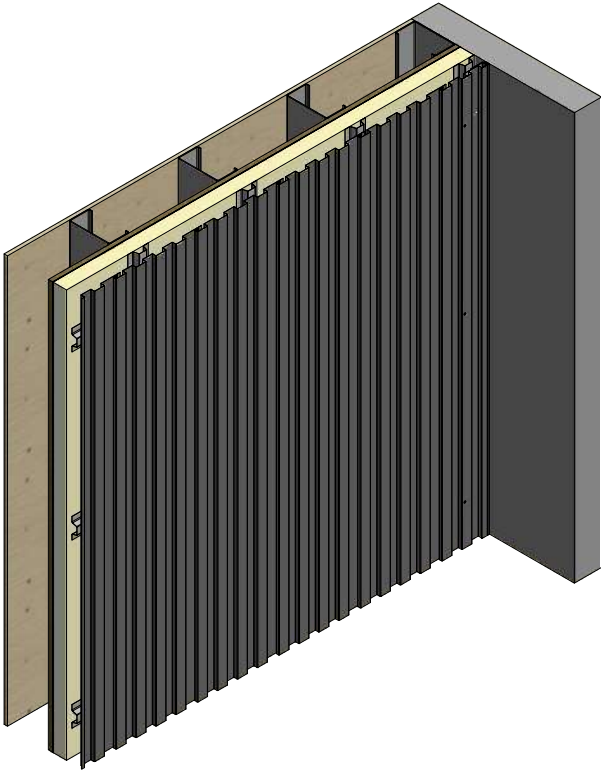

MFA034 - J Channel

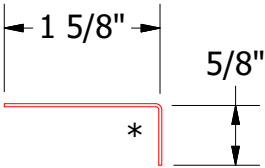

MFA680 - Angle Trim

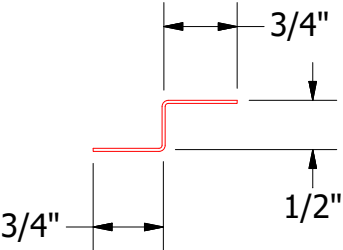

MFA681 - Support Z



2 Stage Method of Weather Proofing

TITLE		Metafor Endwall Detail	
DWG. NO.	DR	KRK	DATE
	APP		DATE
MATERIAL	SH. SIZE	B	SCALE
			X:X



Note: * denotes color side.

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP


Vertical Panel

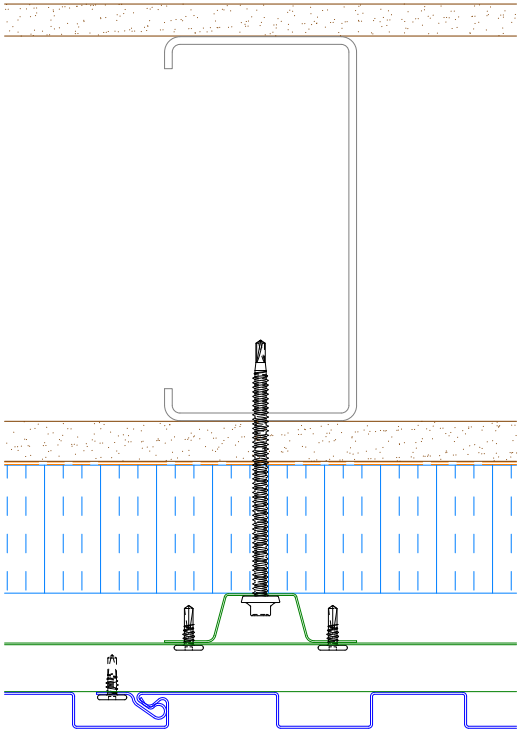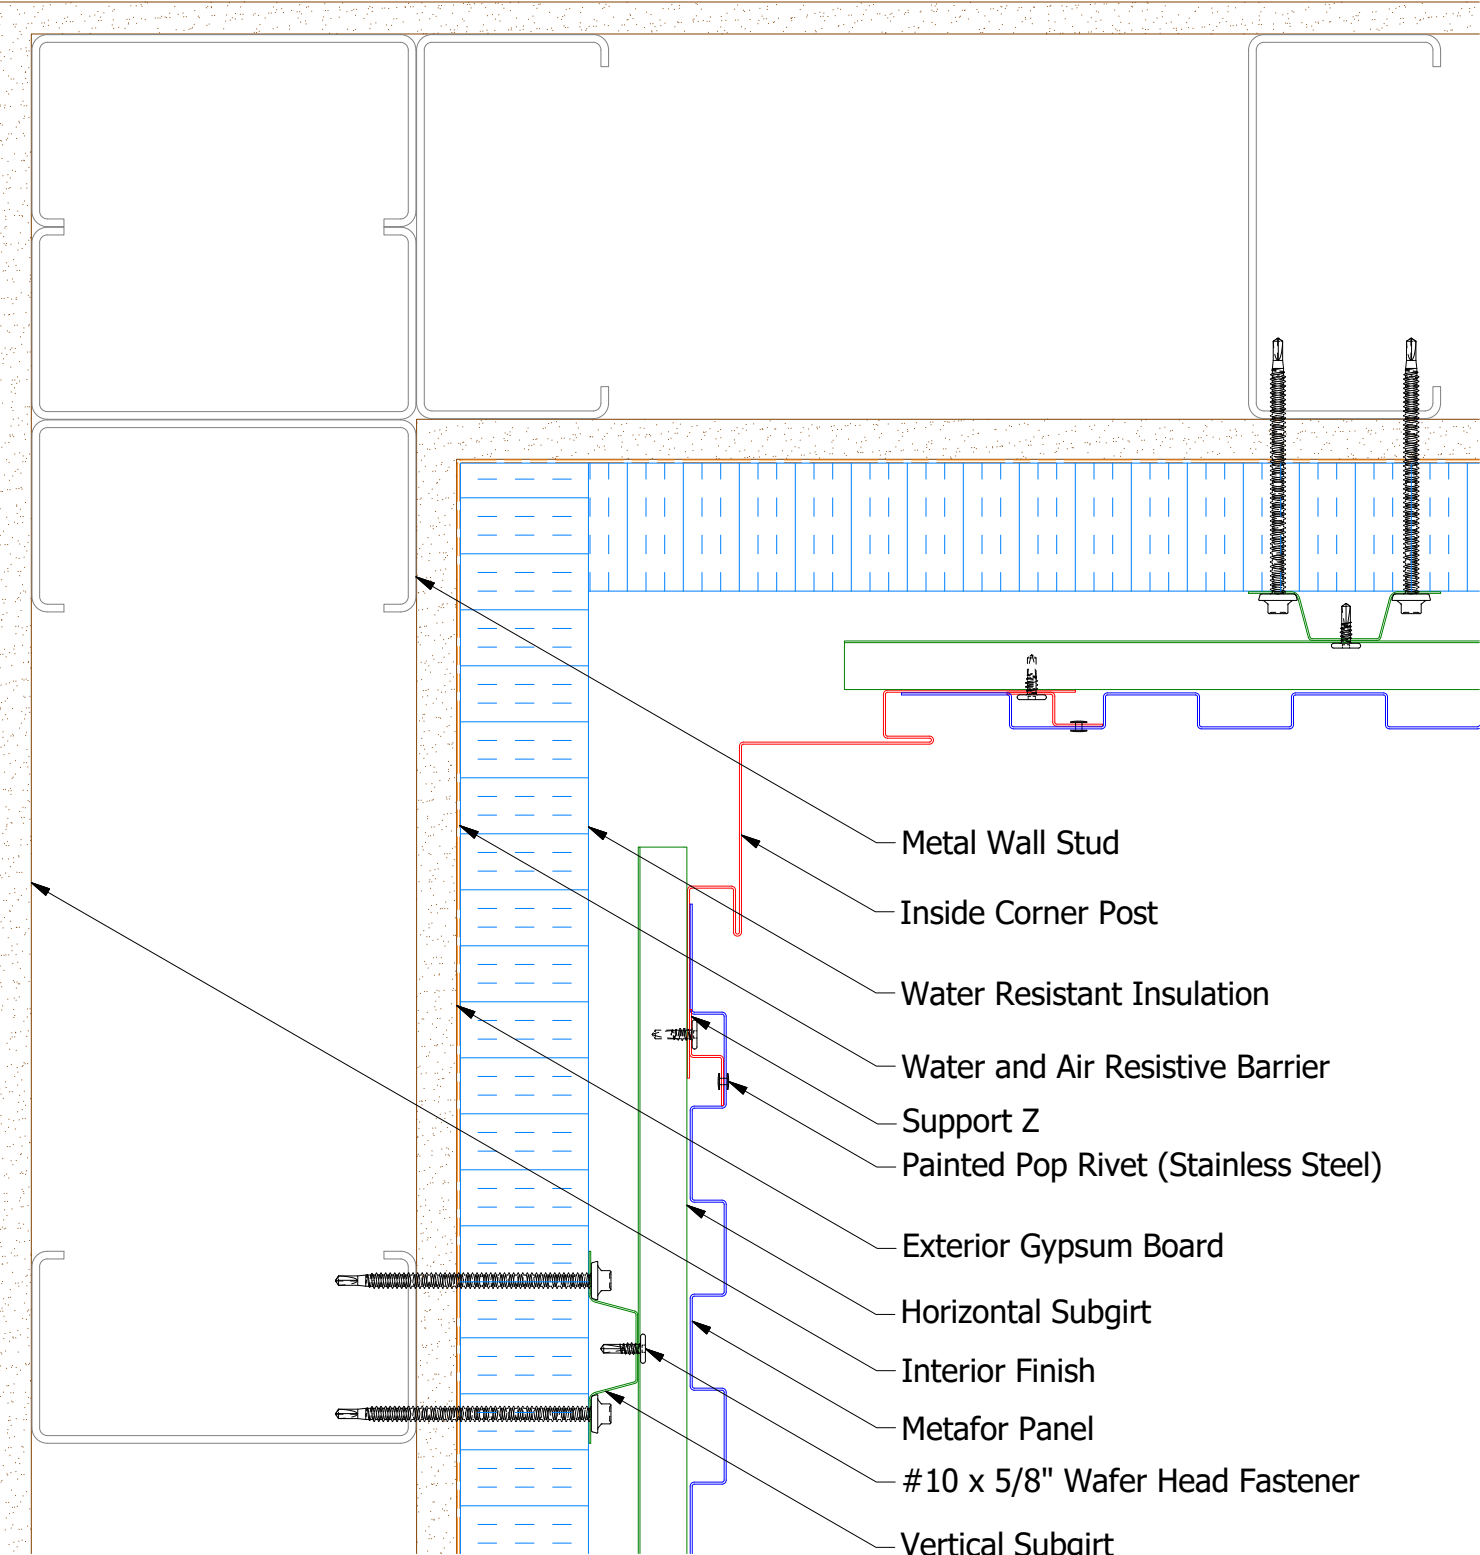

Alternate Subgirt Orientation

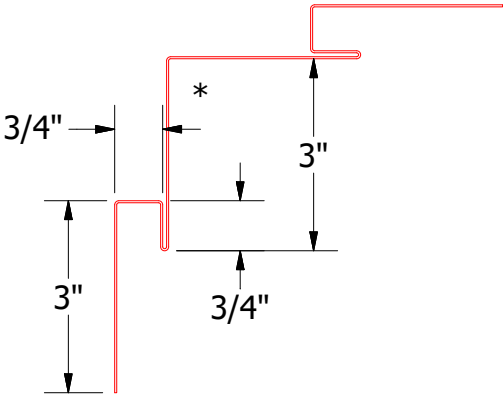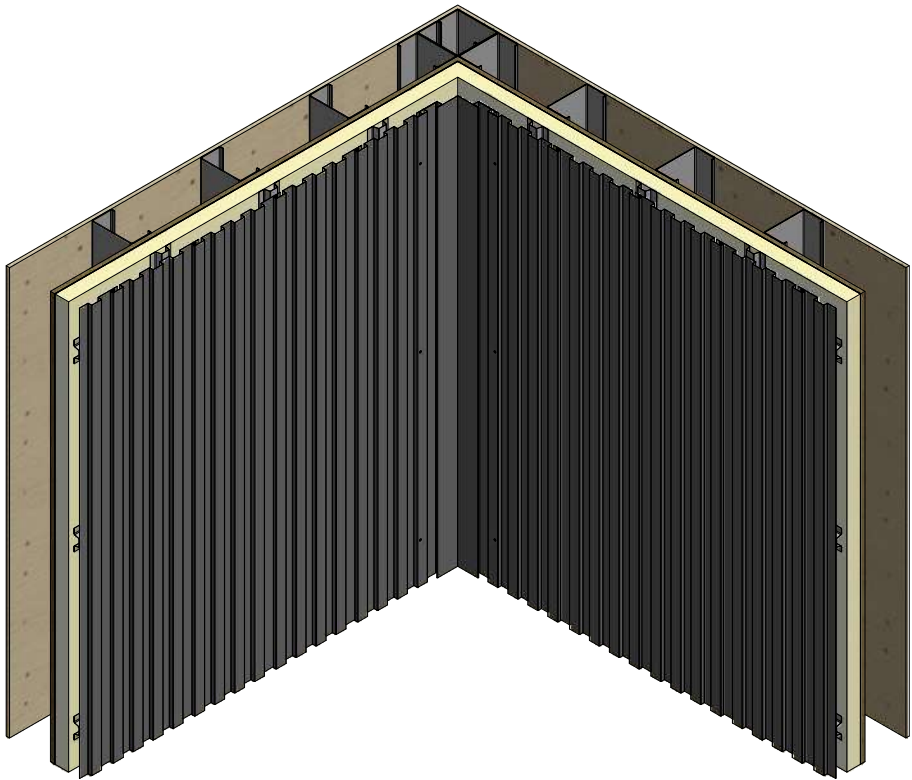

MFA601-Inside Corner Post

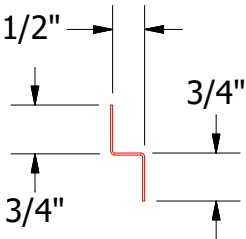


MFA681-Support Z

2 Stage Method of Weather Proofing



TITLE		Metafor Inside Corner Detail	
DWG. NO.	DR	KRK	DATE 8/12/2014
MATERIAL	APP		DATE
SH. SIZE	B	SCALE	X:X

Note: * denotes color side.


Vertical Panel

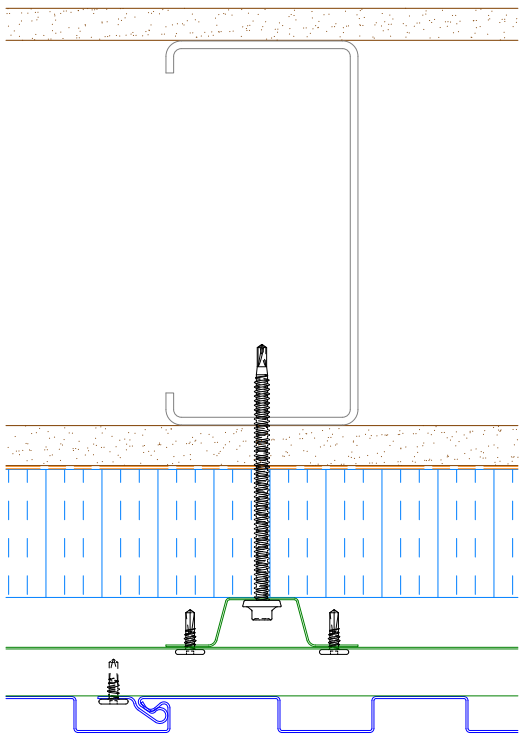


Alternate Subgirt Orientation

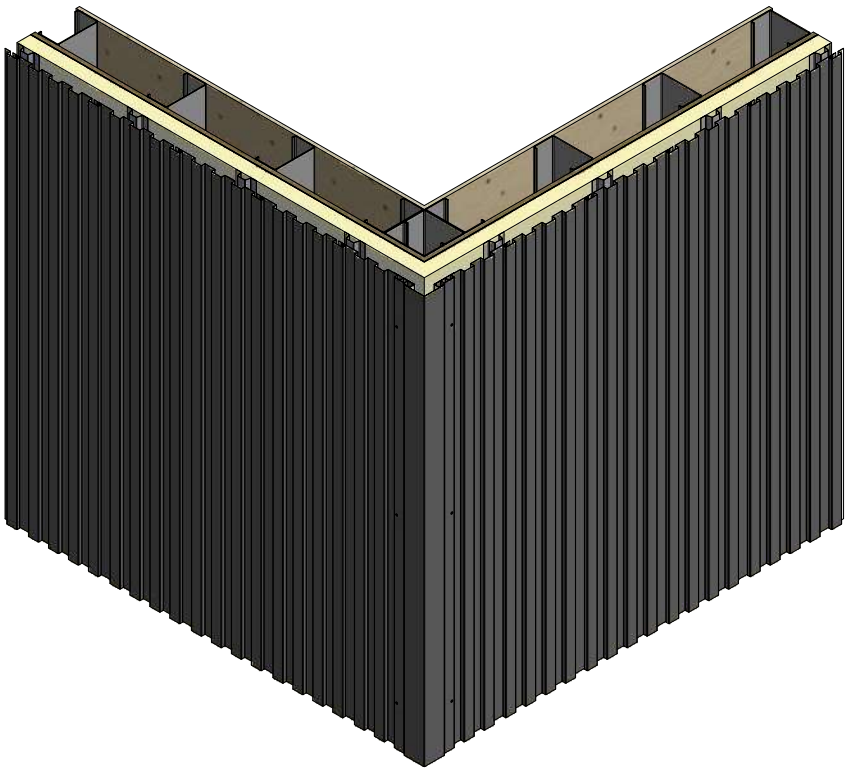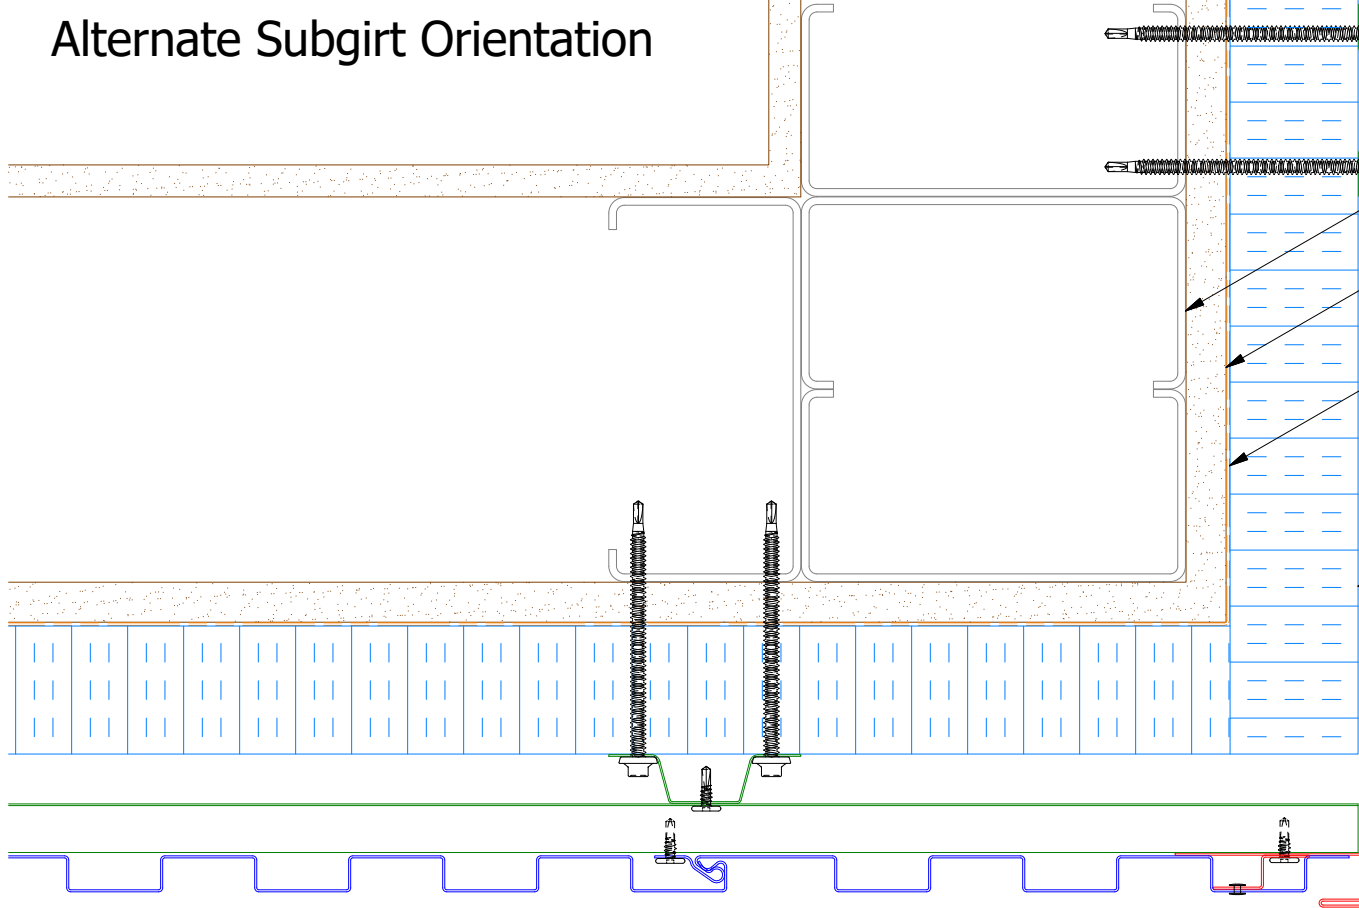

- Interior Finish
- Metafor Panel
- Vertical Subgirt
- #10 x 5/8" Wafer Head Fastener
- Metal Wall Stud
- Exterior Gypsum Board
- Water and Air Resistive Barrier
- Horizontal Subgirt
- Water Resistant Insulation
- Painted Pop Rivet (Stainless Steel)
- Support Z
- Outside Corner Post

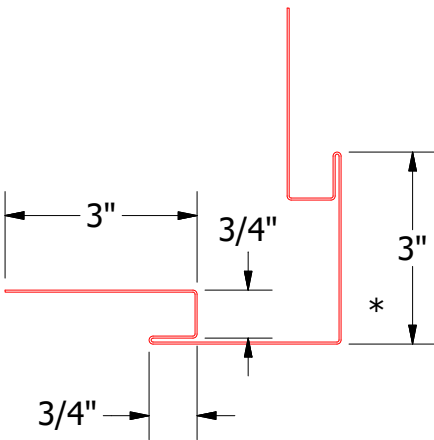

MFA602-Outside Corner Post

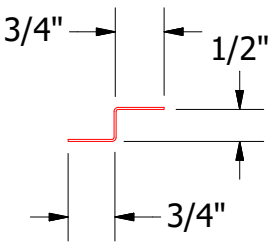

MFA681-Support Z




2 Stage Method of Weather Proofing

TITLE		Metafor Outside Corner Detail	
DWG. NO.	DR	KRK	DATE 8/12/2014
MATERIAL	APP		DATE
SH. SIZE	B	SCALE	X:X

Note: * denotes color side.

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

Vertical Panel

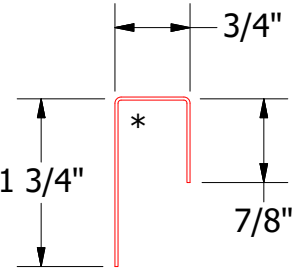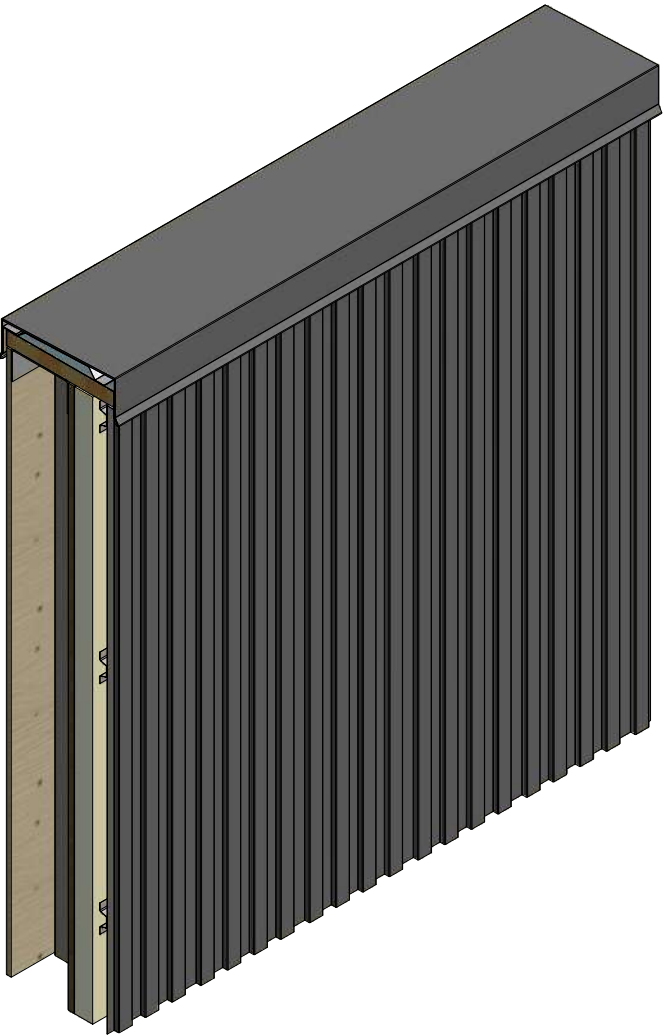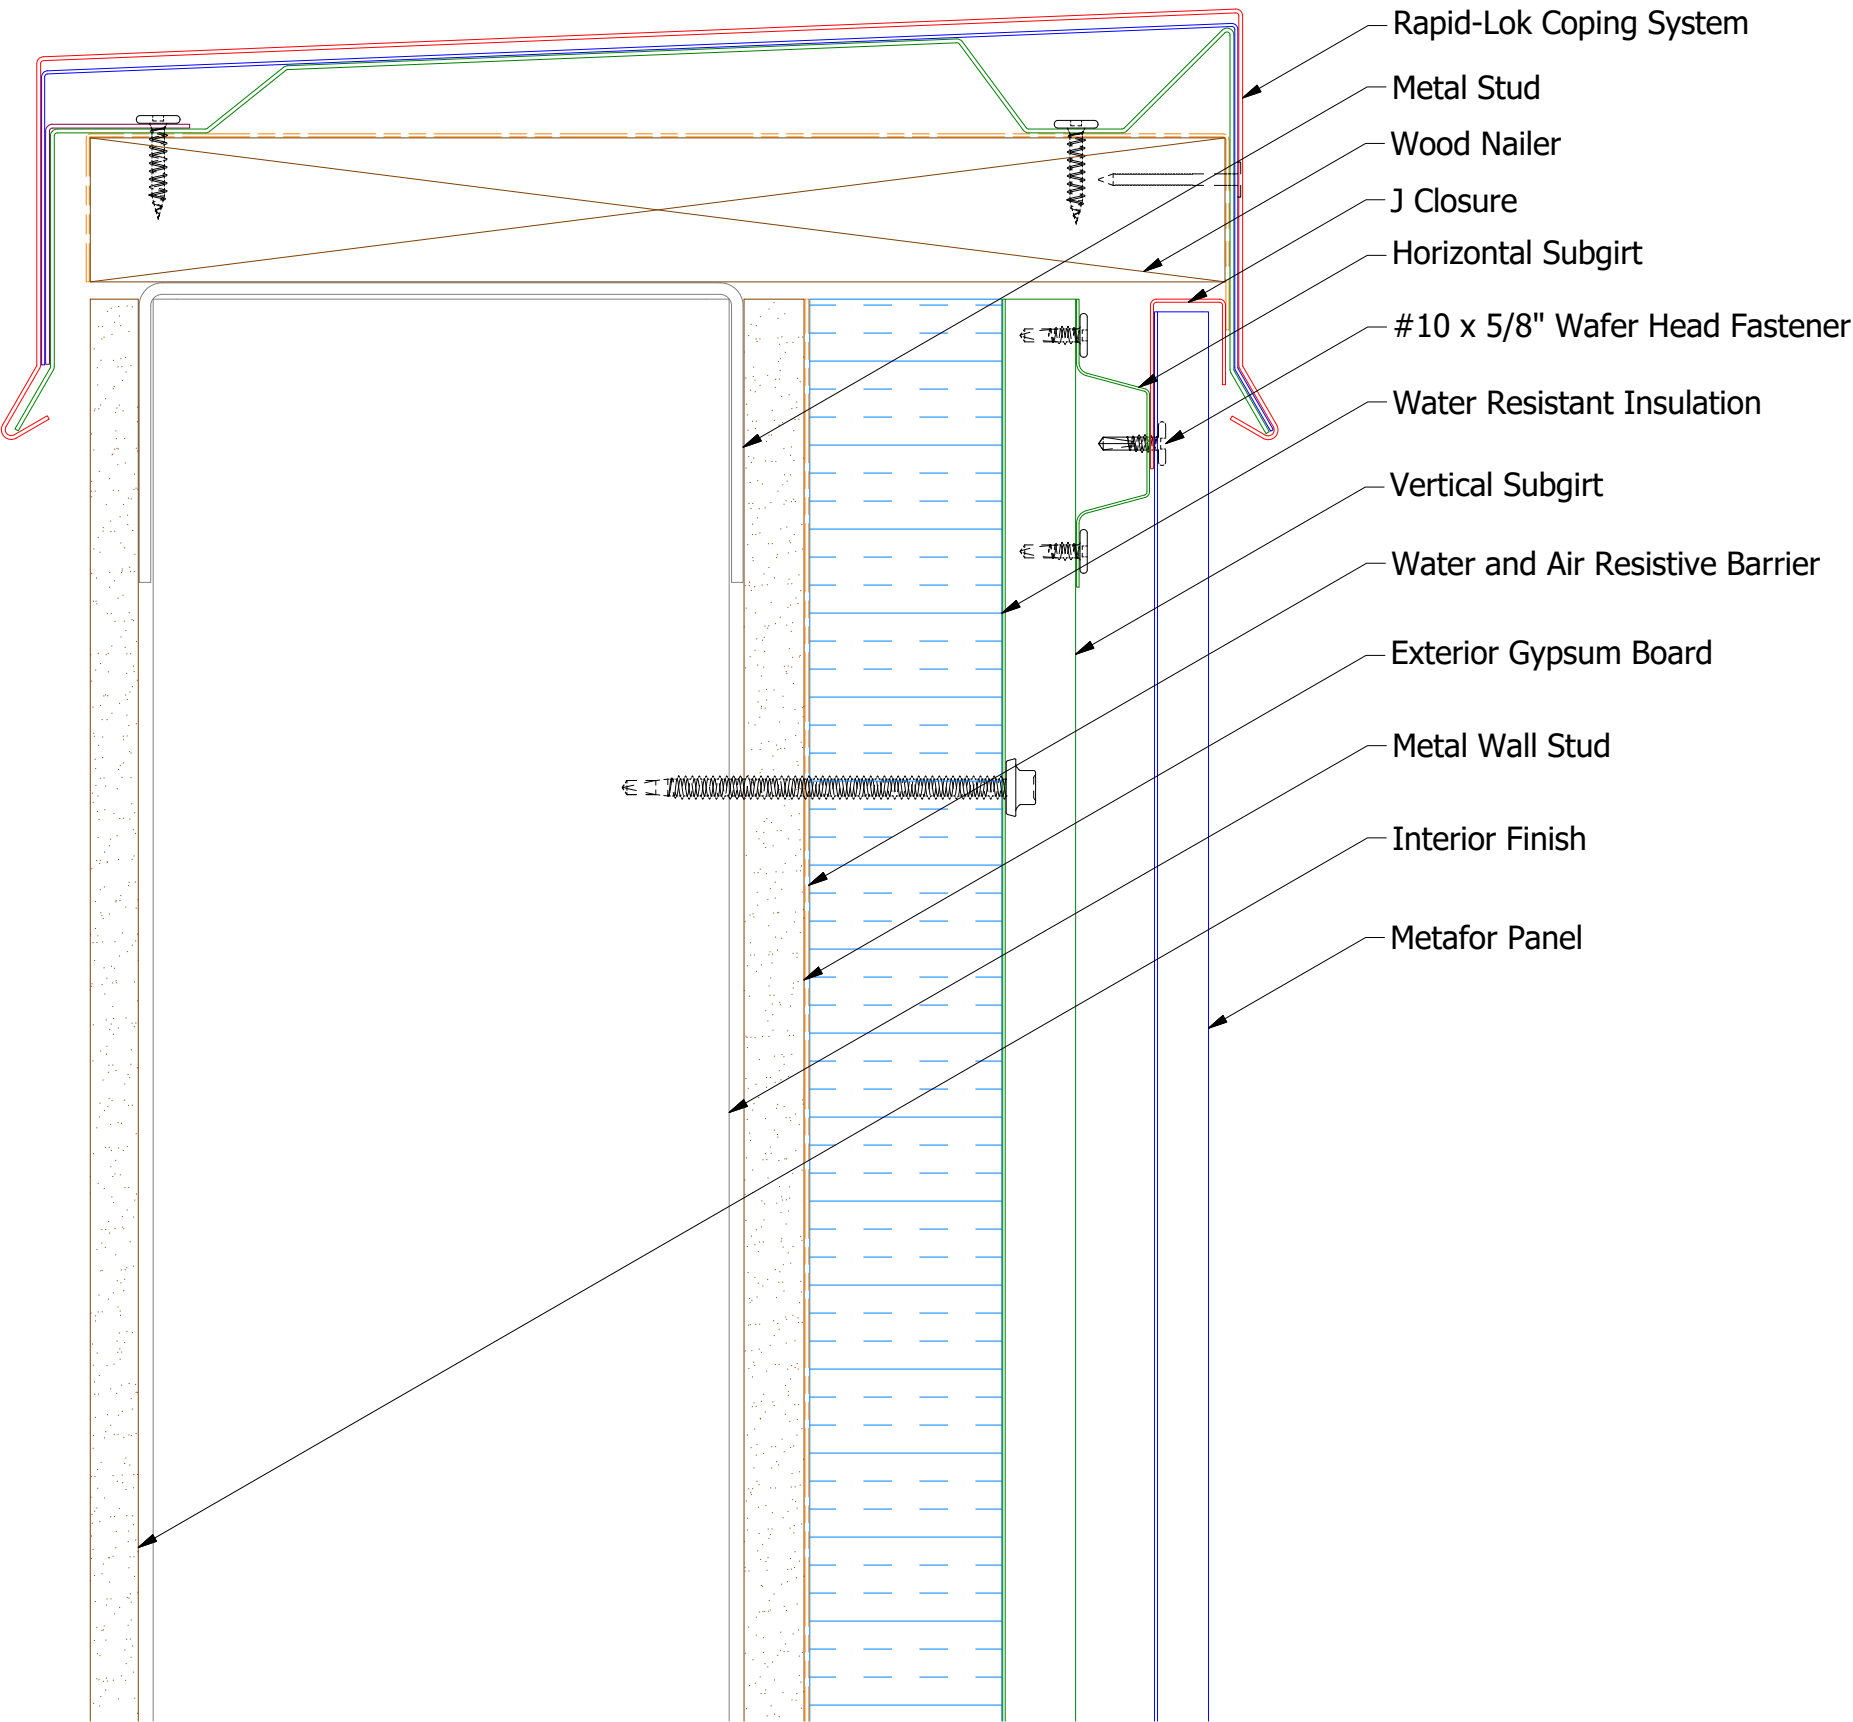

MFA270-J Closure



2 Stage Method of Weather Proofing

		ATAS INTERNATIONAL, INC Allentown PA 610-395-8445 Mesa AZ 480-558-7210	
TITLE		Metafor Top of Wall Detail	
DWG. NO.	DR	KRK	DATE 8/12/2014
MATERIAL	APP		DATE
SH. SIZE	B	SCALE	X:X



Note: * denotes color side.

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP

Vertical Panel

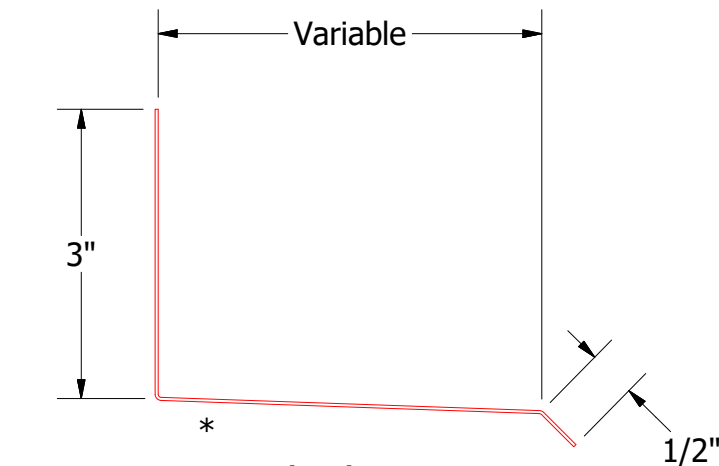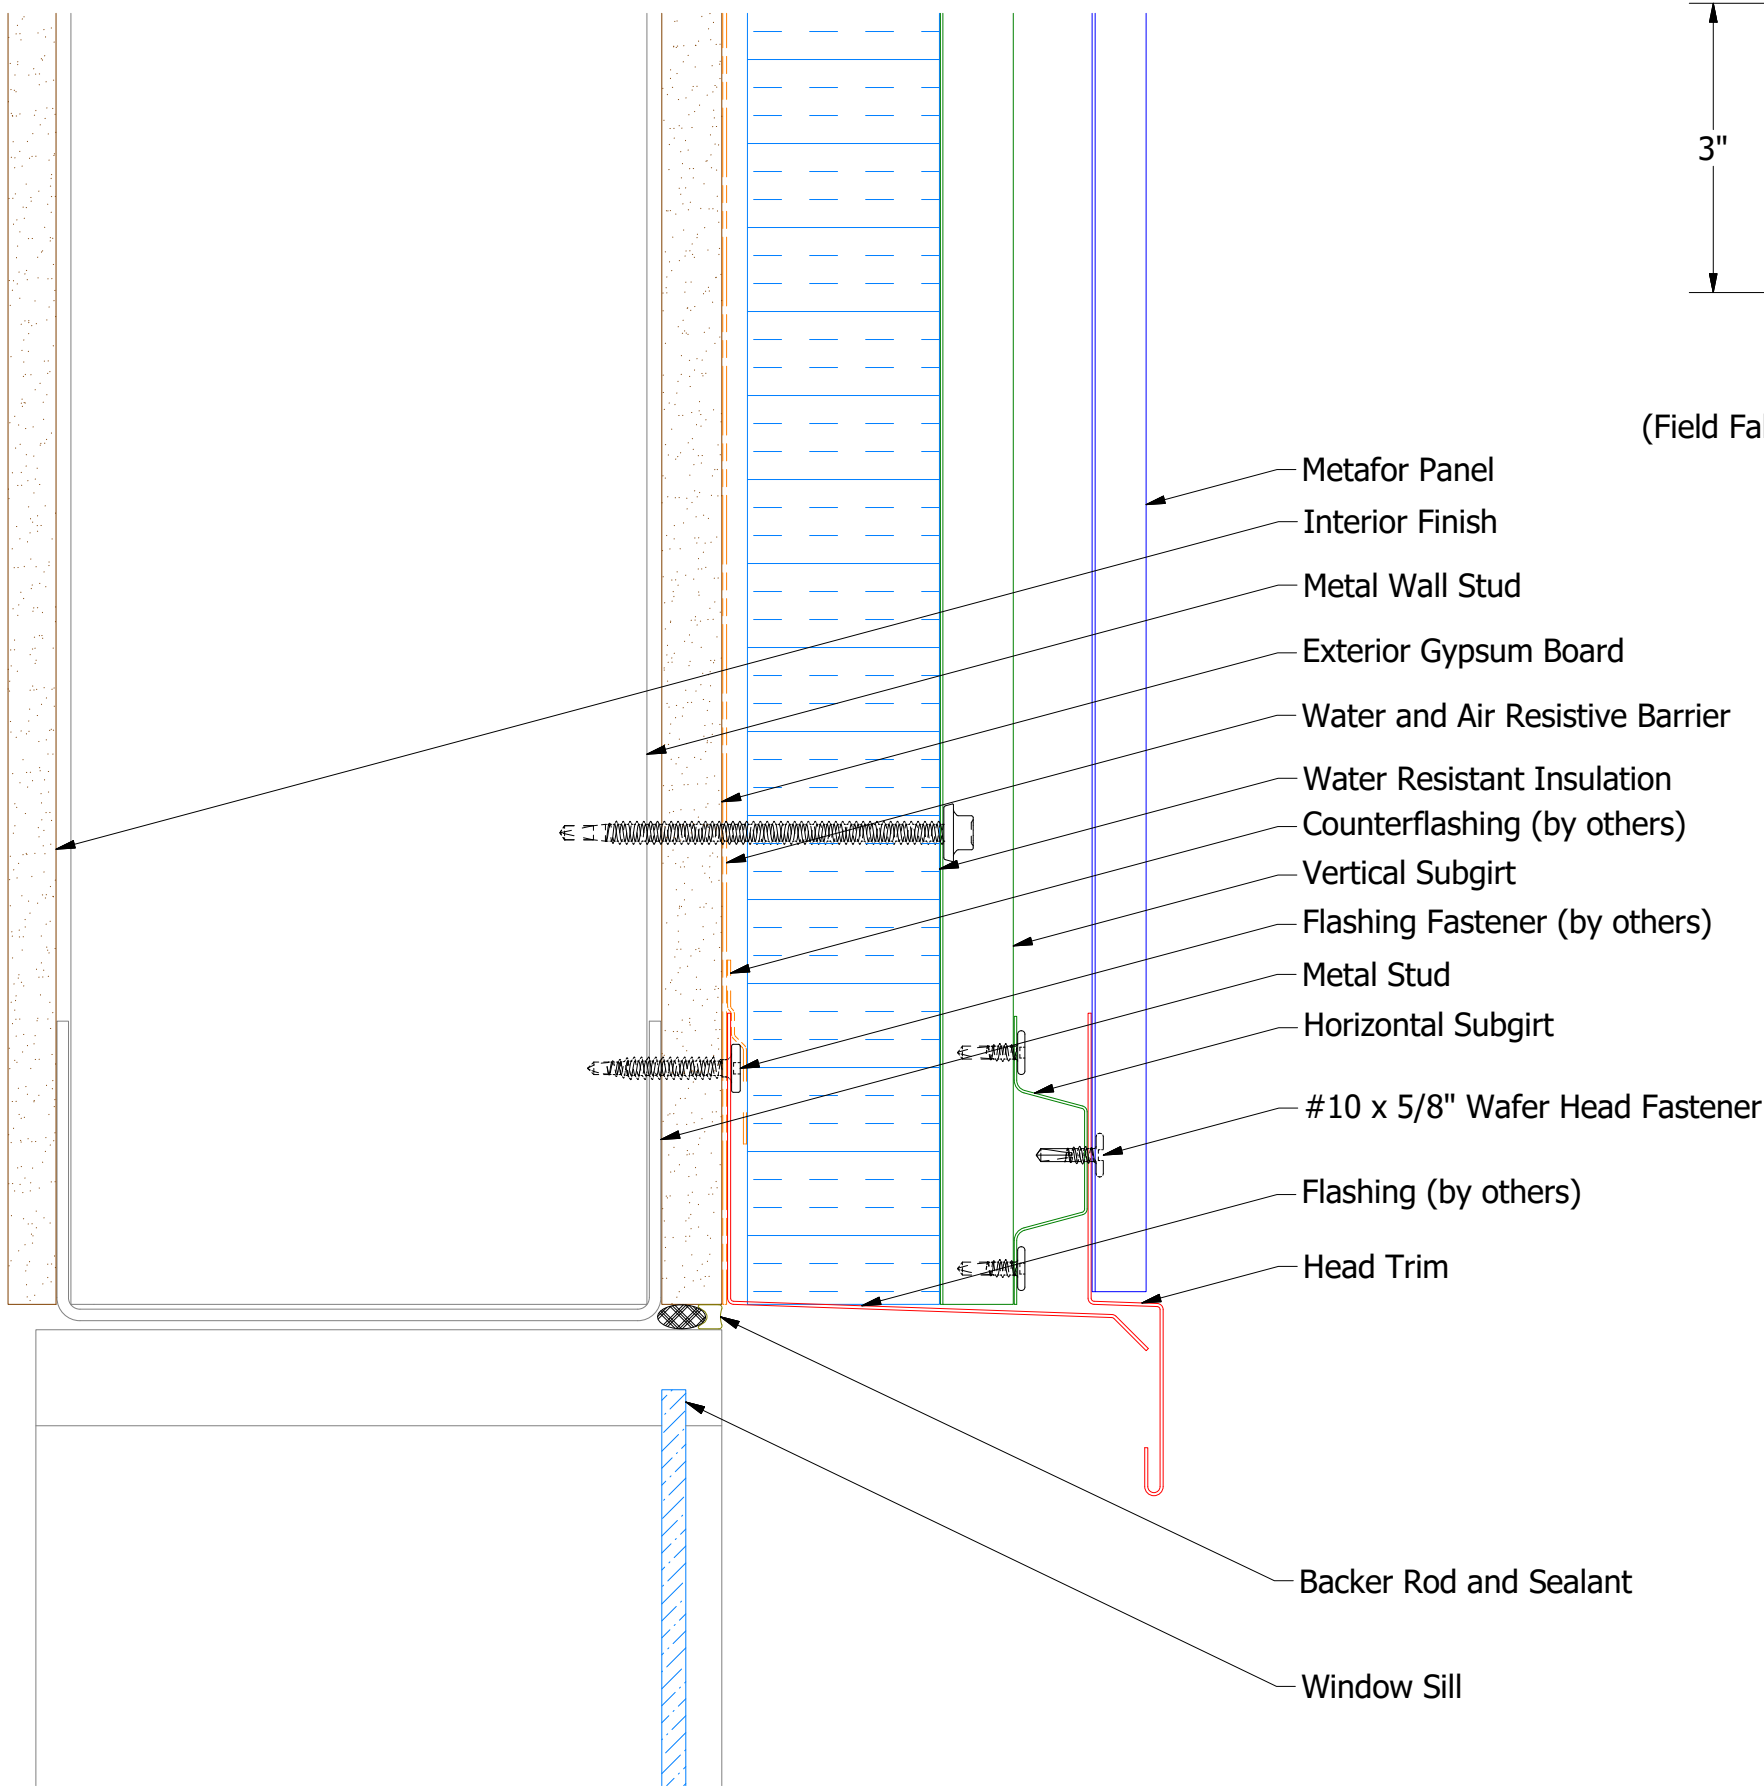

Flashing
(Field Fabricated from Color Matched Flat Stock)

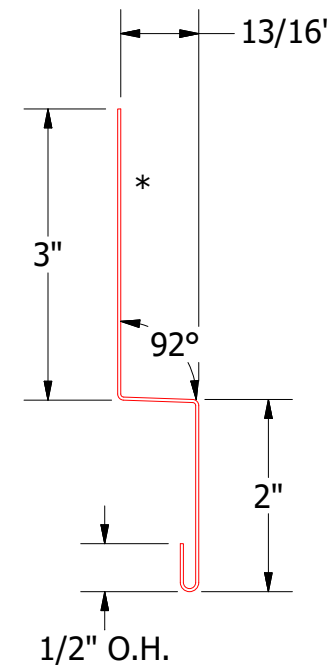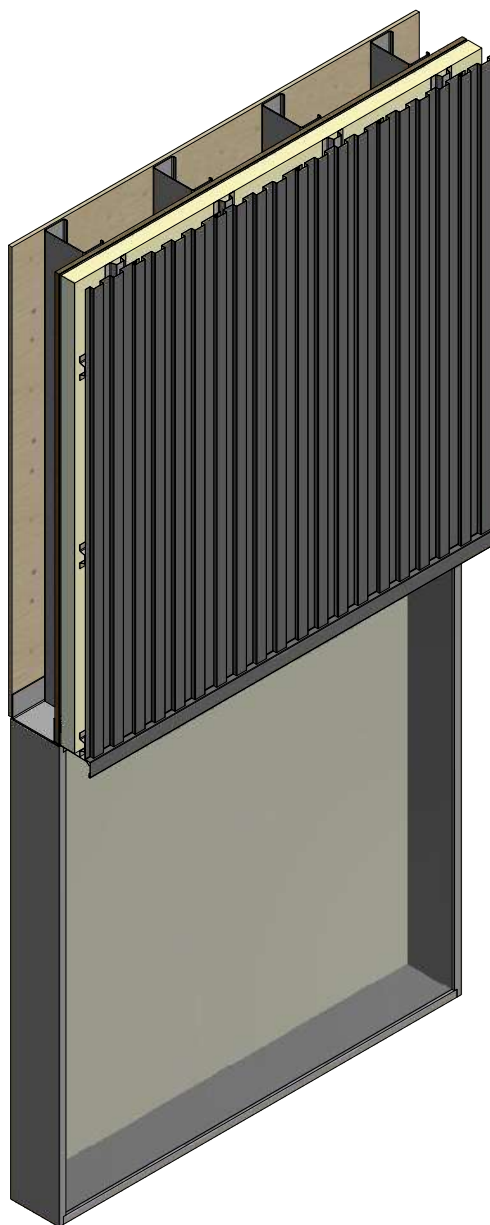

MFA550 - Head Trim


Note: * denotes color side.

2 Stage Method of Weather Proofing



TITLE		Metafor Head Detail	
DWG. NO.	DR	DATE	8/12/2014
	KRK		
MATERIAL	APP	DATE	
SH. SIZE	B	SCALE	X:X

REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP


Vertical Panel

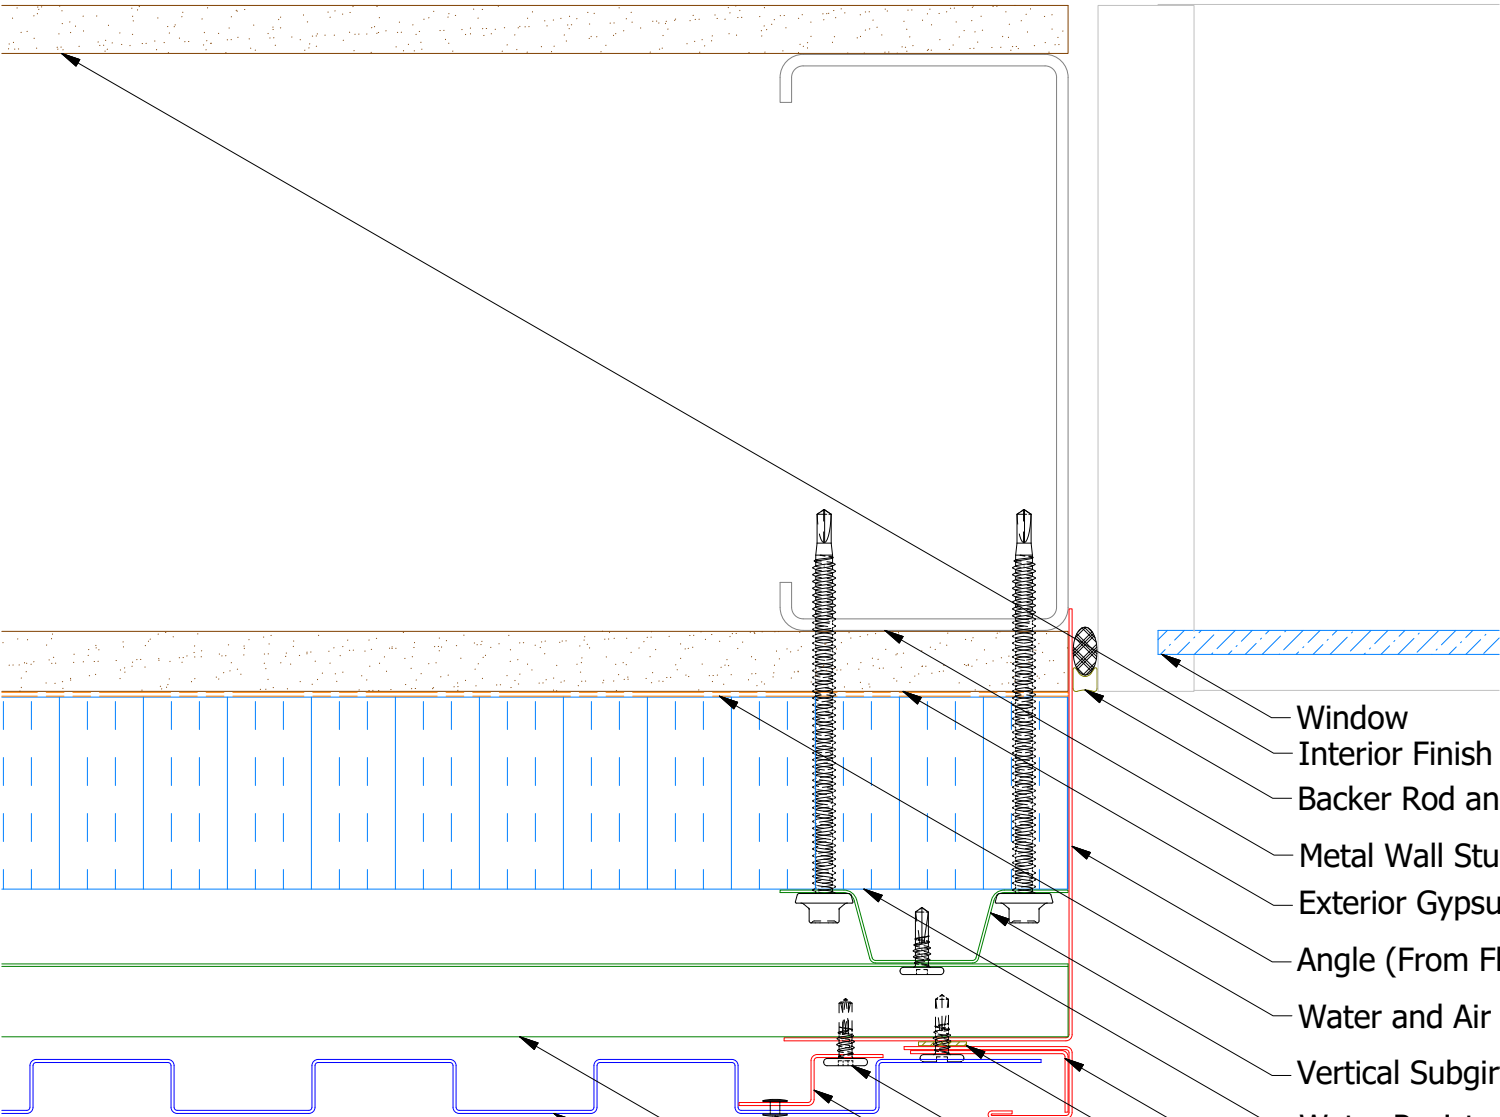


Alternate Subgirt Orientation (NTS)

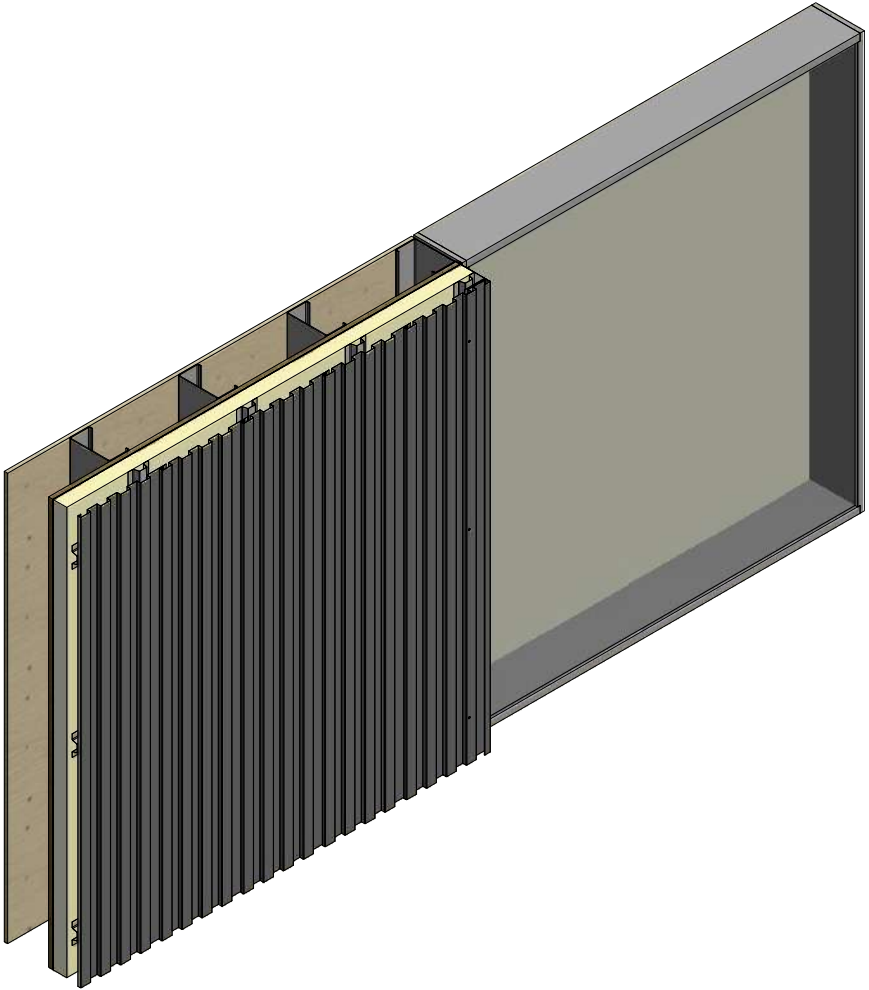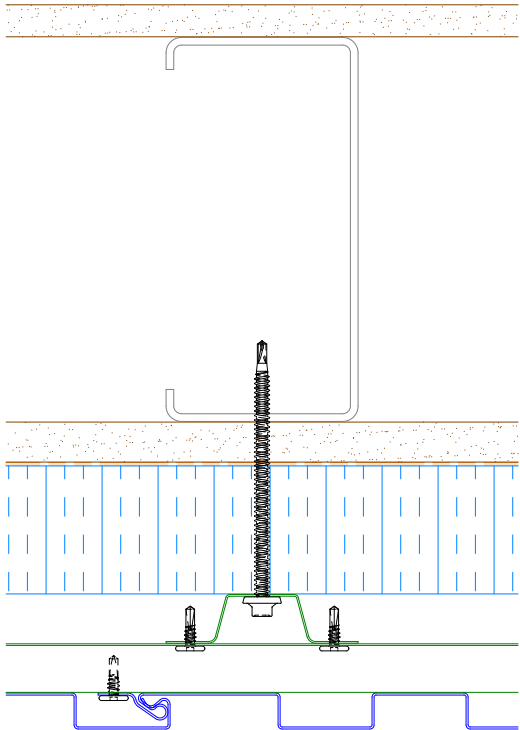



- Window
- Interior Finish
- Backer Rod and Sealant
- Metal Wall Stud
- Exterior Gypsum Board
- Angle (From Flatstock)
- Water and Air Resistive Barrier
- Vertical Subgirt
- Water Resistant Insulation
- Angle Trim
- Butyl Tape
- J Channel
- #10 x 5/8" Wafer Head Fastener
- Support Z
- Painted Pop Rivet (Stainless Steel)
- Horizontal Subgirt
- Metafor Panel

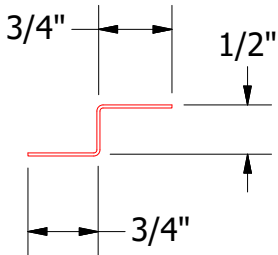

MFA681-Support Z

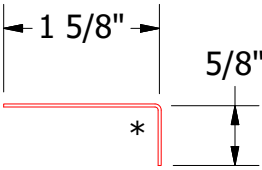

MFA680-Angle Trim

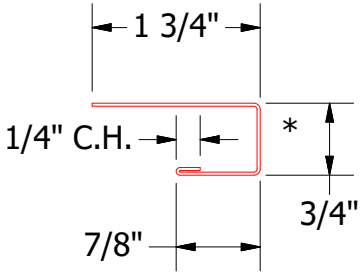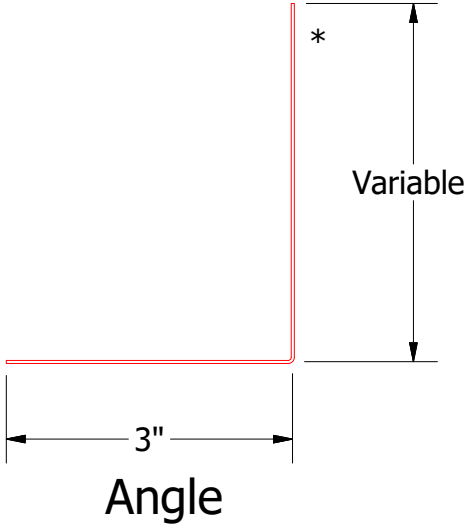




MFA034-J Channel

2 Stage Method of Weather Proofing

TITLE		Metafor Jamb Detail	
DWG. NO.	DR	KRK	DATE
MATERIAL	APP		DATE
REV. NO.	DATE	DESCRIPTION OF REVISION	BY APP
SH. SIZE	B	SCALE	X:X


Note: * denotes color side.

Vertical Subgirt

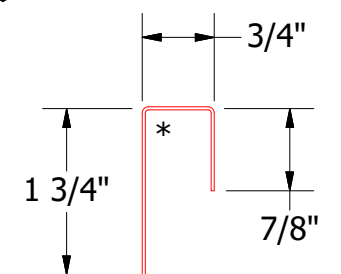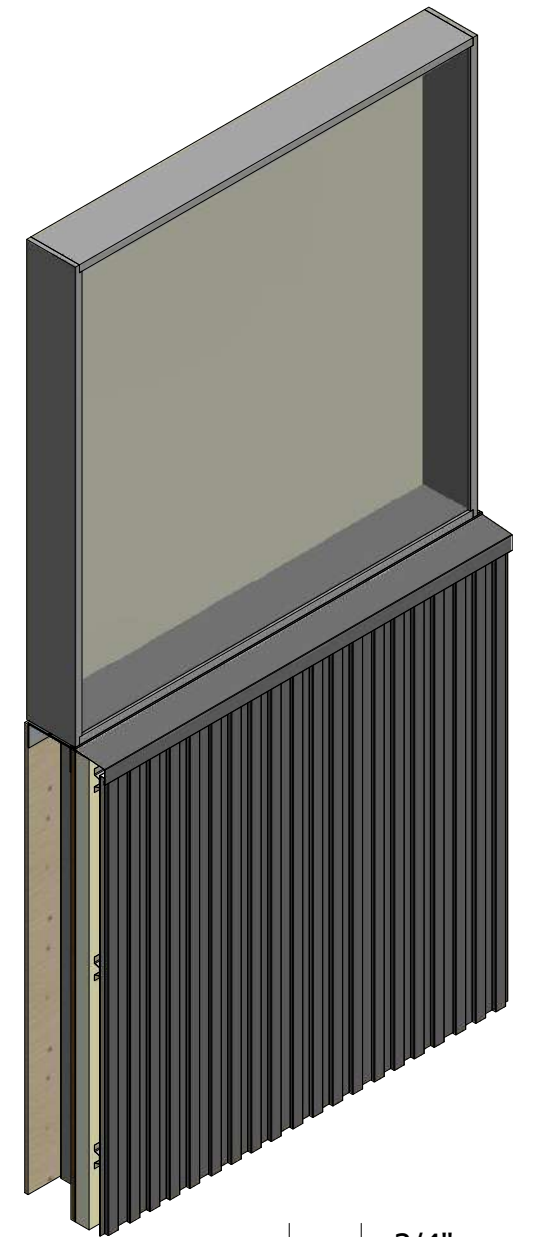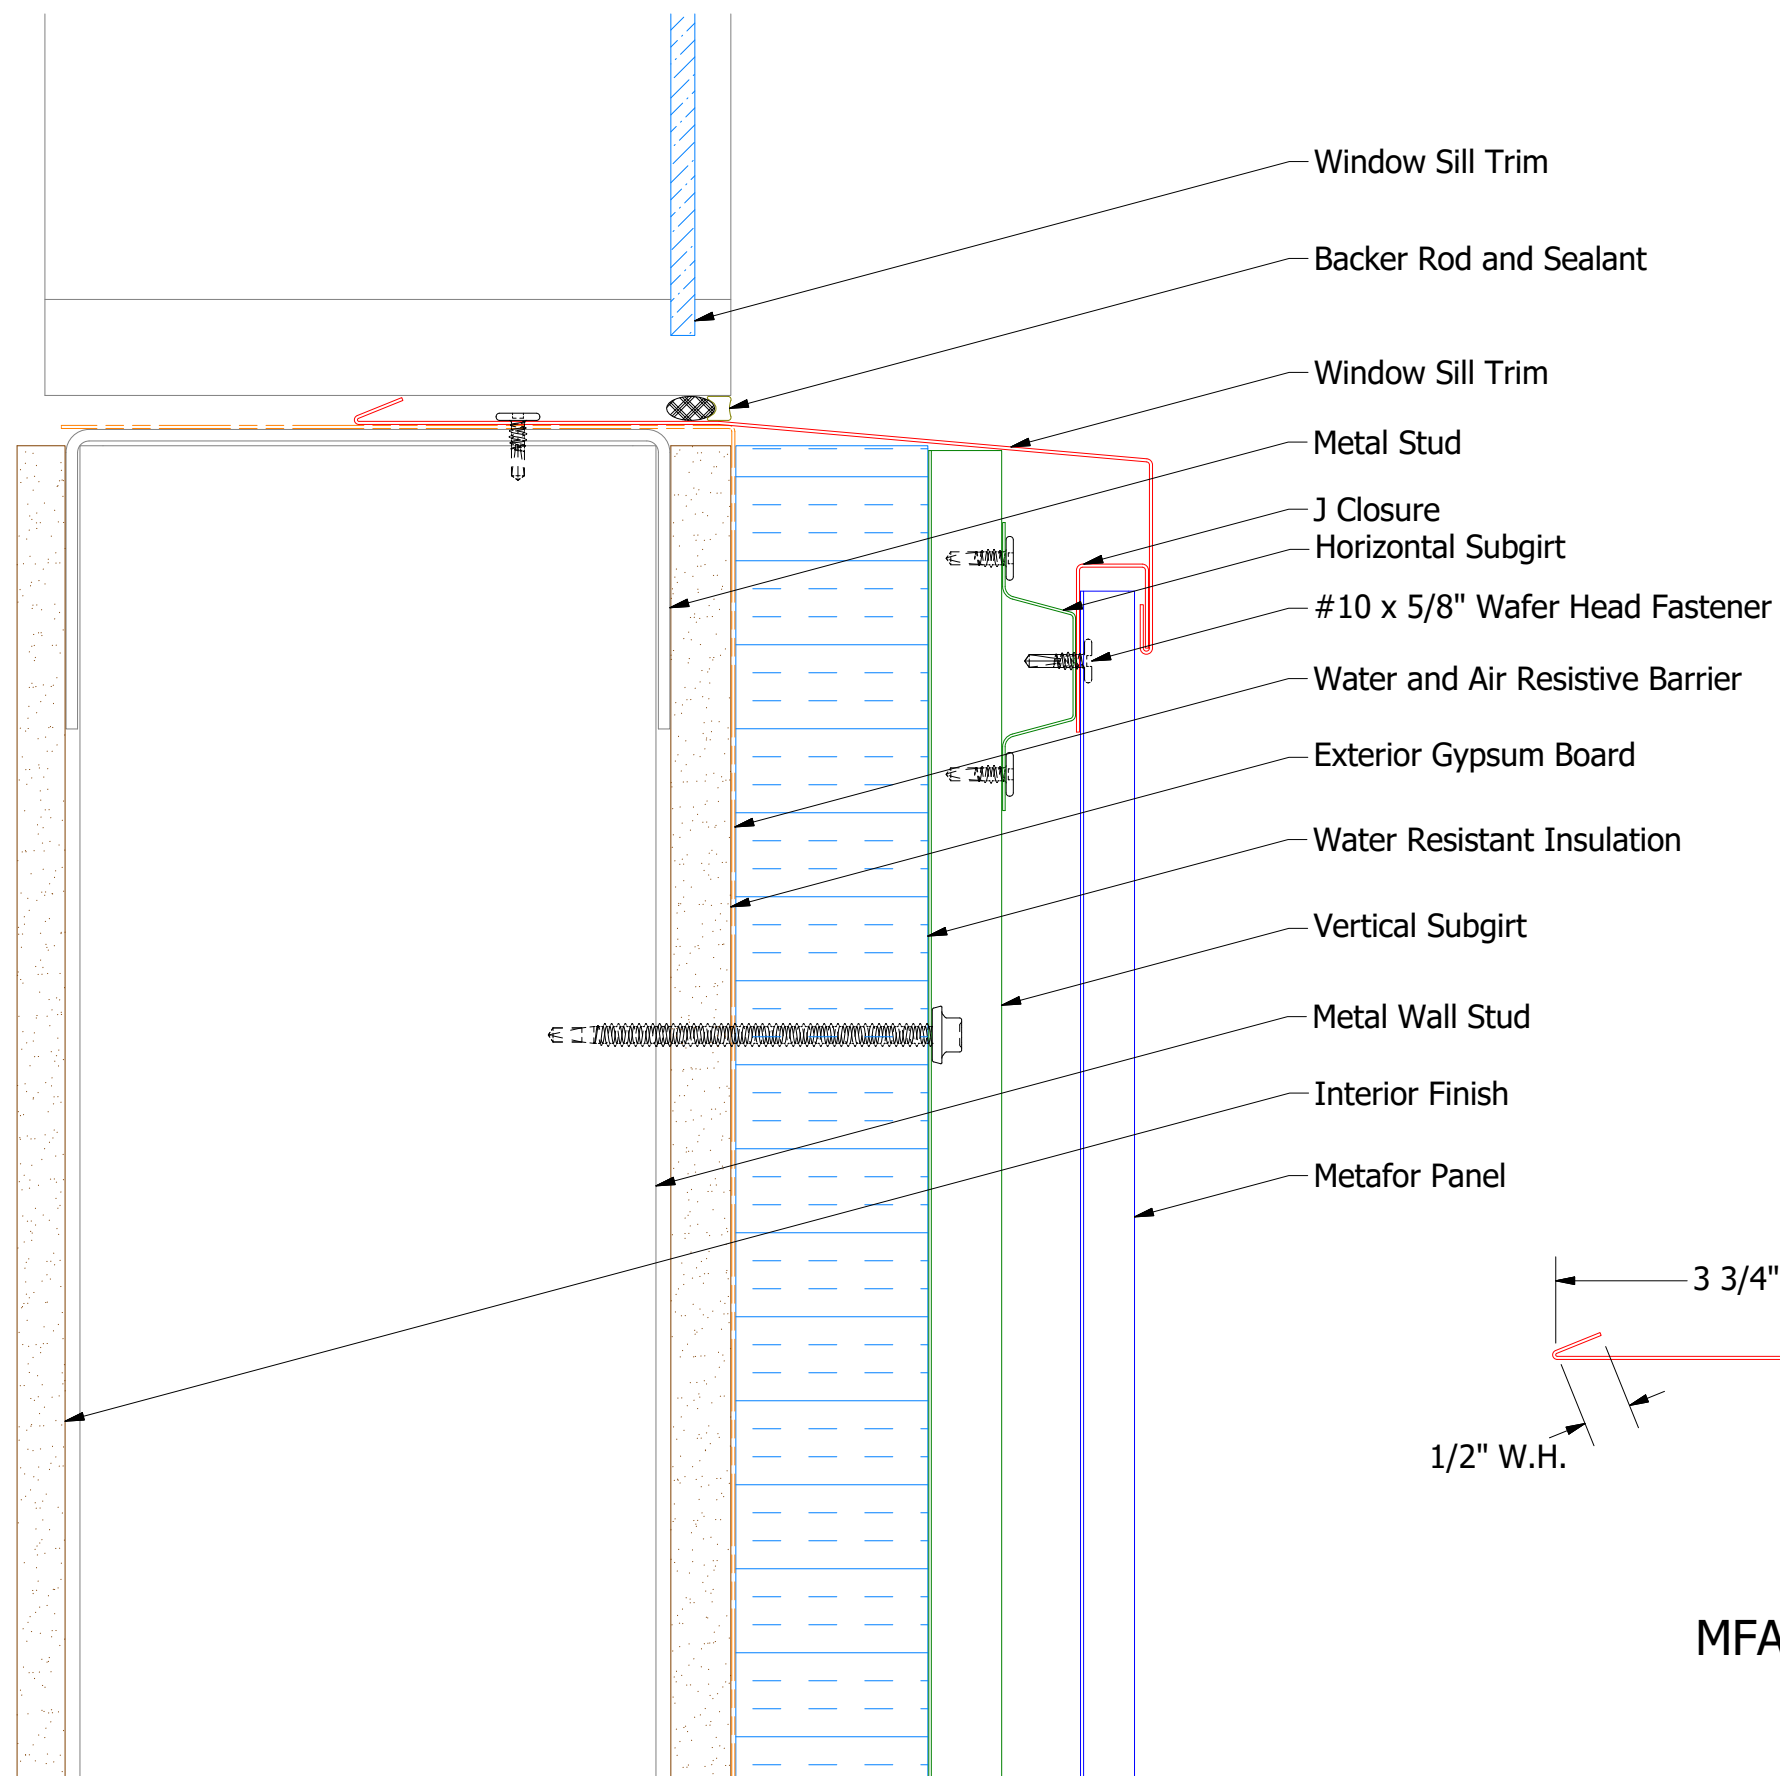


MFA270-J Closure

2 Stage Method of Weather Proofing

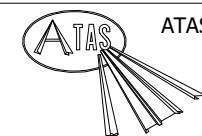

ATAS INTERNATIONAL, INC
Allentown PA
610-395-8445
Mesa AZ
480-558-7210

MFA670-Window Sill Trim

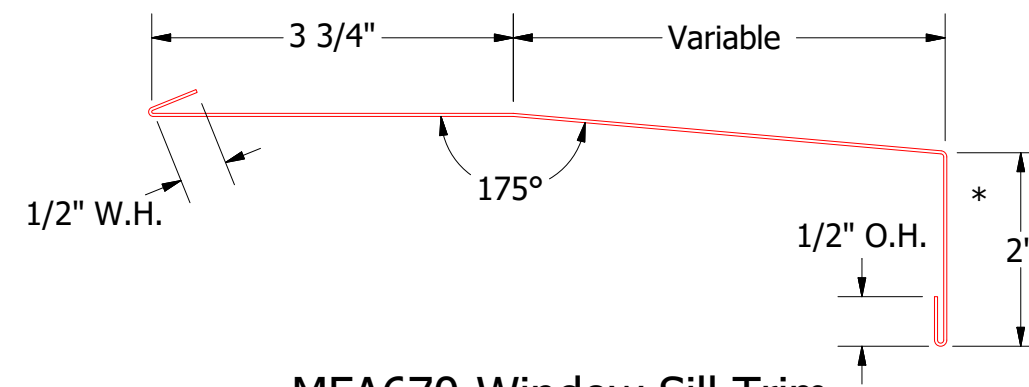

Note: * denotes color side.

					TITLE Metafor Window Sill Detail		
					DWG. NO.		DR KRK DATE 8/13/2014
							APP DATE
					MATERIAL		SH. SIZE B SCALE X:X
REV. NO.	DATE	DESCRIPTION OF REVISION	BY	APP			