



## Installation Instructions

Pro-Cut® Starter Strips can be installed starting at either end of the eave. Begin installing the starter strips from the same end you intend to start the first course of field shingles.

Trim 4" to 6" off of either end of the first starter strip to avoid matching the ends of the first shingle course

Position the cut starter strip at the end of the eave and place the fasteners such that they will not show through any cutouts of the first shingle course (see Diagram)

Position the self-seal adhesive line facing up and closest to the lower edge of the eave or outer edge of the rake


The Pro-Cut® Starter Strip should overhang the eave edge and rake edges by 1/4" to 3/4" consistently around the roof

Where the non-corrosive drip edges extend beyond the wood decking, the Pro-Cut® Starter Strip may be installed flush with the drip edge

Using the same nails as will be used to fasten the field shingles, fasten the Pro-Cut® Starter Strip per the diagram below

Proceed to install the field shingles per the instructions on the shingle wrapper

Pro-Cut® Starter Strip is formulated to be installed in ambient temperatures of 40°F and above

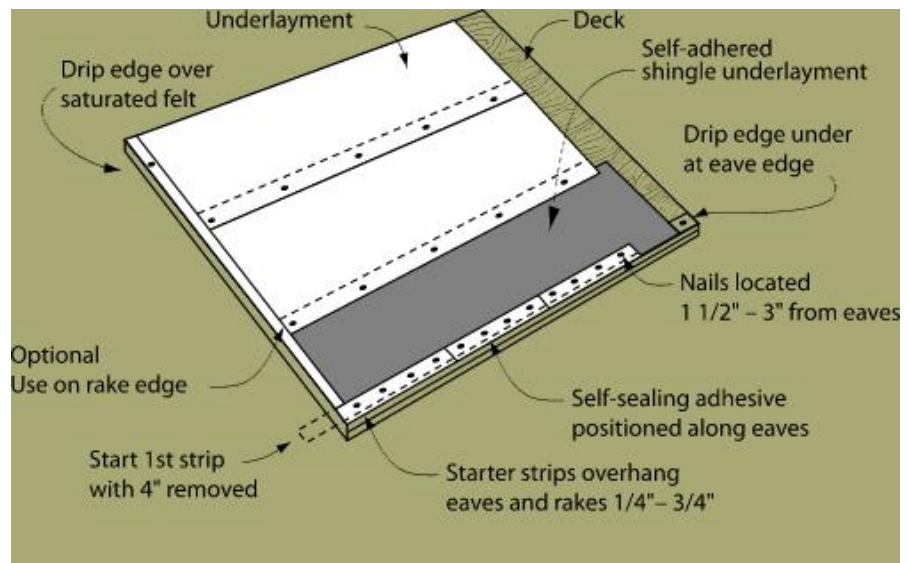

### Safety, Storage, & Handling

Pallets of Pro-Cut® Starter Strips shall not be double stacked. Provide cover on top and sides, allowing for adequate ventilation. Consult the Material Safety Data Sheet for the best available information on the safe handling, storage, personal protection, health and environmental considerations.