


CRACK LESS THAN  
1/16" WIDE

CRACK GREATER THAN  
1/16" WIDE

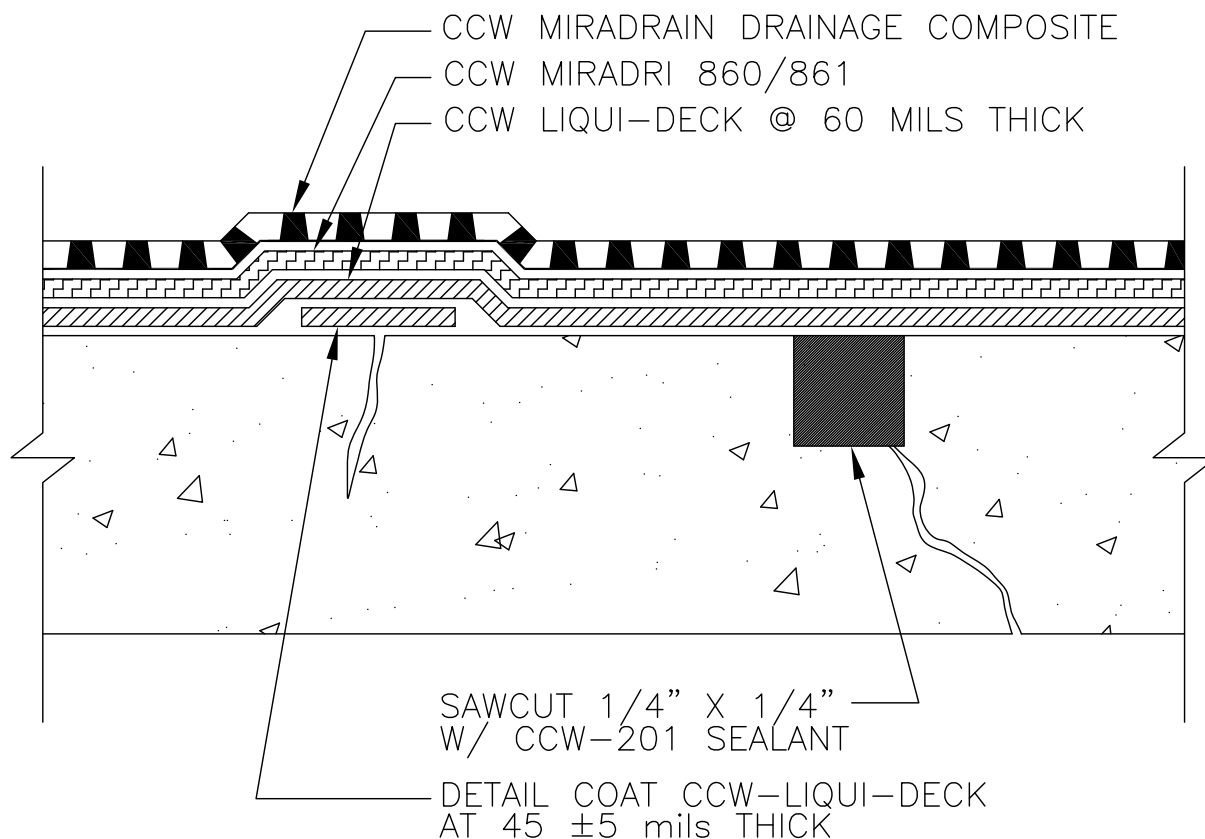

NOTES:

1. SAW CUT CRACKS GREATER THAN 1/16" TO 1/4" WIDE X 1/4" DEEP.
2. REMOVE DUST AND APPLY CCW-201 SEALANT, TOOL FLUSH AND ALLOW TO DRY OVERNIGHT.
3. APPLY CCW LIQUI-DECK DETAIL COAT OVER HAIRLINE CRACKS, COLD JOINTS. ALLOW TO DRY 2 TO 4 HOURS.
4. APPLY CCW LIQUI-DECK MEMBRANE AT 60 MILS THICK, ALLOW TO DRY 2 TO 4 HOURS.
5. INSTALL CCW MIRADRI 860/861
6. INSTALL CCW PROTECTION BOARD OR CCW MIRADRAIN DRAINAGE COMPOSITE.

DETAIL IS INTENDED TO BE A GUIDE FOR WATERPROOFING INSTALLATION ONLY.

860P-1A

CRACK TREATMENT



© 2012 CARLISLE CORPORATION