

DRAIN - BY OTHERS


CLAMPING RING - SECURE CCW-860  
UNDER CLAMPING RING.

CCW MIRADRI 860/861

CCW MIRADRI 860/861 MEMBRANE  
3'x3' PIECE CENTERED TO DRAIN  
FLANGE AND DECK. CUT OUT CENTER  
FLUSH TO INSIDE OF DRAIN

CCW LIQUI-DECK @ 60 MILS

CCW MIRADRAIN  
DRAINAGE COMPOSITE

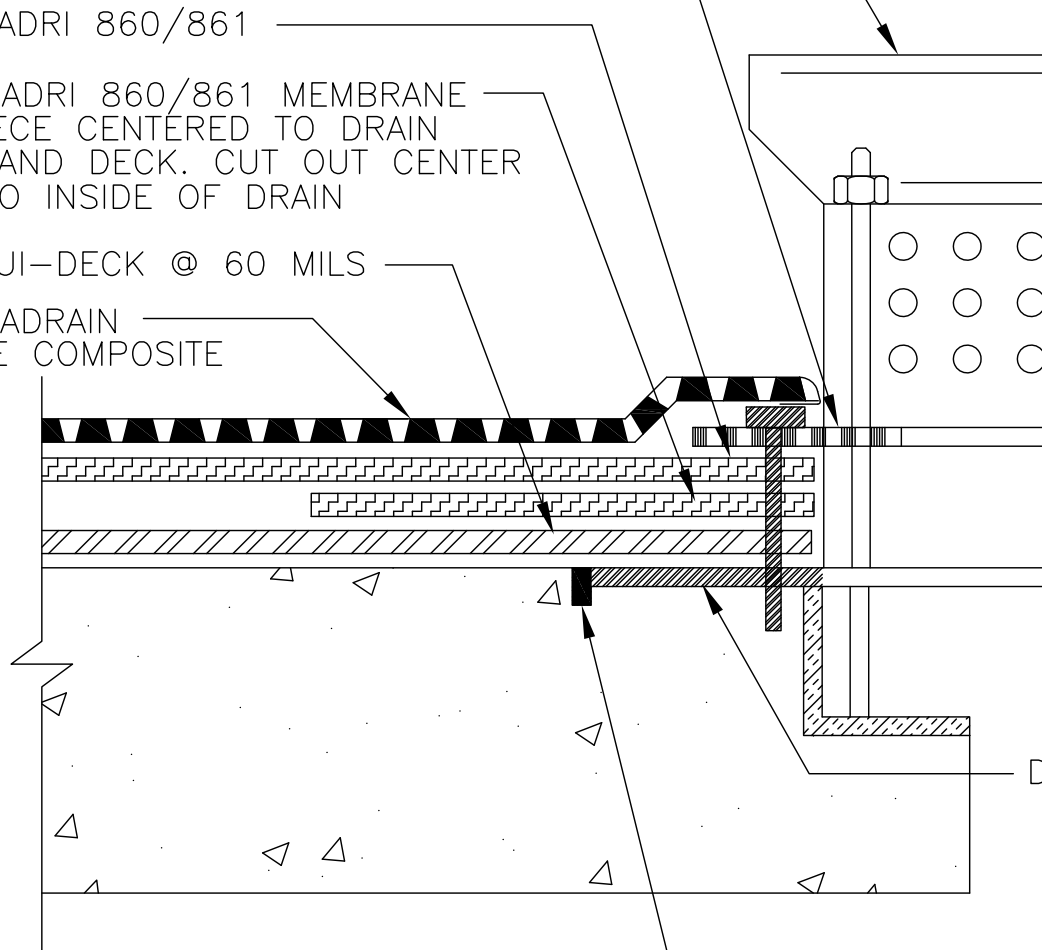

NOTES:

1. SAW CUT  $\frac{1}{4}$ "x $\frac{1}{4}$ " GROOVE  
AROUND DRAIN FLANGE  
AND FILL WITH  
CCW-201.
2. CLEAN FLANGE. APPLY  
LIQUI-DECK AT 60 MILS.
3. INSTALL CCW-860/861  
MEMBRANE FLASHING, IN  
A SINGLE 24"x24" PIECE,  
AROUND DRAIN.
4. INSTALL CCW MIRADRI  
860/861 FIELD  
MEMBRANE.
5. INSTALL CCW MIRADRAIN  
DRAINAGE COMPOSITE.

DRAINAGE FLANGE

CCW-201 SEALANT  
IN  $\frac{1}{4}$ "x $\frac{1}{4}$ " SAW CUT

DETAIL IS INTENDED TO BE A GUIDE FOR  
WATERPROOFING INSTALLATION ONLY.

860P-6

DOUBLE DRAIN

**CARLISLE**  
COATINGS & WATERPROOFING

© 2012 CARLISLE CORPORATION