

**Just spray and stick.**

**It's that easy for a professional looking corner.**

AquaBead® is a revolutionary new drywall corner bead that's easier to cut and apply than traditional corner beads.

Just spray on water and press — it's that easy.


**Quick and easy**

- Just spray on water, wait a few seconds and then press — no messy compound, nails or spray adhesive required
- Superior Bond – Water-activated adhesive creates an exceptional bond to drywall paper surface
- Can be coated in 30 minutes for quicker finishing
- Paper-plastic-paper design withstands impacts to prevent dents and cracks
- Plastic core is easy to cut without any sharp edges or bent corners



## AquaBead® exclusive features

- ✓ Water activated adhesive
- ✓ Simple to apply
- ✓ Superior bonding
- ✓ No nails, compound or spray glue required
- ✓ Easy to cut
- ✓ Won't rust or crack
- ✓ Lightweight for easy handling
- ✓ Impact resistant

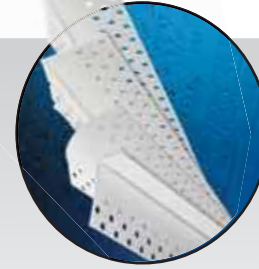

## NO-COAT Flexible Corners



Look for **NO-COAT Flexible Corners** for any corner. Perfect for off-angles, tray ceilings and bay windows.

- Memory-free hinge flexes to any inside or outside corner angle and allows instant application
- Formulated surface paper accepts any finish and resists abrasion
- Applied with joint compound

**ASK ABOUT ALL OF OUR OTHER CERTAINTEED® PRODUCTS AND SYSTEMS:**

ROOFING • SIDING • TRIM • DECKING • RAILING • FENCE  
GYPSUM • CEILINGS • INSULATION

CertainTeed Corporation  
20 Moores Road  
Malvern PA, 19355

Professional: 800-233-8990  
Consumer: 800-782-8777  
[www.certainteed.com](http://www.certainteed.com)  
<http://blog.certainteed.com>

©02-2010 CertainTeed Gypsum, Inc. Rev 04-2016 Printed in Canada on recycled paper. CTG-4069



CertainTeed  
**AquaBead®**  
Drywall Corner



**Spray,**



**stick,**



**finish.**

**CertainTeed**  
SAINT-GOBAIN  
Gypsum

# AquaBead® **Faster, stronger, easier.**

AquaBead® is a revolutionary new corner bead that's easier to cut and apply than traditional corner beads. Just spray on water and press — it's that easy.

AquaBead Outside 90° has a specially engineered beaded nose to create the perfect corner.

AquaBead TRIM Outside 90° has a beadless nose for quick, durable corners.

AquaBead Bullnose allows you to create a more stylish professional looking corner.

AquaBead L-Trim offers quick and clean finishing of exposed drywall edges and reveals.



**Just Add Water**



Specially engineered nose does not require coating. Just fill the outside edges with joint compound to create the perfect corner.

Water-activated adhesive provides a superior bond directly to drywall

Perforations allow compound to adhere to the drywall surface

## AquaBead® installs as easy as spray, stick, done.



Using a spray bottle or pump sprayer, completely wet the adhesive side of the AquaBead® with clean, ordinary tap water. The warmer the water, the faster the activation.

After applying water, allow 20–30 seconds for the adhesive to become sticky.

Place the wet, adhesive side of the AquaBead on the wall corner, aligning it tightly to the ceiling.



Press the AquaBead® firmly by hand or with a roller, making sure the flanges contact the drywall surface completely.



AquaBead® corner can be filled after 30 minutes using All-Purpose or Finishing joint compound.



**EASY TO CUT**



**APPLIES IN SECONDS**



**DO NOT USE A SPONGE**

## Tips and tricks

- Do not use a sponge as it will wipe away the adhesive.
- Add a bit of food coloring to the water to make it easier to see where you have sprayed.
- Save time by using a miter saw to cut multiple pieces of AquaBead to the same length.
- Create a guide with a pencil or chalk line to get straight corners, especially on bulk-heads and long runs.

