

Quick Start Guide

LANDMARK SERIES™ and LANDMARK™ TL




Refer to www.certainteed.com or the *Master Craftsman® Shingle Applicator's Manual* for complete detailed application instructions.

Landmark shingles have the installer-friendly NailTrak™ feature, which provides 1-1/2" wide nailing area. Closed-cut valleys are preferred by CertainTeed® when applying Landmark shingles. Open valleys are recommended when applying Landmark TL.

Fastening


Low and Standard Slope (2:12 – 21:12)

Use four nails for every full shingle.

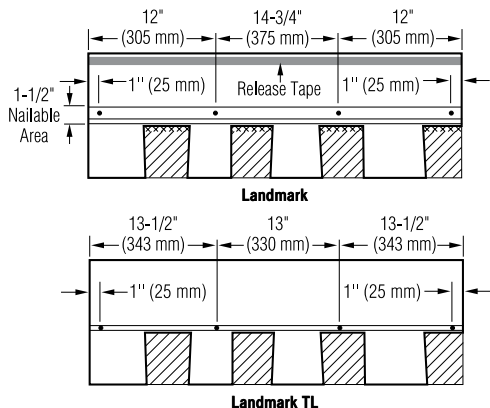


Steep Slope (>21:12)

Use six nails and four spots of asphalt roofing cement for every full laminated shingle.

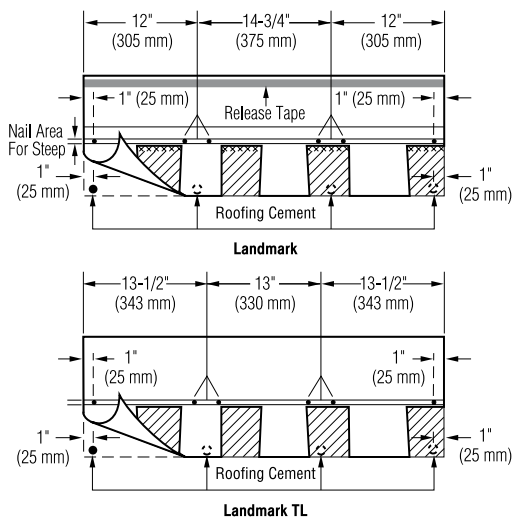


Starter Installation

1. Use CertainTeed Swiftstart Starter, or three-tab shingles with the lower tab portions removed. Be sure that the starter shingles are at least 7-5/8" in height.
2. For the first starter, cut 6" off.
3. Apply the remaining piece to the lower left corner of the roof.

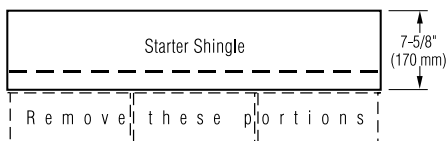

4. Use full length starter shingles for the rest of the course.

Fastening: Use 4 nails, located as shown below

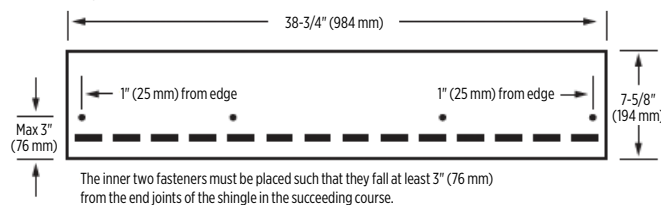

Five Course Diagonal Method (6" and 11")

1st Course: Apply a full shingle at the lower left corner of the roof, flush with the edges of the starter course.

2nd Course: Cut 6" off the left end of the shingle and save this piece for later use. Apply the 32-3/4" (34" for Landmark TL) long piece.

3rd Course: Cut 11" off the shingle and save this for later. Install the 27-3/4" (29" for Landmark TL) long piece.


4th Course: Apply the previously removed 11" long piece.

5th Course: Apply the previously removed 6" long piece. Install a full shingle against the right edge of each shingle in courses one through five. Apply all shingles with a 5-5/8" exposure.

Continuing Up The Roof

1. Beginning again with a full shingle, repeat the five-course pattern up the left rake.
2. Fill-in courses across the roof in a stepped diagonal fashion using full shingles. Do not run courses straight across.

Important: Do not align joints of shingles closer than 4" from one another.

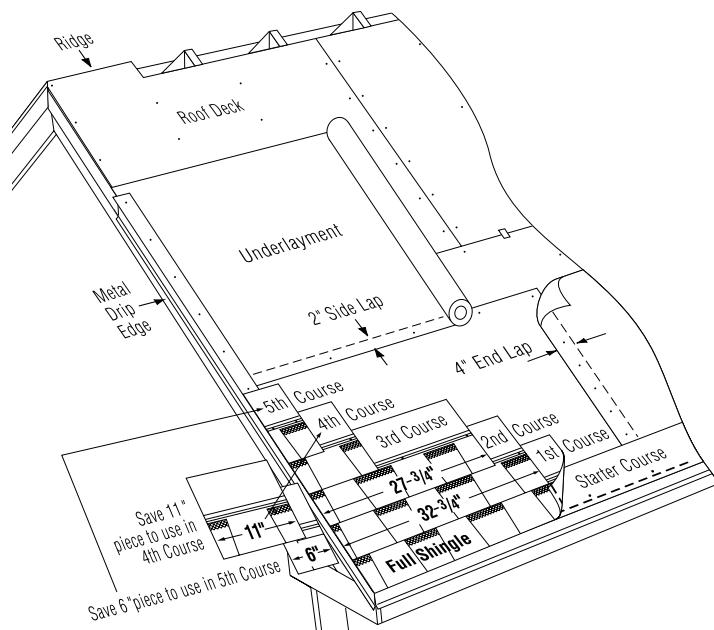

WATCH
LANDMARK
VIDEOS



WATCH
LANDMARK TL
VIDEOS



Quick Start Guide

LANDMARK SERIES™ and LANDMARK™ TL

Refer to www.certainteed.com or the *Master Craftsman® Shingle Applicator's Manual* for complete detailed application instructions.

Hip and Ridge Installation

Shadow Ridge™

There are 24 three-piece units in each Shadow Ridge bundle, that will cover 30 linear feet (33-3/4 linear feet, Metric). Each English dimension cap piece is 12" by 12".

Fastening


Use two nails to fasten each shingle. Fasteners must be minimum 1-3/4" long.

Shadow Ridge™ Application

Apply a starter piece that has the bottom 5" (5-5/8" for metric) removed. Fasten the starter with two nails located about 3" from the rake edge, and 1" in from each side edge.

Apply a full cap shingle over the starter and place fasteners at 5-5/8" (6-1/4" for metric) up from the exposed bottom edge and 1" in from each side.

Note: Each cap has a laying/alignment notch at the top edge to center the piece, and notches on each side to indicate the correct exposure. The side notches of the cap being applied should be aligned with the top edge of the previously applied cap.

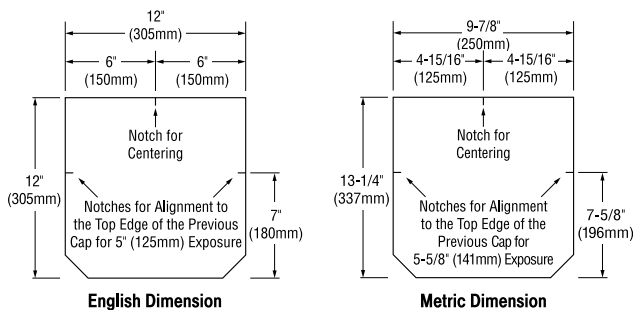

Mountain Ridge™ High-Profile


One box will cover 20 linear feet.

Fastening

Use two nails to fasten each shingle. Nails must be minimum 1-3/4" long.


Mountain Ridge Application

Prepare a 4" Starter shingle by cutting off the lower 8" color granule butt portion of one Mountain Ridge shingle. Apply the 4" starter piece. Install a nail on each side about 2" up from the rake edge and 1" in from each side edge. Apply a full Mountain Ridge shingle over the installed starter shingle. Install a nail on each side of the shingle 8-5/8" up from the bottom edge and 1" in from each side edge. Expose Mountain Ridge shingles 8", covering all fasteners.

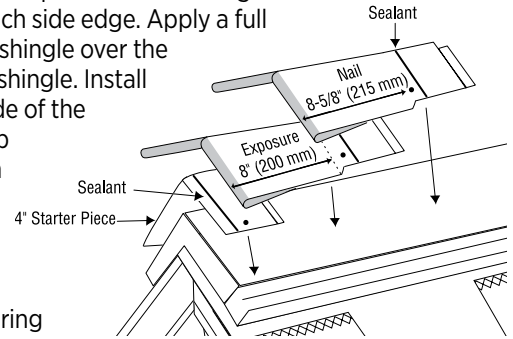


Cedar Crest™ Medium-Profile

There are 30 individual shingles (10 three-piece units) in each bundle. One bundle will cover 20 linear feet. Each shingle is 12" x 12".

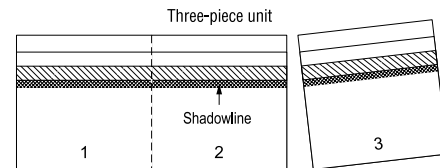

Fastening

Use two nails to fasten each shingle. Fasteners must be minimum 1-3/4" long.

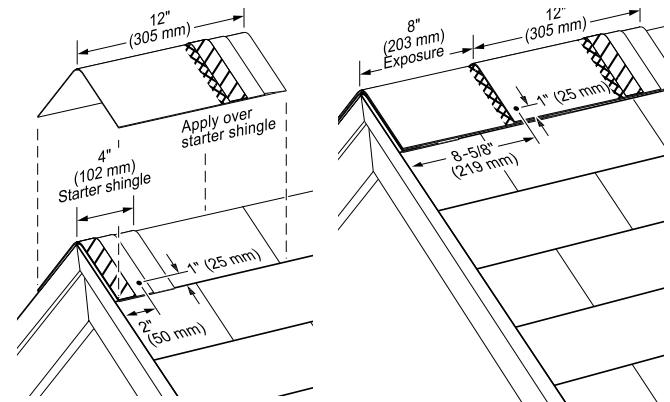

Cedar Crest Application

Prepare a 4" "starter" shingle by cutting off the lower 8" color granule portion of one Cedar Crest shingle. Apply the 4" starter piece. Install a nail on each side about 2" up from the rake edge and 1" in from each side edge of the shingle. Apply a full 12" x 12" piece over the starter. Fasten one nail on each side of shingle 8-5/8" up from the butt edge and 1" in from each side edge. Expose Cedar Crest shingles 8", covering all fasteners.