



Typical Dowel Bar Splicer System Installation

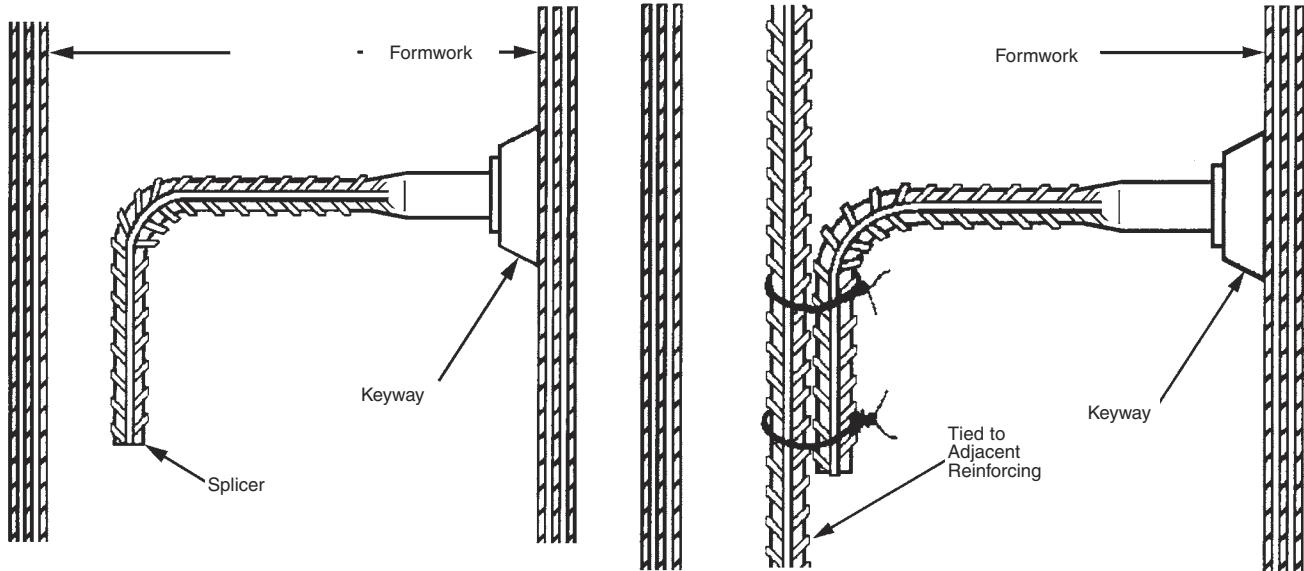


1. Set forms, and nail or screw Splicer to form key.

2. Place required reinforcing steel.

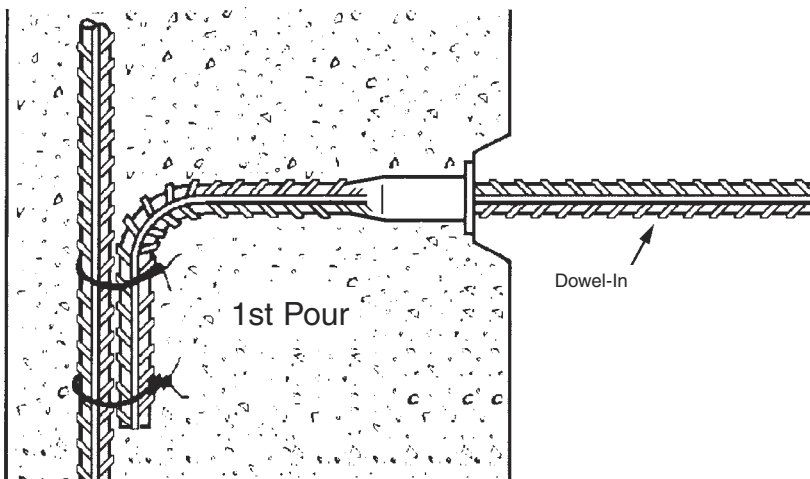

3. After first pour has properly set, remove the formwork and screw Dowel-Ins into the exposed splicers.

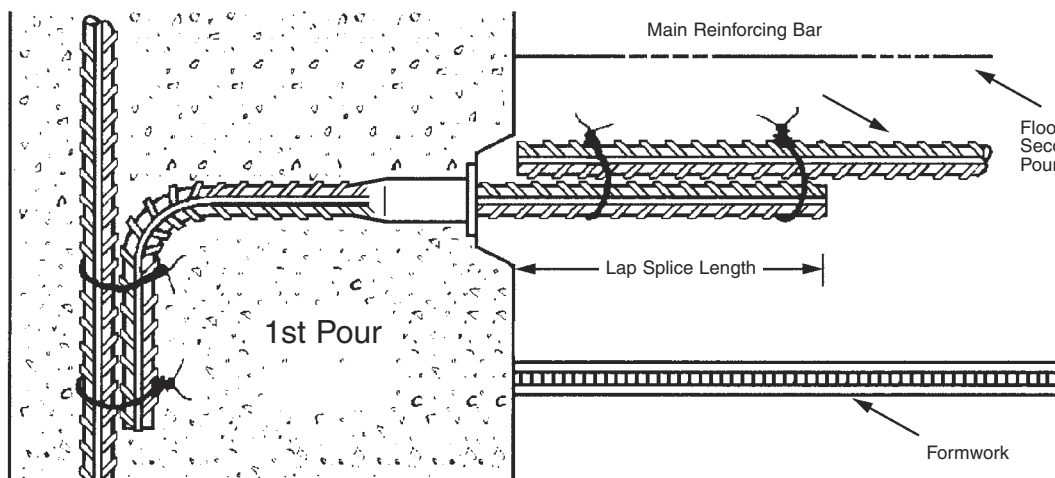

4. Place second pour formwork and reinforcing steel.