


FOR JOBS UP TO 50
SQUARES ONLY

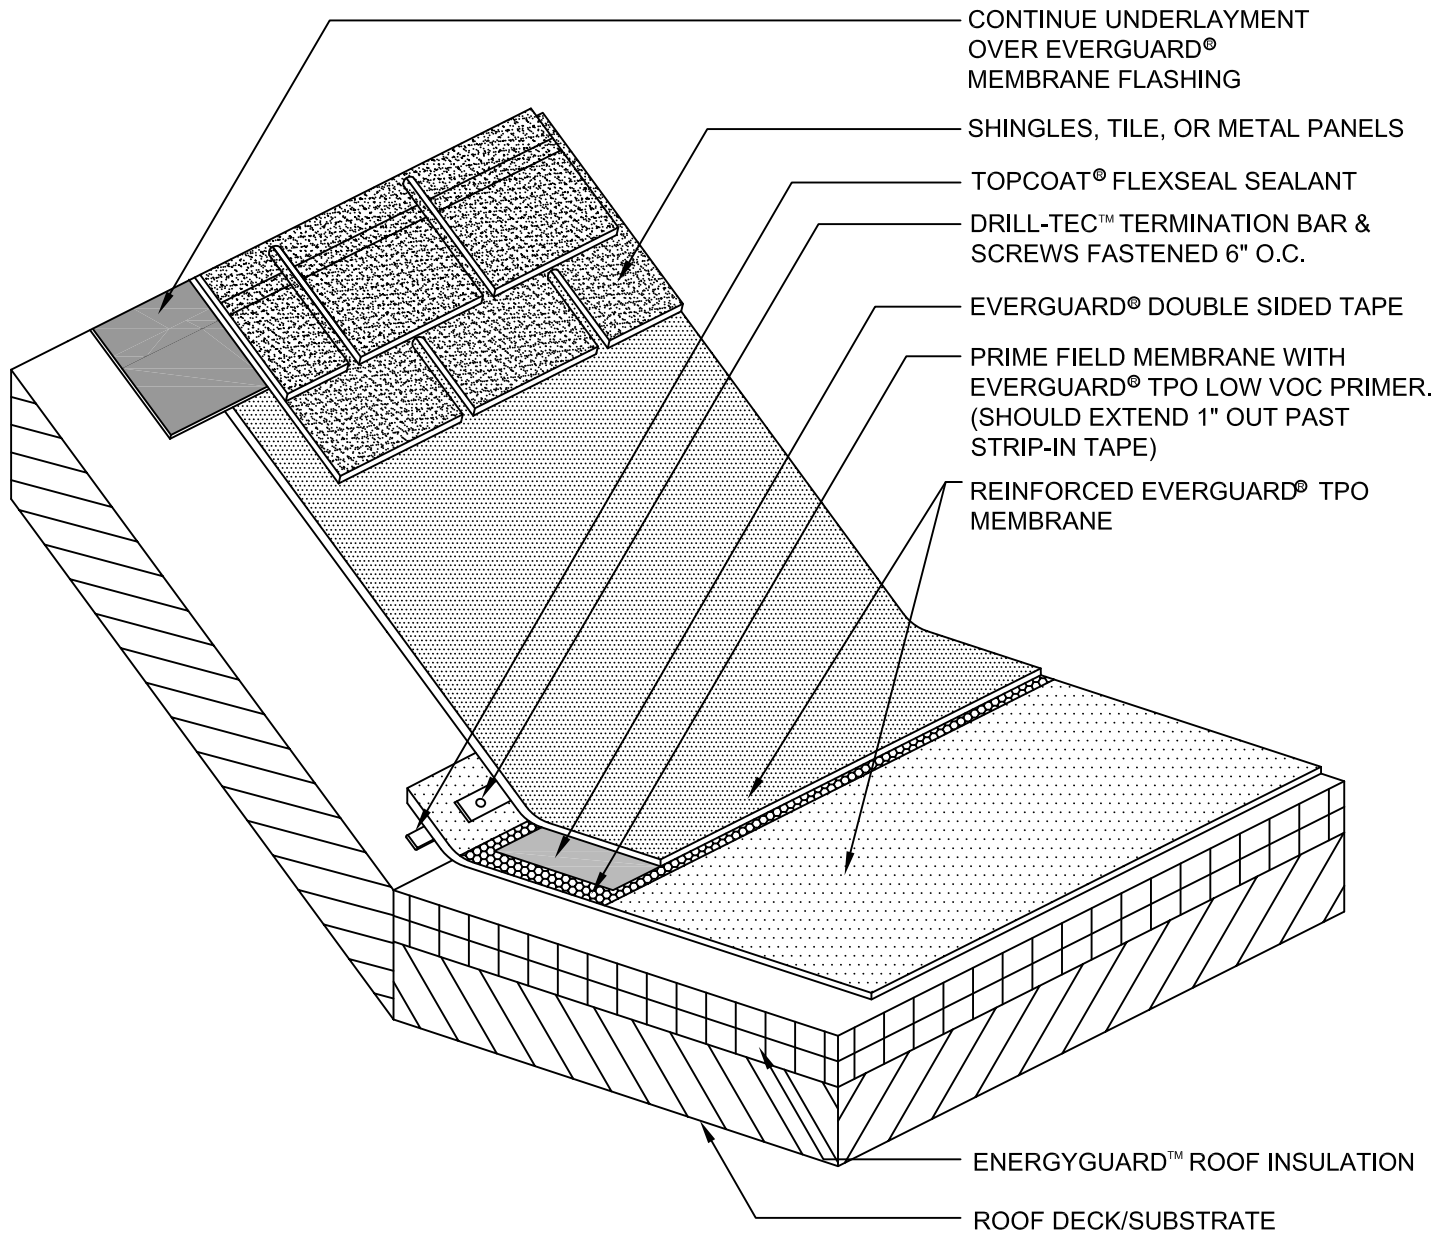

NOTE:

1. MINIMUM SLOPE IS 2:12.
2. BE SURE TO CLEAN METAL WITH EVERGUARD® TPO SEAM CLEANER BEFORE PRIMING.
3. APPLY TOPCOAT FLEXSEAL CAULK GRADE TO ALL CUT EVERGUARD® MEMBRANE EDGES.
4. MEMBRANE MUST BE PRIMED AND DRY PRIOR TO APPLYING EVERGUARD® DOUBLE SIDED TAPE.



EverGuard
SINGLE-PLY ROOFING SYSTEMS
SPECIAL CONSTRUCTION
SERIES

DRAWING #

760

STEEP SLOPE TIE-IN DETAIL

THIS DETAIL APPLIES TO:

Taped Seam
Systems

www.gaf.com
1 Campus Drive,
Parsippany, NJ 07054

SCALE
N.T.S.

REVISION DATE
5-1-15