Application Instructions

StarterMatch® Starter Strip Shingles

Updated: 6/15



Starter Strip Shingle

APPLICATION INSTRUCTIONS

First Starter Course: Install GAF WeatherBlocker™ Starter Strip Shingles (see Figure 1).

Second Starter Course: Use StarterMatch[™] Starter Strip Shingles.

Trim 5" (127 mm) and apply as shown (see Figure 2).

Figure 1


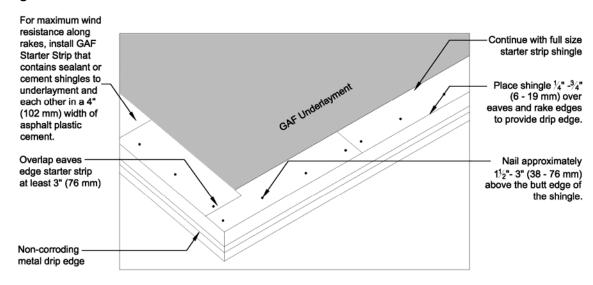


Figure 2

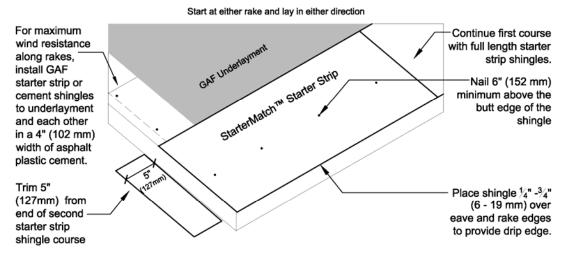

NOTE: The butt joints of the first starter course must be offset from the butt joints of the second starter course of shingles by at least 4" (102 mm). For long eaves, a 12" (305 mm) piece of starter shingle may need to be installed periodically in the first starter course to adjust the offset.