

**SHINGLE
INSTALLATION**

Start at either rake and lay in either direction


First Course:
Start with full shingle

Second Course:
Trim 6" (152mm)
off first shingle

Third Course:
Trim 11" (279mm)
off first shingle

Fourth Course:
Trim 17" (432mm)
off first shingle

**Remaining
Courses:**
Repeat the
1st - 4th course
instructions on the
remaining courses,
starting the fifth course with a full shingle.

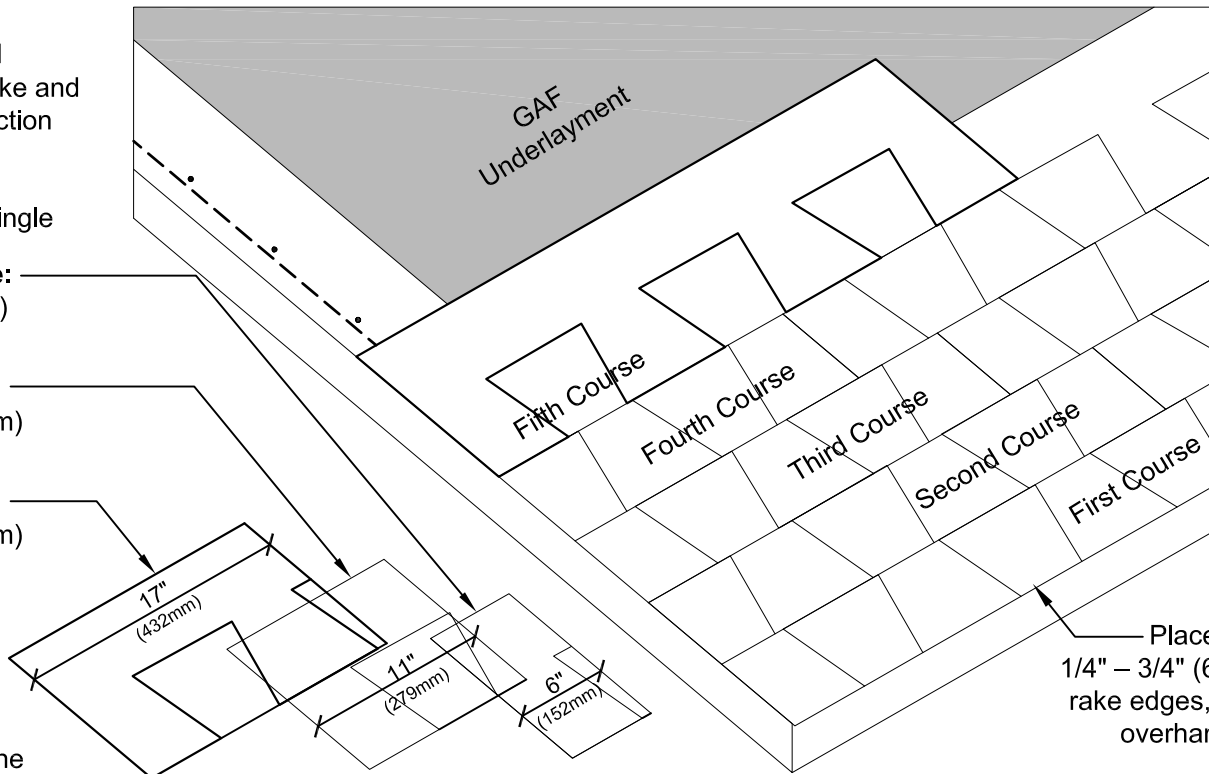

NOTES:

1. Continue each course with whole shingles.
2. Strike a chalk line about every 6 courses to check parallel alignment with eaves.

Place first course of shingles 1/4" – 3/4" (6–19mm) over eave and rake edges, covering starter course overhang, to provide drip edge.



1361 Alps Rd.
Wayne, NJ 07470
www.gaf.com

BRAND SERIES

**TIMBERLINE
SERIES**
Lifetime Shingles

REVISION DATE

1-01-12

SCALE

N.T.S

SHINGLE INSTALLATION DETAIL

DETAIL NUMBER

04

DETAIL REFERENCE

SS-TS