

SHINGLE INSTALLATION

Start at either rake and lay in either direction

First Course:

Start with full shingle.
Trim 1/2" (3mm) notch.

Second Course:

Trim 5" (127mm) off first shingle

Third Course:


Trim 10" (254mm) off first shingle

Fourth Course:

Trim 15" (381mm) off first shingle

Remaining Courses:

Repeat the 1st - 4th course instructions on the remaining courses, starting the fifth course with a full shingle. Trim 1/2" (3mm) notch.

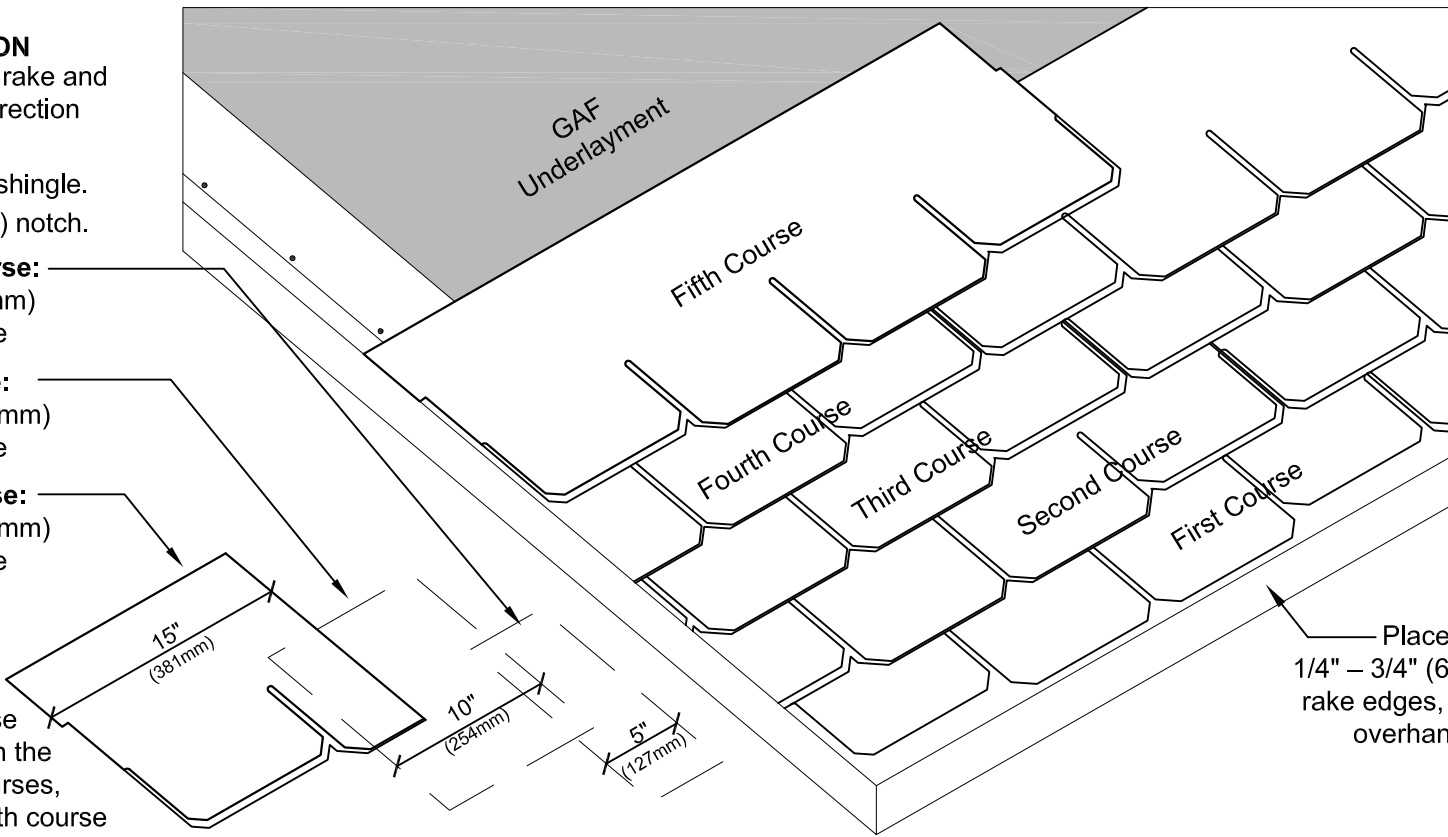

NOTES:

1. Continue each course with whole shingles.
2. Strike a chalk line about every 6 courses to check parallel alignment with eaves.

Place first course of shingles 1/4" - 3/4" (6-19mm) over eave and rake edges, covering starter course overhang, to provide drip edge.

Shingle exposure should be 6 1/2" (165 mm) - 7 1/8" (181 mm).



1 Campus Drive
Parsippany, NJ 07054
www.gaf.com

BRAND SERIES

**WOODLAND
SERIES**
Lifetime Shingles

REVISION DATE

11-21-17

SCALE

N.T.S

SHINGLE INSTALLATION DETAIL

DETAIL NUMBER

04

DETAIL REFERENCE

SS-WLD