


Application Guide

SilShield* Silicone Elastomeric Coating Optic*Translucent Silicone Coating

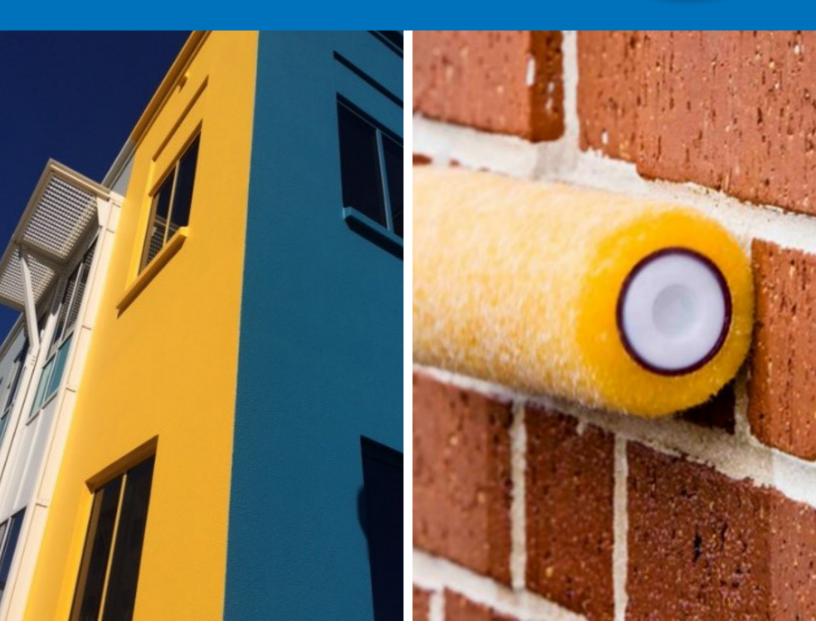



260 Hudson River Road Waterford, NY 12188 commercial.services@momentive.com

gesilicones.com

Product Description

GE SilShield[™] 3100 Silicone Architectural Coating and GE Optic[™] 3101 Translucent Silicone Coating are low VOC¹ 100% silicone elastomeric coatings used to provide a waterproof barrier to vertical and horizontal above-grade surfaces. Refer to Technical Data Sheets for Key Features & Typical Benefits.

GE SilShield 3100 Silicone Architectural Coating can be manufactured to nearly any color. Contact a Momentive Performance Materials (MPM) representative or visit www.gesilicones.com to request a color fan deck or for color matching needs.

GE Optic 3101 Coating is translucent/clear, allowing visibility to the substrate beneath or to allow the passage of light.

Application Conditions

Coating is best applied when the temperature is above 20°F (-7°C) as frost or moisture are less likely to be present on the surfaces to be coated. Coating may be applied in colder temperatures under certain conditions; refer to the Momentive Performance Materials (MPM) technical bulletin "Cold Weather Installation Guidelines" available at www.gesilicones.com for additional information. Surface temperature of the substrate to be coated should be below 120°F (49°C).

These coatings need atmospheric moisture to properly cure, and cure speed will vary relative to ambient temperature and humidity. As temperature and humidity increase, cure speed will also increase. In typical conditions, a tack free surface should be attainable in 1-2 hours.

Application Methods

Coating can be applied by roller, power roller, brush, or airless power sprayer. Rollers should be solvent resistant and have a nap of 3/4 to 1 1/2- inch (19 mm to 38 mm) in order to achieve the recommended coverage. Utilizing the minimum nap necessary to achieve required film thickness is recommended when a smoother final finish is desired. Equipment should be capable of delivering 3000 PSI (207 bar) at the spray tip. Please contact a technical representative for assistance with selecting an appropriate power roller or power sprayer.

Removal of uncured product from equipment can be accomplished by flushing with mineral spirits. Coating should not be left in equipment and hoses for prolonged periods of time unless all hoses, piping connections and pump seals are vapor locked and lined/sealed with materials designed to prevent product from curing and adhering internally. Inadequate lining and seals will allow sufficient moisture vapor intrusion to gradually form cured material on hose walls and connections, resulting in increased operating pressures and material flow restrictions.

SilShield* 3100 Coating Application

System Components

In order to achieve a warrantable application, the silicone membrane must be continuous. This can be accomplished using a combination of silicone components. The most commonly used GE Silicones products for this application are:

- SilShield 3100 Silicone Architectural Coating
- SilPruf* family of Silicone Sealants
- SCS2801 SilGlaze* II Translucent Silicone Sealant
- UltraSpan* Pre-cured Silicone Weatherstrip and Silicone Transition Sheet

¹Based on VOC content of less than 50 g/L, as provided for in the 06/2018 US EPA (40 CFR 59) and the 02/2016 South Coast AQMD (Rule 1113) VOC emission standards for architectural coatings.

SilShield coating should NOT be considered for:

- Walking or traffic surfaces
- Continuous water immersion applications
- Surfaces which are wet, dusty, oily, mildewed, heavily chalked, blistered or structurally unsound
- Building materials which might bleed oil or solvents such as: impregnated wood and certain vulcanized rubber gaskets or foams, tapes or failed sealants and caulking compounds. (Compatibility testing is available and recommended.)

Surface Prep

Surfaces to be coated must be clean, dry, structurally sound and free of loose particles, dirt, dust, rust, oil, frost, mildew, and other contaminants. For most applications, cleaning with a high-pressure water wash should be satisfactory. Allow sufficient time after cleaning for the substrate to dry completely prior to the application of coating.

Leak paths, such as cracks and holes, that are greater than 1/32" inch (1 mm) width must be repaired prior to coating application. Cracks can be filled with GE SilPruf or GE SilGlaze II silicone sealant. Narrower cracks can be otherwise repaired by brushing or dabbing coating into the crack with a brush.

Silshield and Optic coatings resist the formation of efflorescence by blocking the migration of water/salt mix to the surface of the porous material.

If efflorescence is present it should be removed prior to application of coating using standard industry practices. Allow new concrete and masonry to cure for a minimum of 30 days then prepare by using a wire brush to remove loose mortar and clean utilizing pressure washing. Alternately, these coatings may be applied prior to the 30-day cure time of new masonry when:

- a.) On-site testing verifies acceptable coating adhesion
- b.) Or GE Concrete Sealer is utilized

Application Film Thickness

Dry Film Thickness (DFT) is approximately 25% less than the applied wet film thickness. On vertical surfaces, SilShield* coating should be applied in 2 coats yielding a minimum final DFT of 10 mils (254 microns). Each coat should be applied at approximately 7 mils (178 microns) wet to yield 5 mils dry (127 microns) per coat. Subsequent coats may be applied when the previous coat is dry to the touch or is firm enough to resist disturbance when rolling or brushing, typically less than 2 hours. On horizontal surfaces, it may be applied in a single coat up to a DFT of 20 mils (508 microns).

Coverage

Maximum possible coverage rate at 10 mils (254 microns) DFT is approximately 120 ft² (11.2 m²)/gallon. Actual coverage rates should be verified using a mockup and will vary based on substrate texture, porosity, application method, applicator and other factors.

On surfaces where adhesion performance and coating appearance has not previously been tested, a small unobtrusive area should be coated to verify proper color, adhesion, coverage rates and hiding power, prior to coating the entire surface.

Boxing

"Boxing" SilShield coating is recommended when painting surfaces that require more than one pail. Boxing is accomplished by combining pails into one large container and mixing thoroughly to form a batch. If possible, box enough pails to cover each face of the wall with its own batch. Use architectural breaks such as corners, reveals, or other façade features to start boxing a new batch of SilShield.

Start/Stop

During application, it is important maintain a wet leading edge. If the coating dries prior to completion of an application area, it can result in a "dry edge" that creates a visible line.

To maintain a wet edge, an entire wall should be painted at once when at all possible. Starting and stopping at defined architectural breaks is ideal.

If the coating must be applied to a dry edge, the best way to minimize visible lap marks is to feather out the coating along the edges. For the second application, the coating should be applied in the opposite direction in a crisscrossing manner.

When projects are performed in multiple phases and all coating cannot be ordered for the entire project at once, it is the user's responsibility to ensure that successive batches of material are acceptable for color when applied. External variables may create visual differences between batches. These variables may include: Lighting, UV exposure, time of day, weathering, cleanliness, application method and/or other factors. A small area should be applied adjacent to a previously coated area, allowed to cure, and then evaluated for color prior to proceeding with coating application.

Optic 3101 Translucent Coating Application


System Components


In order to achieve a warrantable application, the silicone membrane must be continuous. This can be accomplished using a combination of silicone components. The most commonly used GE Silicones products for this application are:

- **Optic Translucent Silicone Coating**
- SCS2801 SilGlaze II Translucent Silicone Sealant
- SilPruf family of Silicone Sealants
- UltraSpan Pre-cured Silicone Weatherstrip and Silicone Transition Sheet

Surface Conditions

Some substrates can present challenges to attaining a continuous membrane. Such examples include extremely rough substrates, heavy aggregate concrete, raked or recessed mortar joints, grapevine mortar joints, and other similar surfaces. Additional measures may be required, such as brushing in certain mortar joints. Examples include:

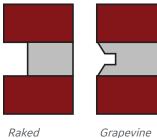





Raked

Surface Prep

Brushing in raked mortar joints

Surfaces that will receive coating must be clean, dry, structurally sound and free of loose particles, dirt, dust, rust, oil, frost, mildew, and other contaminants. For most applications, cleaning with a high-pressure water wash should be satisfactory. Allow sufficient time after cleaning for the substrate to dry completely to the touch prior to the application of coating. Leak paths, such as cracks and holes, that are greater than 1/32" inch (1 mm) width must be repaired prior to coating application. Repairs should match the existing substrate as closely as possible in texture and color, as the Optic coating has minimal hiding power.



Filling voids with SilGlaze II Translucent sealant

Cracks can be filled with GE SilPruf or GE SilGlaze II silicone sealants. Typically, a very small hole in the tip of the nozzle works best, allowing the sealant to be injected into narrow openings. On masonry substrates, GE SilGlaze II translucent silicone sealant is often used for filling gaps.

Narrower cracks can be otherwise repaired by brushing or dabbing coating into the crack with a brush.

Allow new concrete and masonry to cure for a minimum of 30 days then prepare by using a wire brush to remove loose mortar and clean utilizing pressure washing. Alternately, Optic coating may be applied prior to the 30 day cure time of new masonry when on-site testing verifies acceptable adhesion.

Non-porous substrates such as steel, aluminum, galvanized metal, glazed tile etc. should be thoroughly clean and dry.

Application Film Thickness

Dry Film Thickness (DFT) is approximately 27% less than the applied wet film thickness. On vertical surfaces, Optic coating should be applied in 2 coats yielding minimum final DFT of 10 mils (254 microns). Each coat should be applied at approximately 7 mils (178 microns) wet to yield 5 mils dry (127 microns) per coat. Subsequent coats may be applied when the previous coat is dry to the touch or is firm enough to resist disturbance when rolling or brushing, typically less than 2 hours. On horizontal surfaces, it may be applied in a single coat up to a DFT of 20 mils (508 microns).

Coverage

Maximum possible coverage rate at 10 mils (254 microns) DFT is approximately 117 ft² (10.9 m²)/gallon. Actual coverage rates should be verified using a mockup, and will vary based on substrate texture, porosity, application method, applicator and other factors.

Appearance

Optic coating will typically alter the appearance of a substrate to some degree. It is strongly recommended that a mockup on actual project substrates be performed and approval of the appearance be obtained from the owner or the owner's representative prior to application. The degree of appearance change is dependent on a number of factors, but is usually closely related to substrate porosity, with more porous substrates showing a higher change in contrast and darkening.

As the thickness increases the transparency decreases and a milky appearance may develop with overapplication. Generally, the darker the substrate, the more noticeable the loss of transparency becomes as thickness increases. Care should be taken to avoid overapplication.

When addressing cracks and gaps with the use of a sealant, it is typically less noticeable if the sealant is similar to the color of the mortar rather than masonry units even when the cracks are in the face of the masonry units themselves. Casting sand particles or mortar/grout dust into the wet sealant or coating can also be utilized to achieve a final appearance that resembles that of the mortar or grout.

Adhesion test procedure (similar to ASTM C794)

This test procedure can be utilized by embedding GE RF100 reinforcing fabric, wire mesh, cheesecloth or similar materials. Prepare substrate surfaces in accordance with the product datasheet. The substrate should be clean, dry, structurally sound and free of loose particles, dirt, dust, rust, oil, frost, mildew, and other contaminants.

- 1. After substrate preparation, apply a layer of the coating (by spray, brush or roller) several mils thick (10-15 mils should suffice for most substrates).
- 2. While coating is still wet, embed a 1 to 2-inch wide strip of fabric (RF100 or similar) into the coating leaving a tab of sufficient length uncoated and accessible for hand pull. Dabbing the fabric with a brush is an effective way to ensure that it is sufficiently wetted into the coating.
- 3. After placement, immediately apply a second coat to fully embed the fabric (see photo 1 & 2).
- 4. Allow 24 to 48 hours prior to performing the test pull.
- 5. Perform test by pulling the fabric away from the surface at an angle between 90 and 180 degrees and at a slow steady rate. Continue pulling until the coating tears cohesively or releases from the surface. (photo 3)
 - Cohesive failure of the coating (>75% of coating remains on substrate) represents acceptable adhesion. (photo 3)
 - A fish scale can also be utilized if desired to generate peel force value. When this is chosen, a minimum 5 pounds PLI (pounds per linear inch) is required for acceptable adhesion. Cohesive failure is not required.
 - Coating that releases easily from the substrate represents poor adhesion. If this occurs, contact a Momentive representative to discuss alternate surface preparations that may improve adhesion quality.

6. The pull test(s) should be photographed (or videotaped) for project records and/or proof of performance. Any suspect result should be reviewed with a Momentive representative prior to proceeding.



Photo 1

Photo 2

Photo 3

Cleaning and Maintenance

While these coatings have good resistance to surface contaminants, coating cleanliness is not warranted. A regular visual inspection and maintenance program can help reduce the likelihood of permanent appearance changes due to surface contaminants.

Routine cleaning can typically be accomplished with power washing. Power washing should use a maximum 500 psi water blast with the washer tip at least 24" from the wall and not directed at a sharp or perpendicular angle. Use caution and verify that the existing coating or other components are not being damaged in the cleaning process. All surfaces, including horizontal, vertical, and/or sloped ledge surfaces, should be cleaned equally. Not all contaminants may be able to be removed.

In locations where power washing alone is not fully effective, agitation with a soft bristle brush / wetted white cotton towel, and the use of a cleaning agent has been shown to be effective. Tested cleaning agents:

ZEP® Commercial Heavy-Duty Citrus Degreaser

Consumer Dish Soap (Dawn®)

In this test², a 50/50 solution of warm water/cleaning agent was combined in a spray bottle, sprayed onto the soiled area and immediately wiped with a clean cloth until the solution was completely removed from the surface. Power washing was performed on similarly soiled surfaces. Results were visually observed and recorded. Performed over the course of 10 days, the results indicated that the cleaning agent method was more effective at removing normal build-up on the surface of the coating than power wash alone, and the cleaning agent solution left no visible indications of incompatibility with the coatings.

Specific Surface Contaminants:

Mildew/organics: Scrub with a soft bristle brush with a 5% bleach solution. Additionally, other mildewcide products may be used effectively. Test a small, inconspicuous area prior to broader application to ensure compatibility and effectiveness.

Oil/Grease: Hot water solution with Trisodium phosphate (TSP)

Graffiti: Remove non mechanical graffiti such as ink and paint as soon as possible. Surface texture, UV exposure, type of graffiti product, length of time on the coating, and other factors can affect the ability to remove it effectively. Cleaning methods listed above can be utilized for most types of graffiti.

Warranty

A standard limited warranty is provided under Momentive's General Terms & Conditions of Sale & Delivery, or as otherwise printed on the back of order acknowledgments and invoices.

A project-specific Limited Performance Warranty may be issued for buildings other than single-family residential dwellings through a formal application process; such a warranty requires, in general, that SilShield or Optic be applied in strict accordance with published application guidelines and documented adhesion testing be performed. Contact your MPM Sales Representative for program details or to apply for a project-specific warranty. This warranty is subject to certain restrictions and does not provide coverage for faults attributable to workmanship or the physical appearance of the applied coating.

For additional information or to contact a representative, please visit www.gesilicones.com.



gesilicones.com

THE MATERIALS, PRODUCTS, AND SERVICES OF MOMENTIVE PERFORMANCE MATERIALS INC. AND ITS SUBSIDIARIES AND AFFILIATES (COLLECTIVELY "SUPPLIER"), ARE SOLD SUBJECT TO SUPPLIER'S STANDARD CONDITIONS OF SALE, WHICH ARE INCLUDED IN THE APPLICABLE DISTRIBUTOR OR OTHER SALES AGREEMENT, PRINTED ON THE BACK OF ORDER ACKNOWLEDGMENTS AND INVOICES, AND AVALLABLE UPON REQUEST. ALTHOUGH ANY INFORMATION, RECOMMENDATIONS, OR ADVICE CONTAINED HERRIN IS GIVEN IN GOOD FAIL, SUPPLIER'S STANDARD (CONDERS) OR MONED THAT THE RESULTS DESCRIBED HERRIN WILL BE OBTAINED UNDER RED-USE CONDITIONS, OR (II) AS TO THE EFFECTIVENESS OR IMPLIED, (I) THAT THE RESULTS DESCRIBED HERRIN WILL BE OBTAINED UNDER RED-USE CONDITIONS, OR (II) AS TO THE EFFECTIVENESS OR SAFETY OF ANY DESIGN INCORPORATING ITS PRODUCTS, MATERIALS, SERVICES, RECOMMENDATIONS, OR ADVICE. EXCEPT AS PROVIDED IN SUPPLIER'S STANDARD CONDITIONS OF SALE, SUPPLIER AND ITS REPRESENTATIVES SHALL IN NO EVENT BE RESPONSIBLE FOR ANY LOSS RESULTING FROM ANY USE OF ITS MATERIALS, PRODUCTS, OR SERVICES DESCRIBED HERRIN WILL BE finaliscipaters full responsibility for making its own determination as to the suitability of Supplie's materials, services, recommendations, or advice for its own particular use. Each user must identify and perform all tests and analyses necessary to assure that its finished parts incorporating Supplie's protectiveLS, materials, or services will be safe and suble for or waise any provision of Supplie's rotating, product, service, or design is intended, or should be construed, to grant any license under any pattent or other intellectual property right.

GE is a registered trademark of General Electric Company and is used under license by Momentive Performance Materials Inc. Copyright 2020 Momentive Performance Materials Inc. All rights reserved.