


## Cornerbeads

### 1 1/4" x 1 1/4" Cornerbead


This all-metal drywall cornerbead provides lasting protection to exposed edges of wallboard and smooth, straight corners. It can be either nailed or clinched onto framing through wallboard panels.

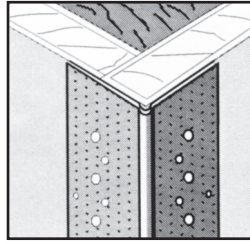

Prod#	Lgth	Pcs/Ctn	Ft/Ctn	Ctns/Pallet	Unit	Wt/Ctn
42030	7 ft	86	602	40	MF	63
42040	8 ft	75	600	40	MF	63
42050	9 ft	67	603	40	MF	63
42060	10 ft	60	600	40	MF	63
42070	12 ft	50	600	40	MF	63

### Open Angle 135 Degree Cornerbead

135 Degree Cornerbead provides a straight smooth finish for open angles greater than 120 degrees.

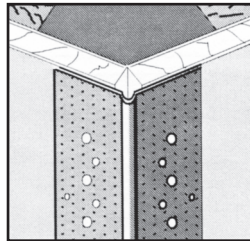


Prod#	Lgth	Pcs/Ctn	Ft/Ctn	Ctns/Pallet	Unit	Wt/Ctn
42080	8 ft	75	600	40	MF	63
42085	9 ft	67	603	40	MF	63
42090	10 ft	60	600	40	MF	63

## L Metal

### L Metal

L Metal trim is used as a finishing edge for wallboard stops around door and window openings. Installation is made easier because the back flange is eliminated.


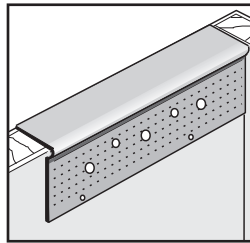


Prod#	Lgth	Wth	Pcs/Ctn	Ft/Ctn	Ctns/Pallet	Unit	Wt/Ctn
42110	8 ft	1/2"	75	600	40	MF	51
42130	10 ft	1/2"	60	600	40	MF	51
42150	8 ft	5/8"	75	600	40	MF	51
42170	10 ft	5/8"	60	600	40	MF	51
42171	8 ft	3/4"	75	600	40	MF	57
42172	10 ft	3/4"	60	600	40	MF	57
42173	8 ft	1"	75	600	40	MF	57
42174	10 ft	1"	60	600	40	MF	57

## J Metal

### J Metal

Provides a finished edge at door and window openings, and can be used where wallboard intersects or abuts dissimilar surfaces.

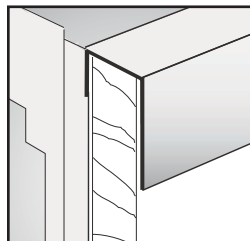

Prod#	Lgth	Wth	Pcs/Ctn	Ft/Ctn	Ctns/Pallet	Unit	Wt/Ctn
42091	8 ft	1/2"	50	400	40	MF	39
42092	10 ft	1/2"	40	400	40	MF	39
42093	8 ft	5/8"	50	400	40	MF	41
42094	10 ft	5/8"	40	400	40	MF	41