

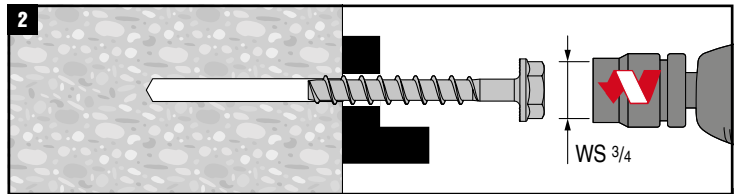


KWIK HUS-EZ	h_1^*	t_{fix}
1/2 x 2 1/2	2 7/8 - t_{fix}	0...1/4
1/2 x 3	3 3/8 - t_{fix}	0...3/4
1/2 x 3 1/2	3 3/8 - t_{fix}	0...1/2
1/2 x 4	4 3/8 - t_{fix}	0...1
1/2 x 4 1/2	4 7/8 - t_{fix}	0...1/4
1/2 x 5	5 3/8 - t_{fix}	0...3/4
1/2 x 6	6 3/8 - t_{fix}	0...1 3/4

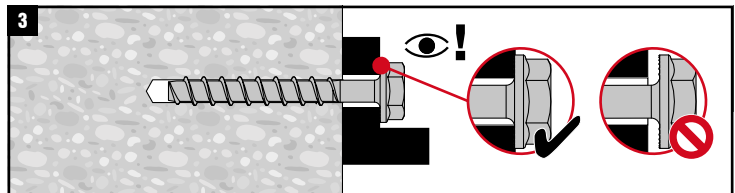

2.1	1/2 x 2 1/2...3	1/2 x 3 1/2...6		
SIW 22/18-A	✓	✓	✗	✗
SIW 22T/18T-A	✗	✗	✓	✓
	45 ft-lb	34 ft-lb	45 ft-lb	34 ft-lb

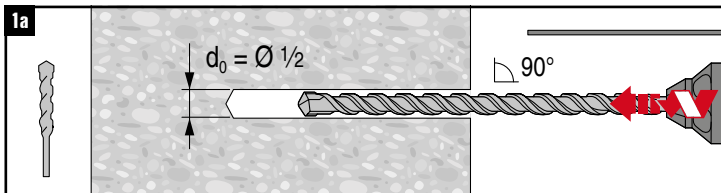

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.