

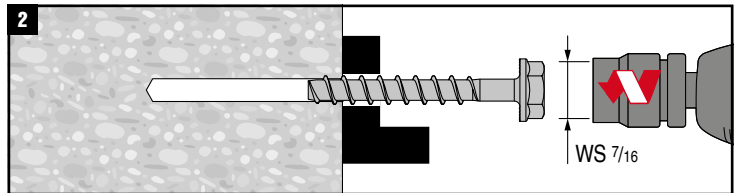


KWIK HUS-EZ	$h_1^*$	$t_{\text{fix}}$
1/4 x 1 7/8	2 1/4 - $t_{\text{fix}}$	0...1/4
1/4 x 2 5/8	3 - $t_{\text{fix}}$	0...1/8
1/4 x 3	3 3/8 - $t_{\text{fix}}$	0...1/2
1/4 x 3 1/2	3 7/8 - $t_{\text{fix}}$	0...1
1/4 x 4	4 3/8 - $t_{\text{fix}}$	0...1 1/2

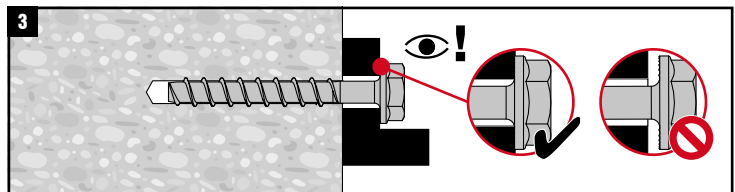

2.1		
SID 4 22-A/18-A	✓	✓
SIW 22/18-A	✓	✓
	18 ft-lb	21 ft-lb

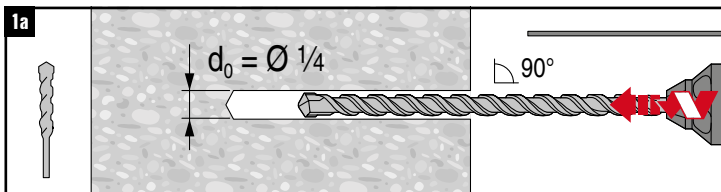

\*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve  $h_1$ , taking into account the depth of debris remaining in the hole.