

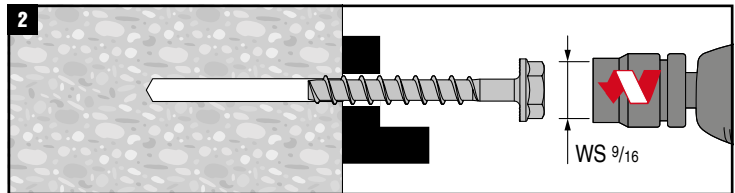


KWIK HUS-EZ	h_1^*	t_{fix}
$3/8 \times 3$	$3\ 1/4 - t_{\text{fix}}$	0...1/2
$3/8 \times 3\ 1/2$	$3\ 3/4 - t_{\text{fix}}$	0...1
$3/8 \times 4$	$4\ 1/4 - t_{\text{fix}}$	0...3/4
$3/8 \times 5$	$5\ 1/4 - t_{\text{fix}}$	0...1 3/4

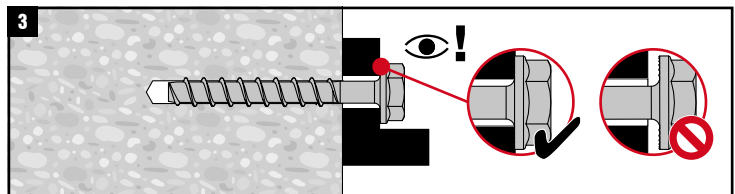

2.1		
SID 4 22-A/18-A	✓	✓
SIW 22-A/18-A	✓	✓
	22 ft-lb	

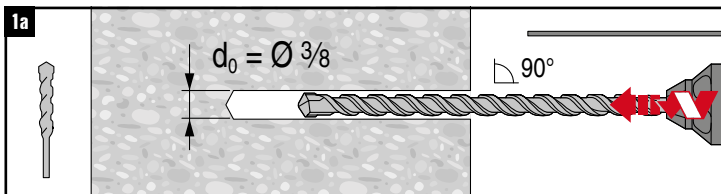

*For non-hole cleaning installation (steps 1a or 1b), make sure to drill deep enough to achieve h_1 , taking into account the depth of debris remaining in the hole.