


**SURFACE-MOUNTED CABINETS**

1. Place cabinet in position level to floor, and mark location of attachments on studding using 3/16" (5mm) holes as marking guides.
2. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors. For masonry walls, install expansion shields in wall at marked points.
3. Place cabinet in position and attach with Universal #10 x 2½" (64mm) self-drilling screws, or for masonry, appropriate screws for expansion shield.
4. Install handle in door (if provided).
5. Place fire extinguisher in cabinet

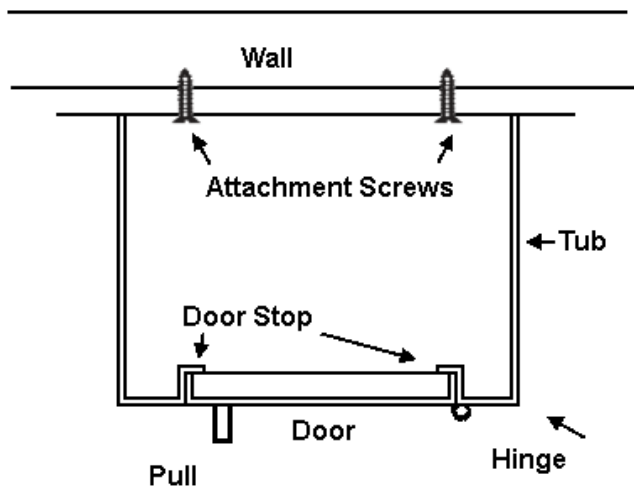

Finish	Description	Cleaning & Maintenance
Powder-coat Paint	Baked-on Painted Finish	Use a soft cloth and mild soap and water
US32D, #4	Satin Stainless Steel	Use a soft cloth and mild soap and water solution. After cleaning, thoroughly rinse with clear water to remove all traces of the solution and wipe dry to prevent water marks from forming. Stains which resist that treatment can usually be removed by polishing in the direction of the grain with a soft cloth and a non-abrasive stainless steel polish. Test in an unobtrusive area.



**JL INDUSTRIES**

**SEE PAGE 2 FOR RECESSED CABINET INSTALLATION**

©2022 ACTIVAR CONSTRUCTION PRODUCTS GROUP, INC.

**RECESSED SECURITY CABINETS**

**NON MASONRY WALLS:**

1. Frame in above, below and at both sides of the cabinet opening.
- Note:** On load bearing walls, the studs must be doubled on either side of the cabinet tub. If a stud must be cut to install the cabinet, a load bearing header must be installed above the cabinet tub.
2. Drill holes in sides of cabinet—at least 2 per side. Place cabinet in position, and mark position of holes on studs.
3. Remove cabinet and drill 5/32" (4mm) holes through studs at marked points. Install plastic wall anchors if required.
4. Place cabinet in position and attach with Universal #10 x 2 1/2" (64mm) self-drilling screws.
5. Install handle in door (if provided).
6. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary to remove any racking.

**MASONRY WALLS NEW CONSTRUCTION:**

1. 2 masonry anchors are provided on each side of the cabinet spaced at 7-1/2" from each other. Install cabinets as masonry walls are constructed, extending the 7" anchors between courses, and filling voids with cement.
2. Check cabinet door assembly before cement hardens, and adjust as necessary to remove any racking.
3. Protect cabinet during construction.
4. Install handle in door (if provided).

**MASONRY WALLS EXISTING CONSTRUCTION:**

1. Drill holes in sides of cabinet—at least 2 per side. Place cabinet in position, and mark position of holes on wall.
2. Remove cabinet. Install masonry anchors to receive threaded screws.
3. Place cabinet in position, and attach with appropriate sized fasteners.
4. Install handle in door (if provided).
5. Check cabinet door assembly for freedom of movement. If it binds, shim as necessary to remove any racking.



**Extend masonry anchors provided,  
for installation in new masonry  
construction.**



**JL INDUSTRIES**

©2022 ACTIVAR CONSTRUCTION PRODUCTS GROUP, INC.