
- 1. Apply and secure a bottom cap to wall, beginning directly above cove base, with appropriate fasteners.
- 2. Apply continuous retainer to wall directly above bottom cap with appropriate fasteners at 18" (457.2 mm) O.C.
- 3. Install top cap directly above aluminum retainer.
- 4. Snap precut vinyl cover in position. Cover should be lipped over one edge and pressure applied toward opposite leg from center with a "snap action" movement. Procedure should begin at bottom and be repeated as necessary for full height of cover.

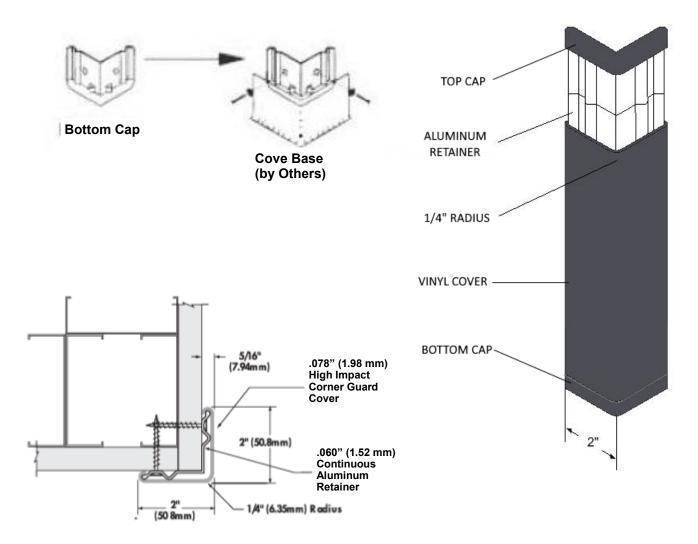



Distributor:	Quantity:
Contractor:	Approved By:
Model #:	Architect:
Project:	Date: © 2023 Activar Construction Products Inc

General Information—Maintenance

JL's vinyl corner guards will retain their original beauty with reasonable handling and care. To ensure that your wallcovering maintains its original appearance, please review the following guidelines.

To clean, dust it with a soft, damp cloth or chamois and wipe the surface gently. Use soap and lukewarm water to remove light dirt. After washing and rinsing, be sure to dry the surface by blotting with a damp cloth or chamois to prevent streaking and water spots.

For general (routine) cleaning, the following mild detergents and multi-purpose cleaners are recommended:

Joy®Fantastik®Janitor in a DrumFormula 409®Cascade®Isopropyl alcoholall® Detergent (powder)SoftScrub®

Normal cleaning methods may not remove ground in dirt or grease. To remove dirt or grease from texture valleys, a short stiff bristled brush should be used to loosen the material followed by a water rinse.

Cleaners Not Recommended:

Wisk®Meguiar's® Carpet & Upholstery CleanerIsopar™ KPersil® ProClean®AbrasivesPine-Sol®GasolineDynamoEndust®TetrahydrofuranKeroseneHexane

Lestoil® Methanol Goof Off "Works The 1st Time!"*

all® Detergent (liquid) Ketones

Brake Fluid Cold Power® Liquid

*Note: The chemical composition of Goof Off has been reformulated. This updated formulation has been observed to have an affect on Korogard sheet. The previous formulation may be identified by the phrase "The Professional Cleaner" on the can and is produced by Valspar®. This formulation is still recommended for use on Korogard sheet. The updated formulation may be identified by the phrase "Works The 1st Time!" on the can and is produced by W.M. Barr & Co. Korogard is investigating suitable alternatives to the Goof Off product.

In-Use Spot Cleaning

Tough marks or stains due to spills, graffiti, heal marks, etc., usually require cleaners such as DWR-II®, Zep® Write Away, and Valspar® Goof Off to provide good results when trying to remove graffiti marks. These are specialized spot cleaners that should be used for small areas only. A short, stiff, bristled brush may be necessary to remove some stains from the textured surface. These cleaners should also be rinsed thoroughly with clean water. Some heel marks or abrasions from rubber bumpers on carts may be removed simply by brushing without a cleaner.