


INSTALLATION INSTRUCTIONS: SGVA CORNER GUARD SYSTEM


1. Cut retainer (with base attached) to full height. Install optional top cap clinching in place at top of retainer. Attach continuous retainer unit to corner using appropriate fasteners at 18"(457.2mm) O.C. maximum.
2. Finish walls to specification, taping and spackling over retainer flanges. Install wallcovering or paint as specified.
3. Snap precut cover in position. Cover should be lipped over one edge and pressure applied toward opposite leg from center with a "snap action" movement. Procedure should begin at bottom and be repeated as necessary for full height of cover.
4. Contact your **ACPG** representative for information on replacement parts

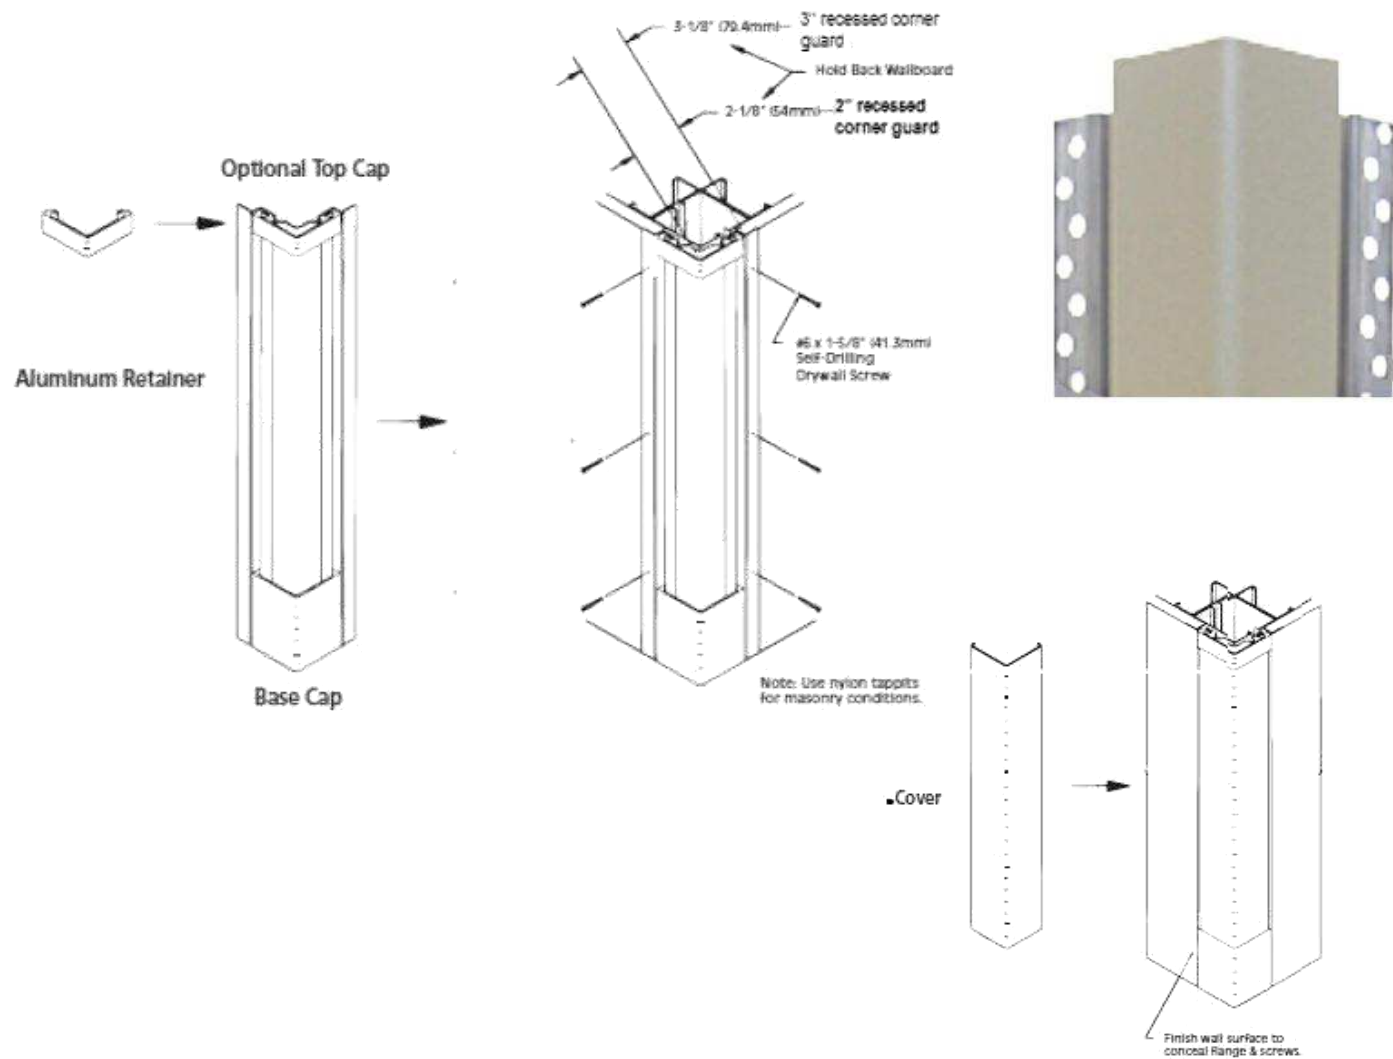


ACTIVAR
INC.
Construction Products Group
www.activarcpg.com

SGVA CORNER GUARD SYSTEM INSTALLATION & MAINTENANCE

HEADQUARTERS & CUSTOMER SERVICE: 4450 WEST 78TH ST CIRCLE, BLOOMINGTON, MN 55435-5416 PH: 800-554-6077 FAX: 952-835-2218 EMAIL: SALES@JLINDUSTRIES.COM WWW.ACTIVARCPG.COM
ACPG SOUTHEAST (THOMAS ENTERPRISES): FT MEYERS, FL ACPG WEST COAST (SAMSON): COMMERCE, CA WAREHOUSES: DALLAS TX, LANCASTER PA, ATLANTA GA, CHICAGO, IL, SEATTLE WA 8/13/13

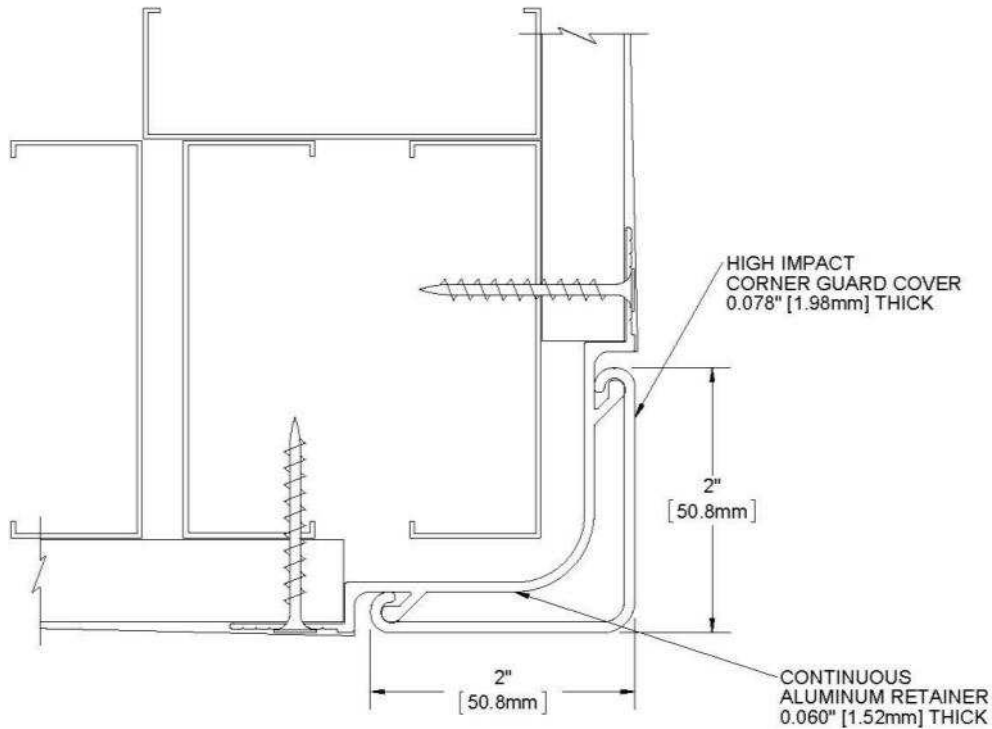

SGVAS-90 INSTALLATION DETAIL

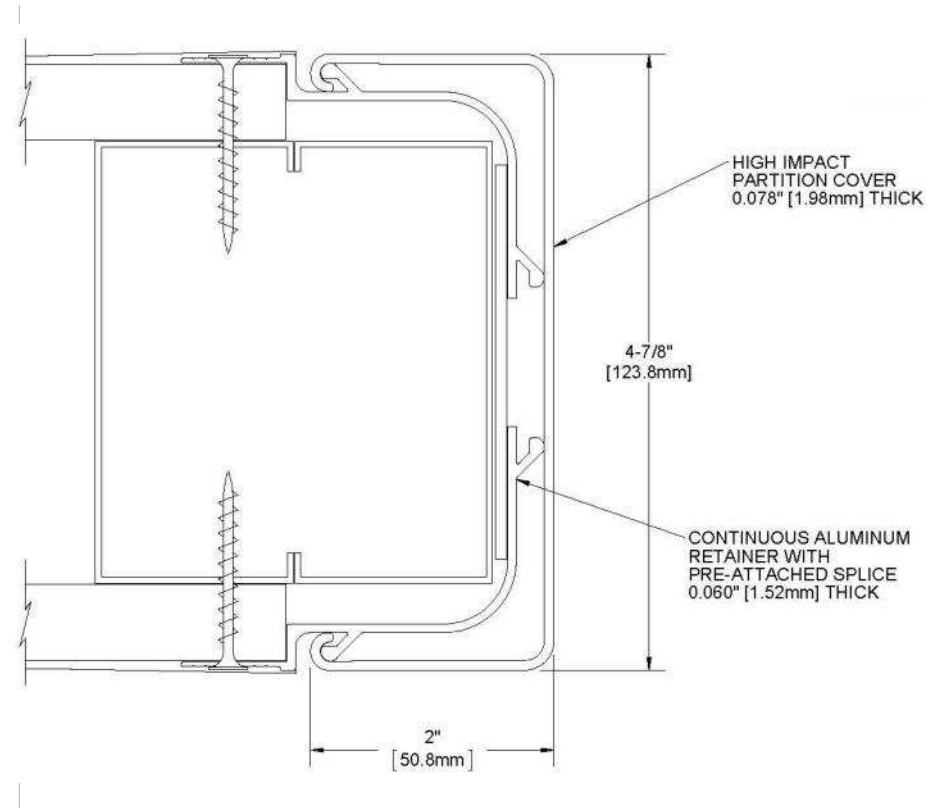

SGVAEW INSTALLATION DETAIL

MAINTENANCE:

1. Use mild detergent to clean soiled surfaces. Do not use powdered cleansers, bleach and ammonia based cleaners as they may leave a residue embedded in the cover surface. Pen marks, paint and graffiti generally wash off easily with mild soap and water. Completely rinse the surface with clean water when complete.
2. Tough marks or stains may require a heavy duty cleaner such as "Crown Anti-Vandal Spray" or "DWR-II". These specialized spot cleaners should only be used on small areas and tested for color fastness prior to applying in a highly visible area. Rinse thoroughly with clean water to remove the residue from these cleaner.