



# HUSKY<sup>®</sup> Yellow Guard<sup>®</sup> VAPOR BARRIER

## Pipe Penetration Detail 1


1. Prepare a square piece of Husky<sup>®</sup> Yellow Guard<sup>®</sup> vapor barrier with a hole in the center.

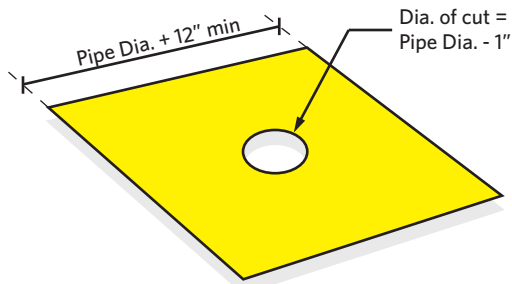


2. Prepare pipe boot.

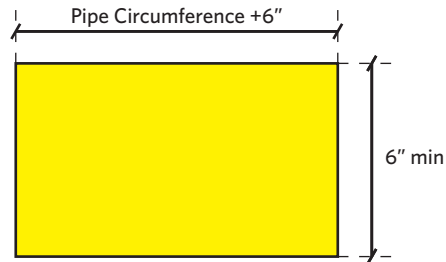


3. Cut a circle in the Husky<sup>®</sup> Yellow Guard<sup>®</sup> vapor barrier for pipe penetration.

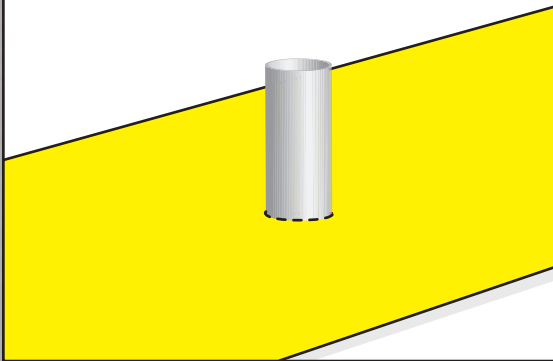


4. Wrap and tape boot around pipe.

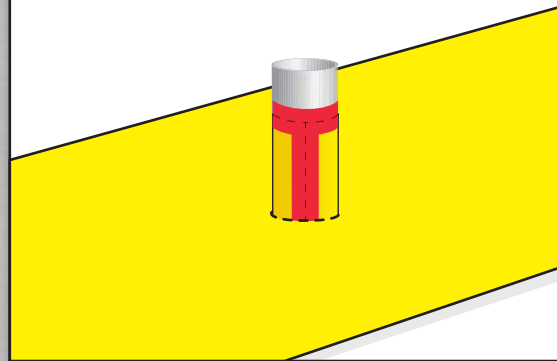

5. Push square piece down over pipe for a tight fit all the way to the base of pipe with a 1/2" lip.

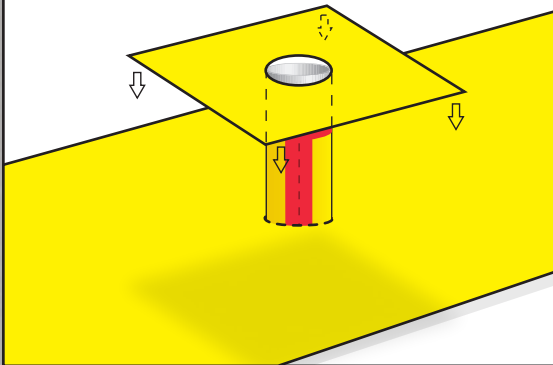

6. Tape the square piece to the pipe boot and around all edges.

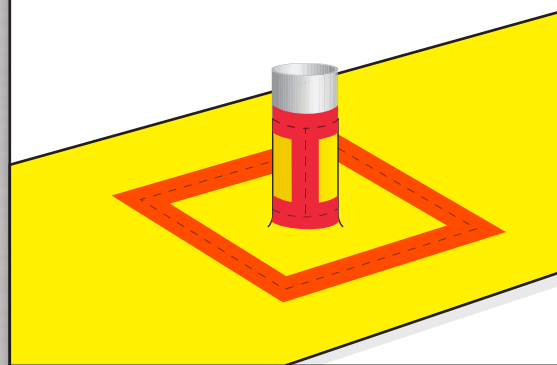

Not To Scale

The drawings and information provided herein have been compiled by Poly-America, L.P. and to the best of our knowledge accurately represent Poly-America's Yellow Guard<sup>®</sup> vapor barriers at the time of publication. These drawings and information are offered "as is," for preliminary planning purposes only, without any warranties of any kind. Final determination of suitability of these drawings and information or products for the use contemplated and its manner of use are the sole responsibility of the end user. Poly-America, L.P. assumes no liability in connection with the use of this information and these products. This information is subject to change without notice.

## Poly-America

2000 W. Marshall Dr. • Grand Prairie, TX 75051


800-527-3322 • 972-337-7610 • Fax 972-337-7016 • [www.yellowguard.com](http://www.yellowguard.com) • [yellowguard@poly-america.com](mailto:yellowguard@poly-america.com)

57-023-0107B Rev 06/19


# HUSKY<sup>®</sup> Yellow Guard<sup>®</sup> VAPOR BARRIER

## Pipe Penetration Detail 2


1. Cut a piece of Husky<sup>®</sup> Yellow Guard<sup>®</sup> vapor barrier.

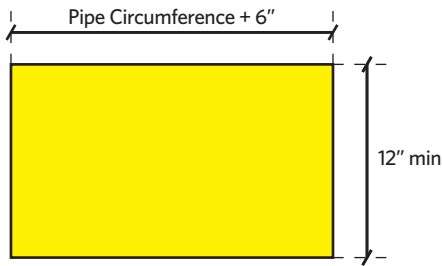


2. Cut 6\" slits along the length of the film.

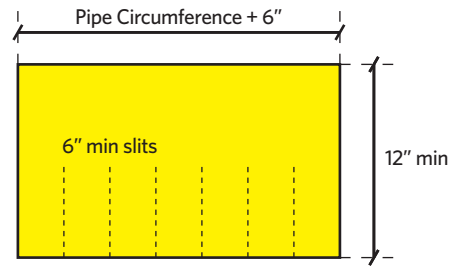

3. Cut a circle in the Yellow Guard<sup>®</sup> panel for pipe penetration.

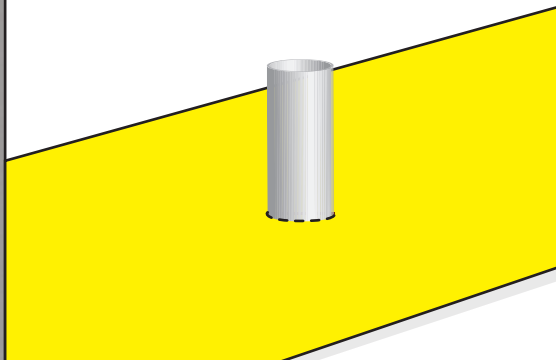

4. Wrap and tape the film boot around the pipe with the unslit film on the pipe and the slit film on the ground.

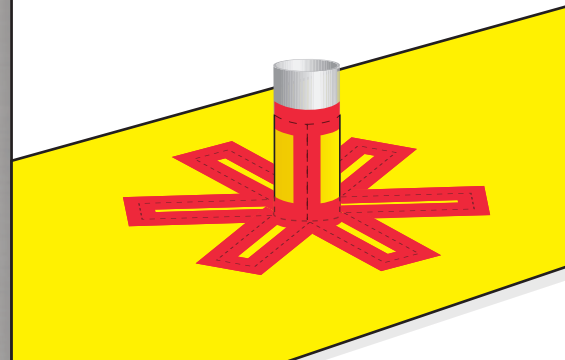

Not To Scale

The drawings and information provided herein have been compiled by Poly-America, L.P. and to the best of our knowledge accurately represent Poly-America's Yellow Guard<sup>®</sup> vapor barriers at the time of publication. These drawings and information are offered "as is," for preliminary planning purposes only, without any warranties of any kind. Final determination of suitability of these drawings and information or products for the use contemplated and its manner of use are the sole responsibility of the end user. Poly-America, L.P. assumes no liability in connection with the use of this information and these products. This information is subject to change without notice.

## Poly-America

2000 W. Marshall Dr. • Grand Prairie, TX 75051

800-527-3322 • 972-337-7610 • Fax 972-337-7016 • [www.yellowguard.com](http://www.yellowguard.com) • yellowguard@poly-america.com

57-023-0107B Rev 06/19