


Re-Cover Board-3: Insulation for Above the Deck Built-Up Roof (BUR) Application

Specify and install Re-Cover Board-3 for use with BUR membrane systems. Secure the Re-Cover Board-3 to flat, smooth, dry systems with FM approved mechanical fasteners using one (1) fastener every four (4) square feet of insulation surface. Re-Cover Board-3, 1" and up, may be adhered to properly prepared BUR surfaces in solid flood coats of hot bitumens. Rmax recommends that when Re-Cover Board-3 is used under a BUR membrane system, it be properly protected by an overlay of mineral fiberboard, wood fiberboard, gypsum board, perlite or a venting base sheet as specified in the NRCA "Technical Bulletin #9".

Refer to Re-Cover Board-3 data sheet for additional application/installation, compliances, thermal and physical properties, limitations and warnings.

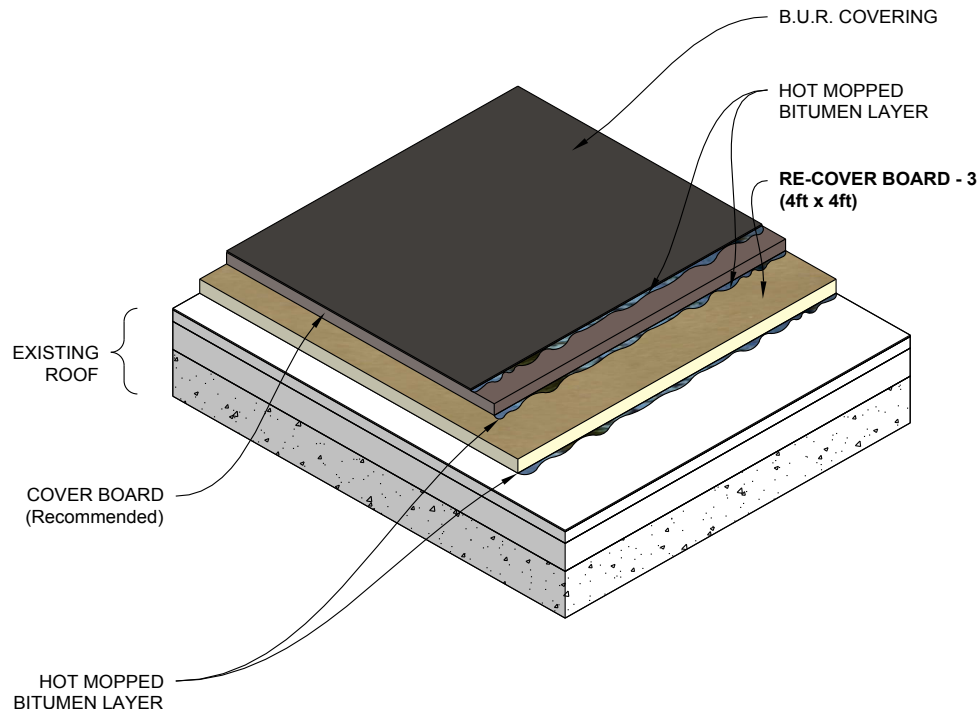

Notes:

1. Vapor retarders should be applied as required and recommended by the NRCA.

*Warranty: See Rmax "Sales Policy" and applicable warranties for terms and conditions. Rmax does not assume any responsibility or liability for the performance of any products other than those manufactured by Rmax. **NOTE: All Rmax products must be tarped, placed on skids and kept dry before and throughout construction. Requests for Certification Letters and/or special warranty considerations must be submitted to Rmax Sales prior to delivery of the products.***

2017-11