

ULTRACURE® INSTALLATION - INSTRUCTIONS


ULTRACURE® ON SITE INSTALLATION GUIDE

INSTALLATION GUIDE

Step 1:

Use plenty of water


Spray water on and around the first area that will be blanketed with UltraCure. At least 1/8" – 1/4" of water is required.

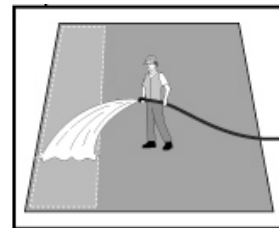

Step 2:

Roll out UltraCure


Place the UltraCure roll on the wet surface with the plastic side up and absorbent natural cellulose fiber side down. Unroll the UltraCure blanket in a straight line. Spray additional water as needed. If wrinkles occur, or the roll becomes out of line, cut the blanket straight across, realign the roll, and continue to roll the curing blanket out.

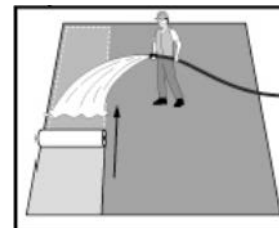

Step 3:

Squeegee any Wrinkles


Using the UltraCure Squeegee (or similar roller squeegee), smooth out any wrinkles and air pockets. Be sure to squeegee toward the un-blanketed portion of the surface.

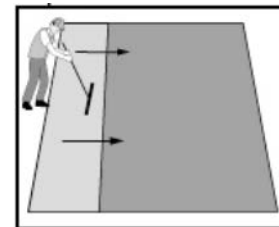

Step 4:

Use plenty of water


Spray water on the next area to be covered with the UltraCure blanket (same technique as discussed in Step 1).

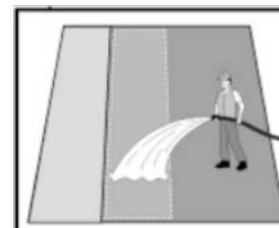

Step 5:

Unroll and Overlap

Roll out the next layer of UltraCure. Be sure to OVERLAP THE ENDS AND EDGES OF THE PREVIOUS ROLL by at least 2" – 3" for the UltraCure NCF, and 4" – 6" for the UltraCure DOT wet curing blankets.

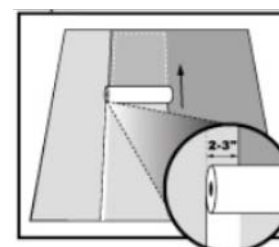



Step 6:

Repeat Steps 3 through 5 until the entire surface is blanketed.

Step 7:

Remove the UltraCure wet curing blankets on the 7th day (UltraCure NCF), or on the 14th day (UltraCure DOT), and dispose of the used blankets along with the construction debris.

Sika Corporation - US
201 Polito Avenue
Lyndhurst, NJ 07071
United States
Usa.Sika.com

For More Information Contact
Sika - St. Louis Sales Office
3400 Tree Court Industrial Blvd.
63122, St. Louis, MO
United States
www.USA.Sika.com
Phone: 1-800-325-9504
Fax: 800-551-5145