
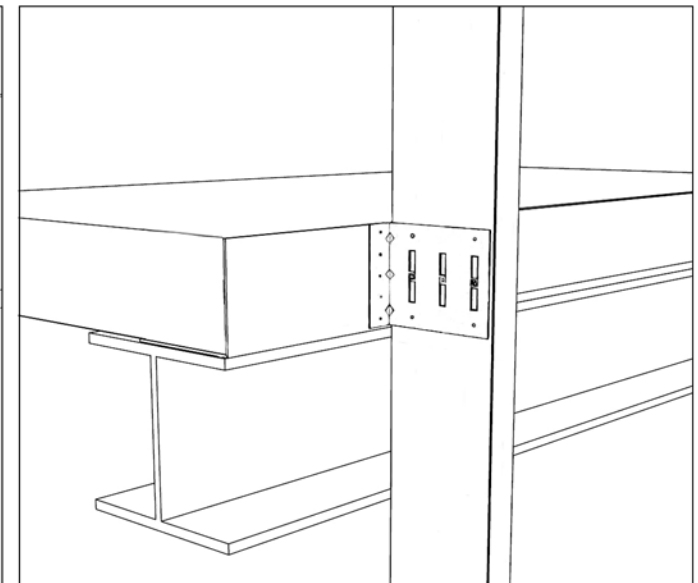
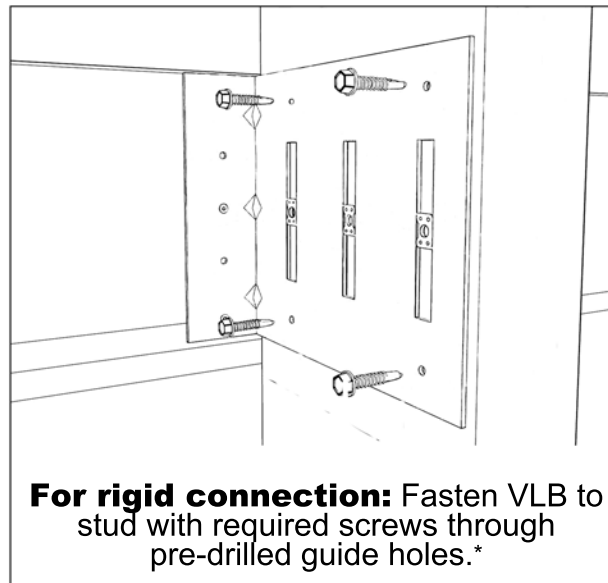
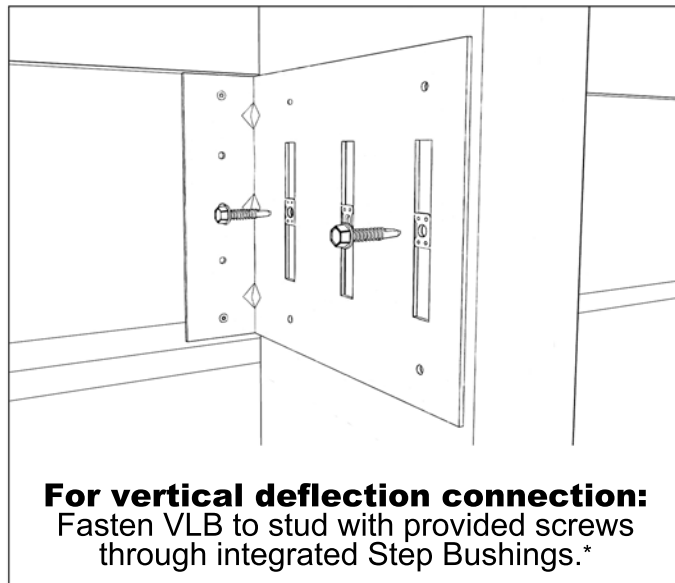
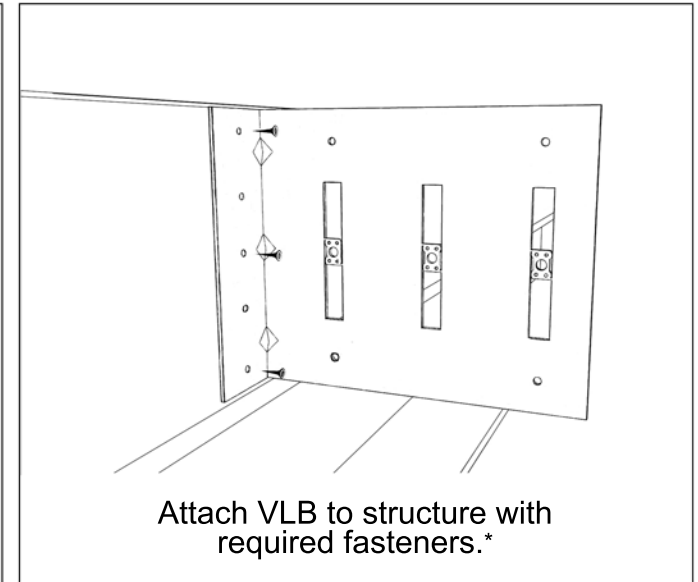
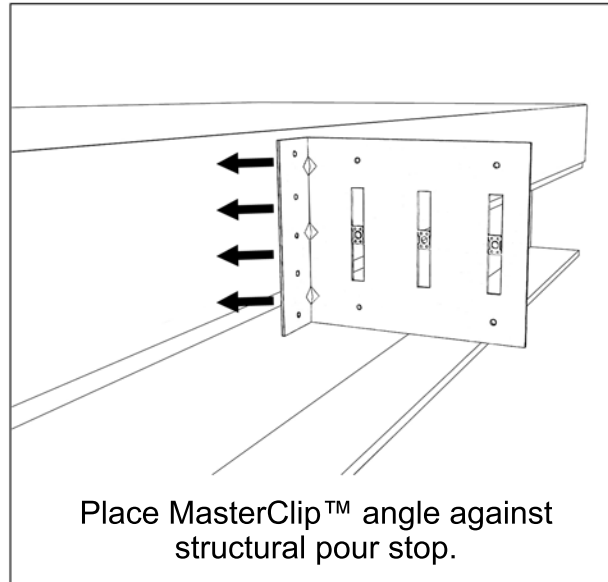


# MasterClip™ VLB Installation Instructions

## Vertical Deflection or Rigid Connection at Bypass Slab

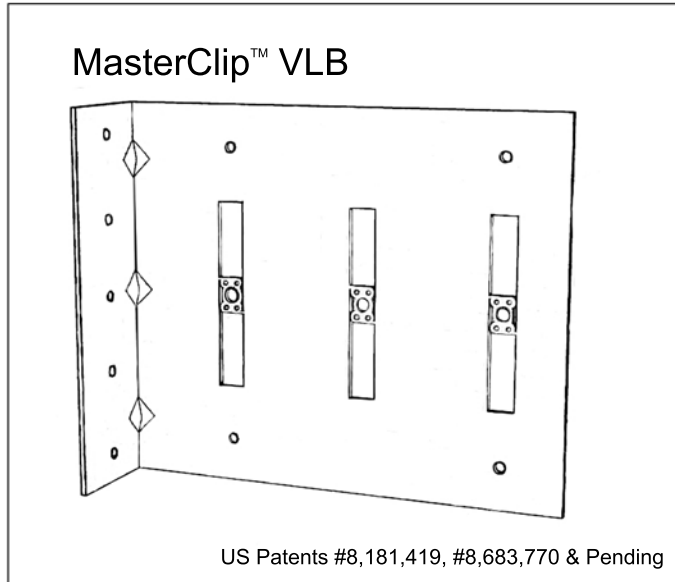

\* Refer to project design requirements for required fastener quantity and placement. TSN provides (3) #12 screws for attachment through integrated bushings.