


# VertiClip® SLF Installation Instructions

## Vertical Deflection @ Bypass Slab

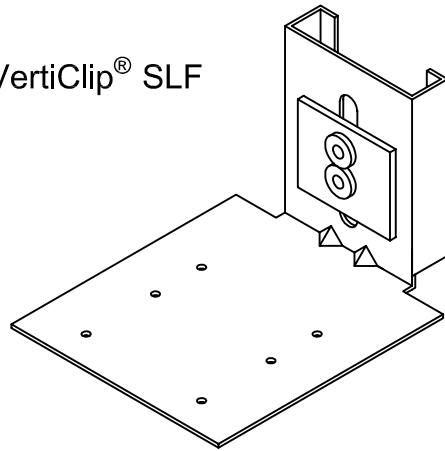


VertiClip® SLF



Step Bushings and Plate pre-installed, do not remove.


Structure

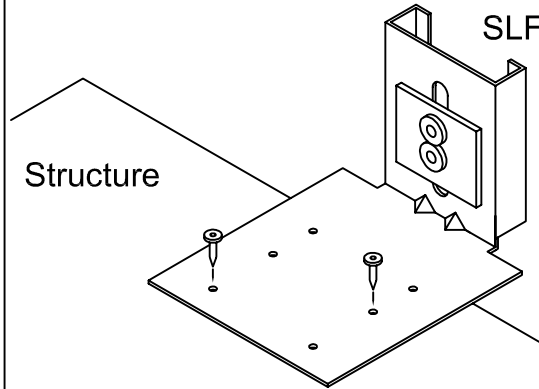

Attach to structure with specified fasteners.

Stud

Fully Seated

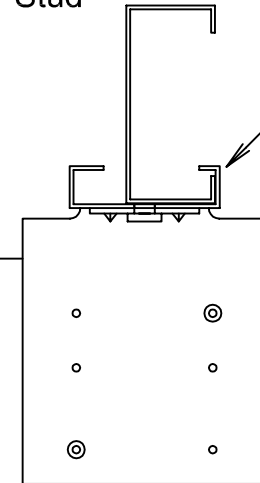


Ensure that the stud's return bend is fully seated in the clip.

Fasten SLF to stud flange with provided screws through step bushings.


Install screws using a screw gun that does not exceed 2,500 rpm.

#12 Screws

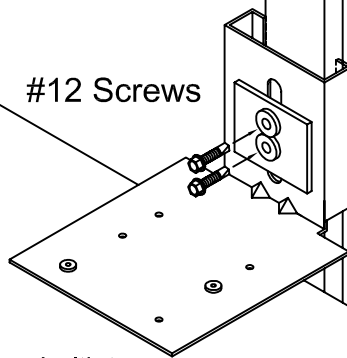

Screw gun must be equipped with torque limiting clutch to avoid fastener overdrive.

Stud

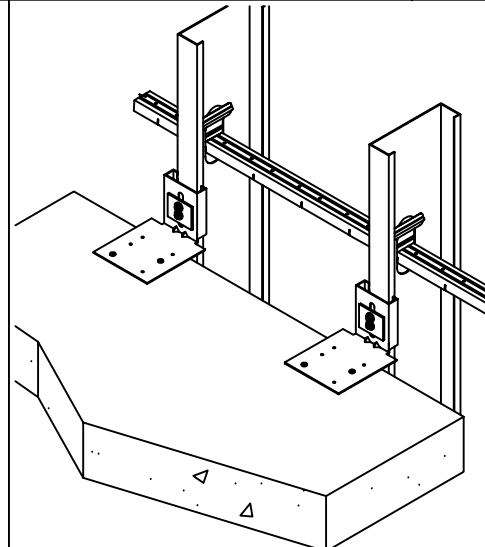

Install bridging within 12" of VertiClip® SLF.

For Installation, Technical, or Submittal questions, contact TSN at (888) 474-4876.

Email us at [support@steelnetwork.com](mailto:support@steelnetwork.com)

Visit [www.steelnetwork.com](http://www.steelnetwork.com) and discover the value of each TSN Solution.