


VertiTrack® VTD and VTX Installation Instructions


Vertical Deflection @ Head of Wall

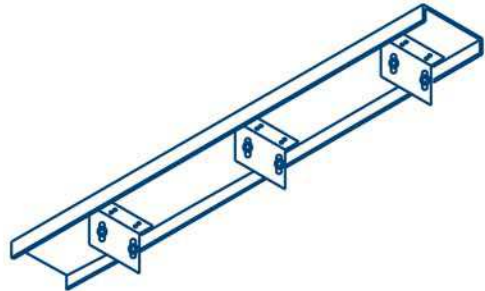

VertiTrack® VTX/VTD




Standard Step Bushing
(Do not remove from slots unless otherwise directed)

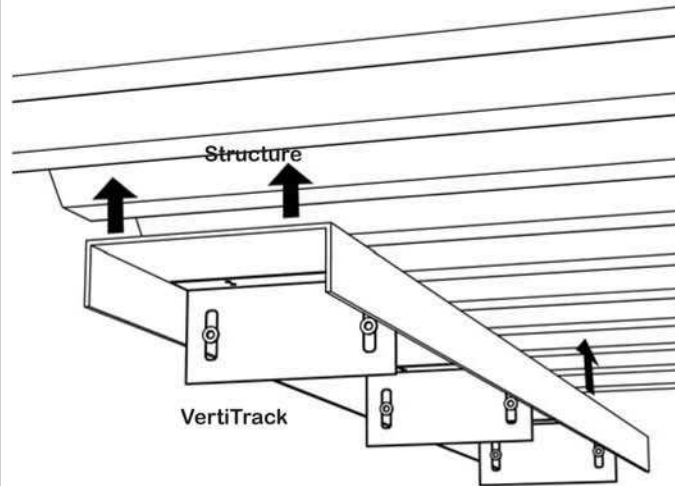


Refer to Design Drawings for fastener type, size, and amount.


Fasten through each clip to structure.

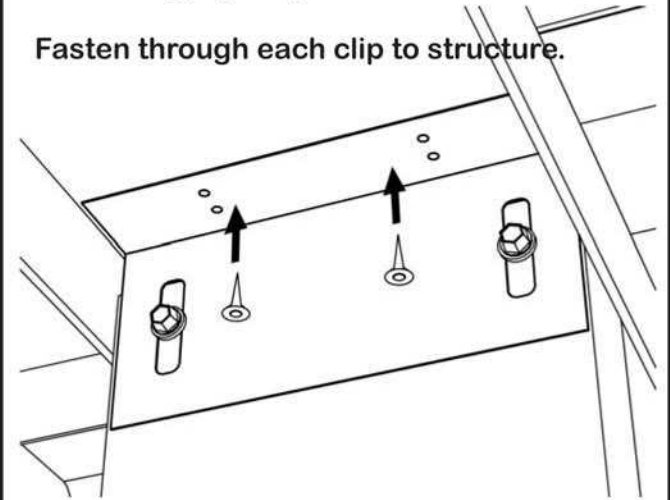

Deflection Gap

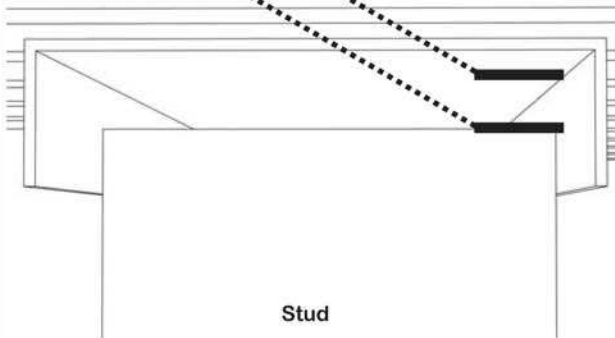

Stud

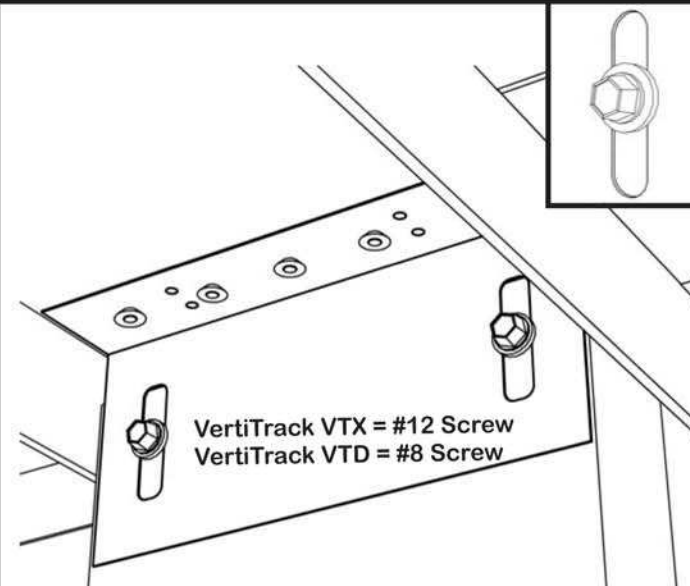

VertiTrack VTX = #12 Screw
VertiTrack VTD = #8 Screw

Stud

For Installation, Technical, or Submittal questions, contact TSN at (888) 474-4876.

Email us at tsn@steelnetwork.com.

Visit www.steelnetwork.com and discover the value of each TSN Solution.