


Curtain Wall Soft Seals

SpecSeal® Series AS200 Elastomeric Spray


SpecSeal® Fast Tack® Firestop Spray & SpecSeal® Safing Spray

1

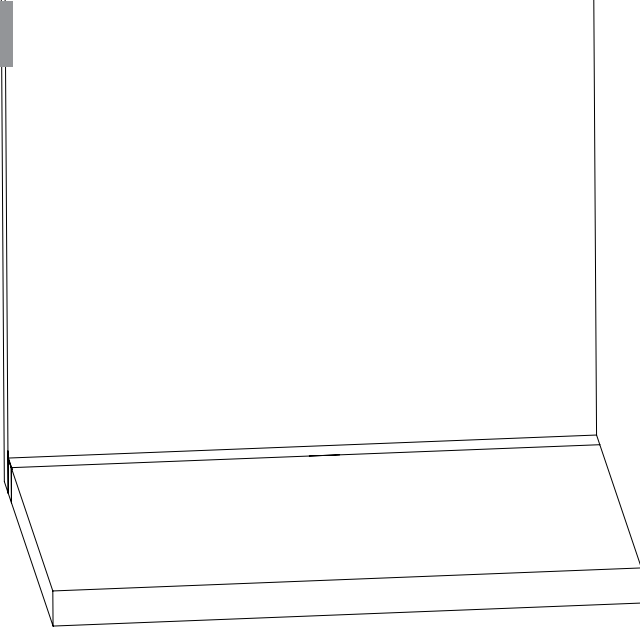

Areas to be protected must be clean and free of oil, loose dirt, rust or scale. Installation temperature shall be between 40°F (4°C) and 95°F (35°C). Consult appropriate manufacturer's drawing for system design requirements. Forming or packing materials are required as an integral part of various system designs.

2

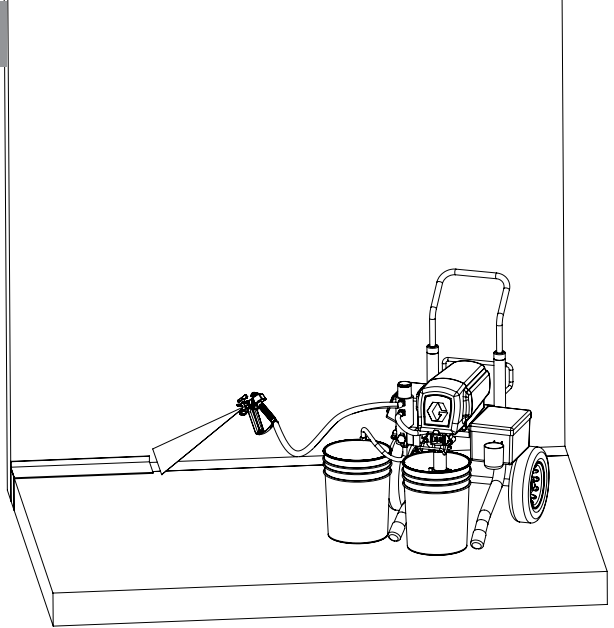

Coating may be applied by airless spray in a single pass as thick as 3/16" (4.8 mm) wet coating depth, although coating thickness requirements vary according to individual design.

Notes:

If applying by brush or spraying on vertical surfaces where coating appears to be prone to slumping, multiple coats or the application of a thin tack coat may be required. DO NOT ATTEMPT TO THIN PRODUCT BY ADDING WATER. Water and moisture in the lines, or hose, will cause machine clogs. When dry, may be painted using most non-solvent based paints.

For more information on firestop installation, refer to ASTM E3157.