



SpeedFlex® Track Top Gasket


(Part Numbers: TTG250J2, TTG250J2-BK, TTG400J2, TTG400J2-BK, TTG600J2, TTG600J2-BK)

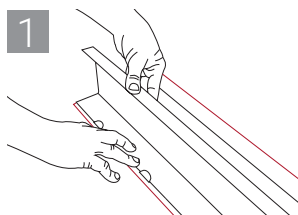


1
Bend scored edges of TTG to conform to J-track profile with printed side facing out. Place TTG on end of J Track as shown. Punched tabs to overlap long leg of track.

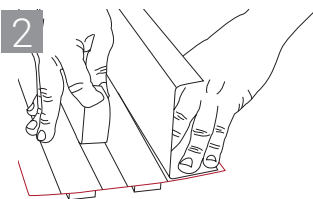


2
Optionally, secure TTG to the center of the top of J-track with integral peel and stick adhesive strip.

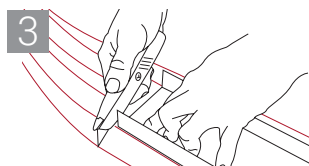


3
Lay track flat and cut TTG along other end of track.

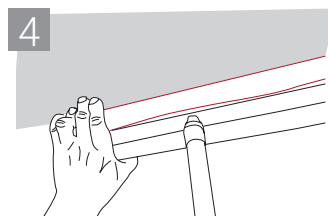

4
Fasten track to floor/ceiling in the normal manner.

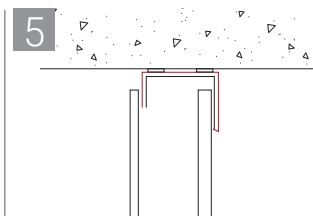

5
Verify that downward projecting flaps are sandwiched between gypsum board and track.

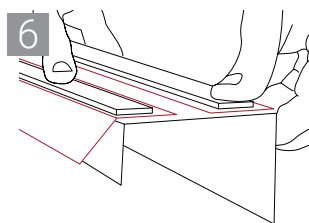

6
The TTG can be cut along the center score line to be placed on wider tracks.

Note: For more information on firestop installation, refer to ASTM E3157.

Page 1 of 1

Warranty: www.stifirestop.com/legal/warranty
Made in USA • Printed in USA
ZIS01403 23214

