



SpeedFlex® Track Top Gasket


(Part Numbers: TTG350F2, TTG350F2-BK,
TTG600F2, TTG600F2-BK)

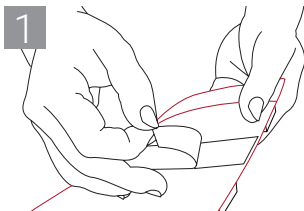


1 Pull end of TTG from center of roll.
Peel optional adhesive from end.

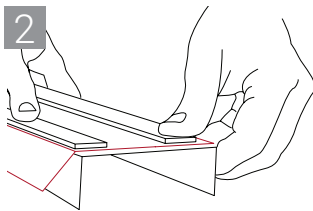


2 Place TTG at one end of track and
center along its entire length.

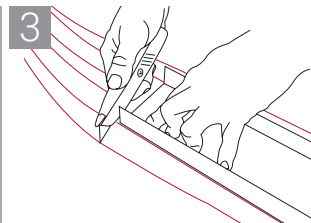


3 Flip track and cut TTG along
other end of track.

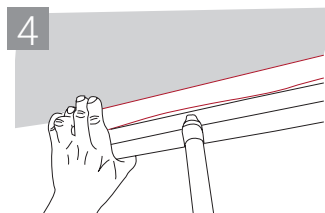

4 Secure track to floor/ceiling as
described in reference wall design.

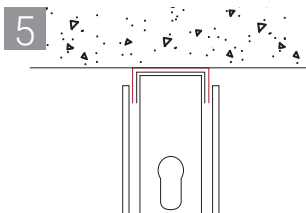

5 Verify that downward projecting
flaps are sandwiched between
gypsum board and steel ceiling
track. Seams in adjoining lengths of
gasket may be butted or overlapped.

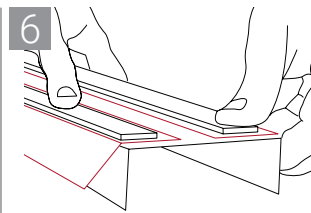

6 The TTG can be cut along the
center score line to be placed
on wider tracks.

Note: For more information on firestop
installation, refer to ASTM E3157.

Page 1 of 1

Warranty: www.stifirestop.com/legal/warranty
Made in USA • Printed in USA
ZIS01406 23163

