


Installing StoGuard® is easy!


StoGuard, a fluid-applied waterproof air barrier membrane is not only easy to install properly but is also affordable. Install StoGuard in 3 quick, easy steps!

Step 1

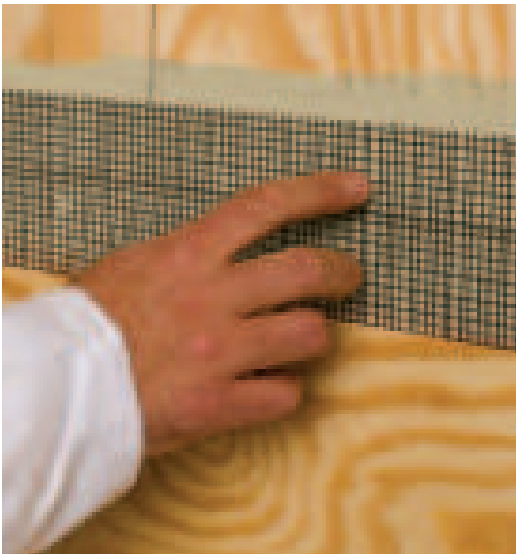


1. Apply Sto EmeraldCoat® by spray or roller liberally to all vertical and horizontal sheathing joints. Embed 4" (400 mm) StoGuard Fabric.

Step 2

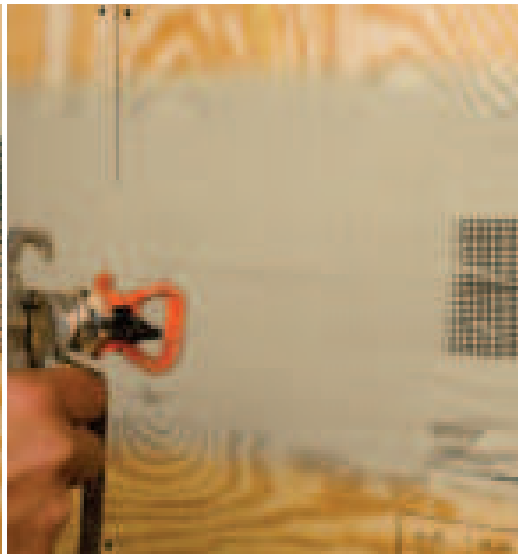

2. Apply Sto EmeraldCoat® over the StoGuard Fabric.

Step 3

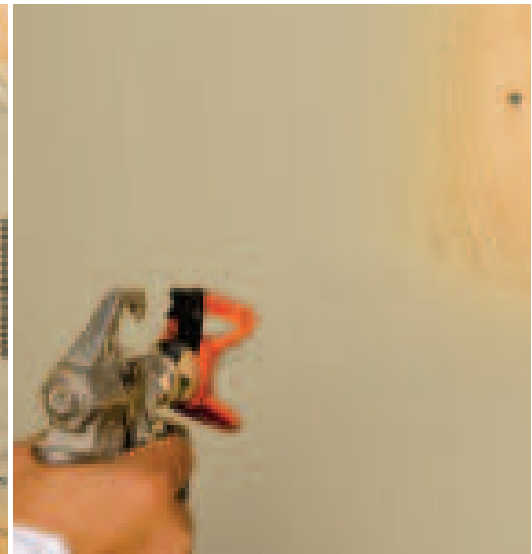




3. Apply Sto EmeraldCoat® onto the entire wall surface. Sto EmeraldCoat® can be used beneath various claddings.




StoGuard provides superior protection underneath brick, wood, vinyl, cement siding, and cement stucco*. Please see the back page for more detailed installation steps, including window openings. **Note: Sto Gold Coat® may be used with StoGuard Fabric.**

Window Openings and Similar Rough Opening Protection

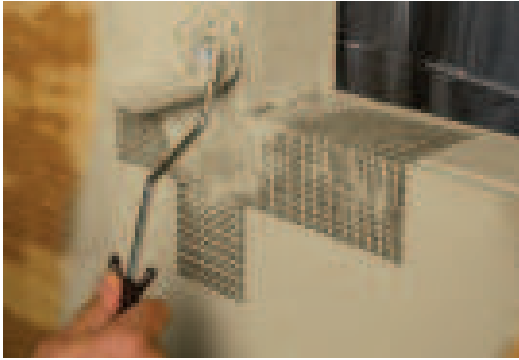StoGuard® RediCorner™

| Step 1 | Step 2 | Step 3 |
|--|--|--|
|  |  |  |
| <p>1. Spray (or roll) corner liberally with Sto EmeraldCoat®.</p> | <p>2. Place StoGuard RediCorner with tabs out into the corner.</p> | <p>3. Roll Sto EmeraldCoat® over StoGuard RediCorner. Complete all four corners.</p> <p>Note: As an alternative to StoGuard RediCorner, StoGuard Fabric tabs may be installed at corners.</p> |

StoGuard® Fabric
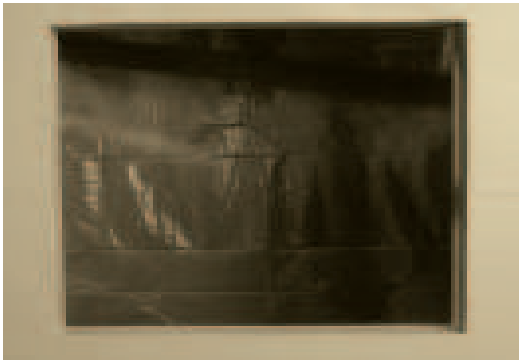
| Step 1 | Step 2 | Step 3 |
|--|--|---|
|  |  |  |
| <p>1. Roll or spray entire rough window opening liberally with Sto EmeraldCoat®.</p> | <p>2. Embed fabric into Sto EmeraldCoat®. Be sure it overlaps the StoGuard RediCorner by two inches (50 mm) minimum.</p> | <p>3. Complete all four sides of the rough opening.</p> |

For technical assistance, please call Sto Tech Services at **800-221-2397**. For more information including detail drawings on StoGuard or other Sto products or systems, please visit www.stocorp.com.

Sto Corp.
 3800 Camp Creek Parkway
 Building 1400, Suite 120,
 Atlanta, GA. 30331
 Tel: 404-346-3666
 Toll Free: 1-800-221-2397
 Fax: 404-346-3119
www.stocorp.com

S735B 08/11

Sto | Building with conscience.

Protect installed materials from rain, freezing temperatures and continuous high humidity until completely dry. If temporary heaters are used, vent to prevent high humidity.

*Note: for wood-based sheathing a slip sheet is required over Sto EmeraldCoat for stucco and similarly constructed wall assemblies unless the local code authority permits omission of the slip sheet.

ATTENTION

This product is intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. It should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, or for other construction activities beyond Sto's control. Improper use of this product or use as part of an improperly designed or constructed larger assembly or building may result in serious damage to this product, and to the structure of the building or its components. **STO CORP. DISCLAIMS ALL WARRANTIES EXPRESSED OR IMPLIED EXCEPT FOR EXPLICIT LIMITED WRITTEN WARRANTIES ISSUED TO AND ACCEPTED BY BUILDING OWNERS IN ACCORDANCE WITH STO'S WARRANTY PROGRAMS WHICH ARE SUBJECT TO CHANGE FROM TIME TO TIME.** For the fullest, most current information on proper application, clean-up, mixing and other specifications and warranties, cautions and disclaimers, please refer to the Sto Corp. website, www.stocorp.com.