



Installation Instructions

Step-a-Bull Corner Beads

Step 1: Set back your drywall as shown in Table A.

Step 2: For the highest strength bond, spray the bead and drywall with a medium coat of 847 Spray Adhesive (the only approved adhesive for Trim-Tex bead installation). If you find it easier to spray the drywall only, spray a medium-heavy coat on the drywall. This method isn't as strong as spraying both surfaces. Immediately (while the 847 is still wet) install the bead making sure the mud legs are sitting flat against the drywall and there is no air gap between the drywall and the bead. To ensure proper bond, pressure the mud legs twice using the FREE Trim-Tex Installation Tool or handle of your hammer.

Step 3: Staple the mud legs every 6" with 1/2" divergent staples (available only at your Trim-Tex dealer). Reapply pressure to the mud legs as needed to guarantee a proper bond. Securely attaching the bead minimizes the chance of edge cracking. DO NOT install the bead with nails or drywall screws.

Step Adapter

Step 1: Clean adapter and step a bull of all dirt and dust.



Step 2: Liberally apply Trim-Tex 847 Adhesive spray to the inside radius edge of the step adapter.

Step 3: Position Step Adapter on the Step A Bull. For baseboards 4" or taller you may have to position the Adapter a few inches off the floor.

Step 4: Use pressure to hold the adapter in place until the adhesive sets.

Table A

STEP-A-BULL	DRYWALL	SETBACK
350	1/2"	NONE
350	5/8"	NONE
3/4"	1/2"	1/2"
3/4"	5/8"	3/8"
1 1/2"	1/2"	1"
1 1/2"	5/8"	3/4"

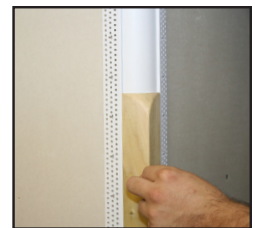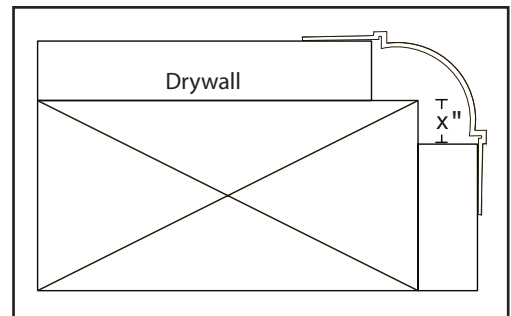

Instrucciones de instalacion de los Step-a-Bulls

Primer paso: Instale la tablaroca siguiendo las instrucciones de el recuadro A.

Segundo paso: Para una mejor aplicaci3n, aplique pegamento a las extremidades perforadas del esquinero y a la tablaroca con pegamento en aerosol 847 marca Trim-Tex. (El unico pegamento aprobado para la instalacion de los productos Trim-Tex). Si le es mas facil aplicar pegamento a la tablaroca, aplique dos capas medianas de pegamento. Este proceso no es tan efectivo como al aplicar una capa a cada superficie. Inmediatamente instale el esquinero mientras el pegamento se encuentra humedo y asegurese de que las extremidades del esquinero se encuentran firmes sobre la tablaroca y no existen espacios entre la extremidad del esquinero y la tablaroca. Para asegurarse de que el pegamento funcione apropiadamente, precione las extremidades del esquinero con la herramienta de aplicacion o con el mango de su martillo.

Tercer paso: Engrape las extremidades cada 6 pulgadas con grapas divergentes de 1/2" por 1/2" (Disponibles en su agencia autorizada Trim-Tex). Precione las extremidades nuevamente para asegurar una mejor union del esquinero a la tablaroca. Instalar el esquinero apropiadamente, disminuira las posibilidades de reventaduras en el futuro. NO instale el esquinero con tornillos o clavos.

Adaptador del Step-a-Bull

Paso 1: Limpie el adaptador y el step-a-bull de toda tierra y polvo.


Paso 2: Aplique pegamento en aerosol 847 marca Trim-Tex al radio interior del adaptador.

Paso 3: Posicione el adaptador al Step-A-Bull. Para bases de 4" o mas grandes, usted tendra que posicionar el adaptador unas pulgadas arriba del piso.


Paso 4: Ponga presion en el adaptador para detenerlo en su lugar hasta que el pegamento se seque.

Recommended Arch Installation

Side View

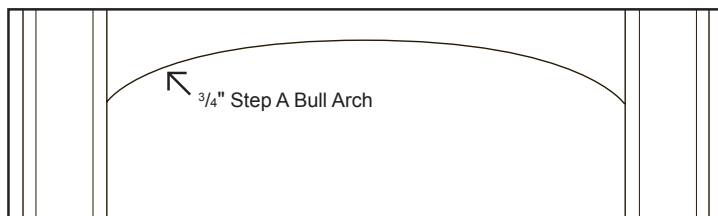

Top View

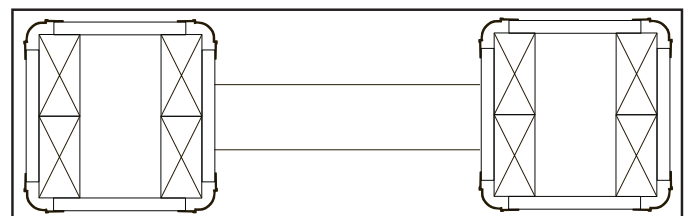




- New Bullnose with Revealed Edge
- Creates a sharp, attractive detail
- Crisp edge for precise paint transitions
- Beautiful when creating columns, skylights, soffits & niches

3/4" R. Step A Bull

- The 3/4" R. Step A Bull features a 3/4" radius and 3/16" deep steps on either side of the bullnose to create a sharp attractive corner detail.
- Perfect for any outside corner, but is especially beautiful when creating decorative columns, soffits and niches.
- Visit our website or refer to instruction sheets for how to create 3/4" arched details with Step a Bull.
- Free Cleaning tool & Miter Marker Included


STOCK No.	LENGTH	Pcs. PER BOX
7048	8'	15
7040	10'	15

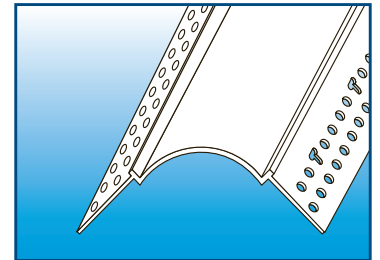

3/4" R. Step A Bull Arch

- Introducing the world's first ever, Step A Bull Arch
- Innovative 2 part sliding design comes pre-assembled to speed installation
- Designed to finish an inside radius as small as 15".


STOCK No.	LENGTH	Pcs. PER BOX
7148	8'	10
7140	10'	10

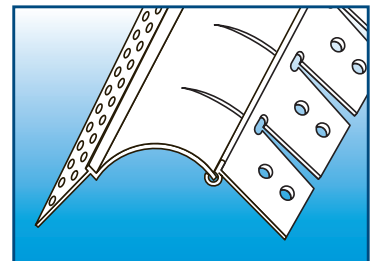

1 1/2" R. Step A Bull

- The 1 1/2" R. Step A Bull features a 1 1/2" radius and 3/16" deep steps on both sides of the bullnose to create a sharp attractive corner detail.
- Perfect for any outside corner, but is especially beautiful when creating decorative columns and soffits.
- Visit our website or refer to instruction sheets for how to create 1 1/2" arched details with Step a Bull.
- Free Cleaning tool & Miter Marker Included


STOCK No.	SIZE	LENGTH	Pcs. PER BOX
7058	1 1/2"	8'	10
7050	1 1/2"	10'	10

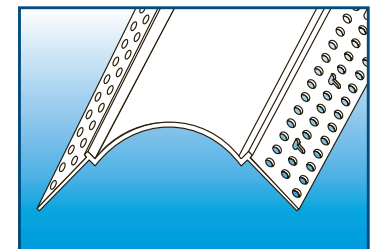

350 R. Step A Bull

- Perfect for any outside corner, but is especially beautiful when creating decorative columns and soffits.
- Free Cleaning tool & Miter Marker Included

STOCK No.	LENGTH	Pcs. PER BOX
7038	8'	20
7030	10'	20

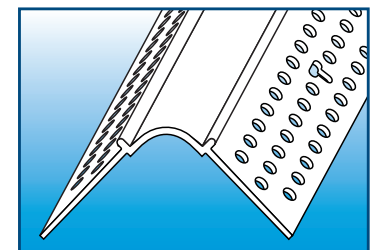

Step A Bull Adapters

- The Step Adapter is designed to create a transition to a standard 90° outside corner to allow you to use standard outside miters on baseboards and crown moldings.
- Made of high quality poplar wood
- Available for 350, 3/4" & 1 1/2" Step A Bull
- Installs easily with Trim-Tex 847 Spray Adhesive

STOCK No.	SIZE	LENGTH	Pcs. PER BOX
990	350	5"	20
991	3/4"	5"	20
992	1 1/2"	5"	10

