


Architectural L Bead Archway

Finish the rough edge of drywall with the sharpest and cleanest L Bead on the market. The possibilities with Architectural L Bead Archway are practically endless; great around ductwork and piping, as well as for finishing columns, curved walls and soffits.

Installation Guide

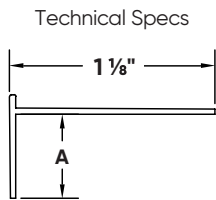

Scan Below for
Installation Video



Before Installation:

Measure, cut and dry fit the bead.

Step 1:

Spray the bead with 2 coats of Trim-Tex 847 Spray Adhesive.

Step 2:


Press the bead in place, applying pressure to the mud legs.

Step 3:


Staple every 6"-8" using 1/2" staples.

Step 4:


Finish with drywall compound.

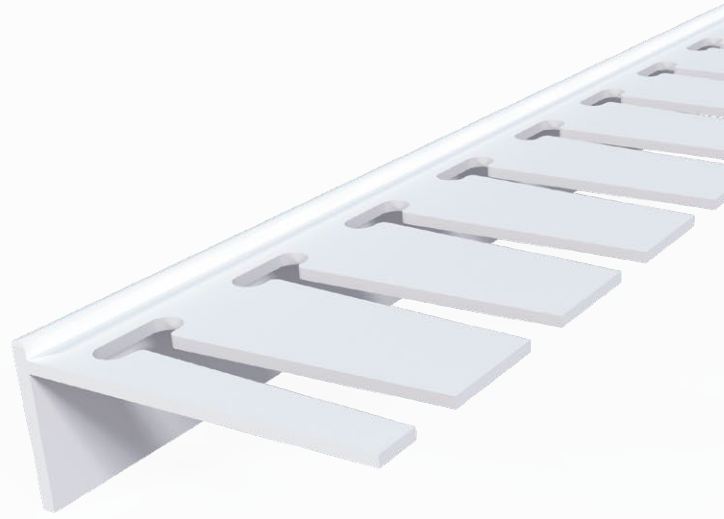


Step 1:

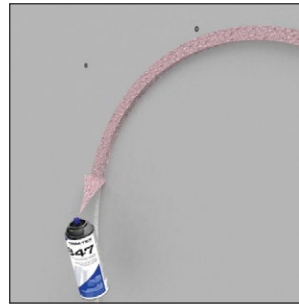

Step 2:

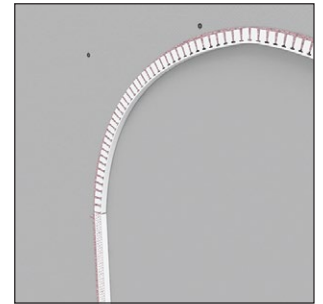

Step 3:

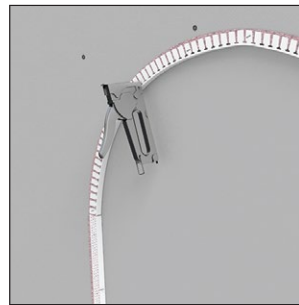

Step 4:

