


## Architectural Z Shadow Bead

Architectural Z Shadow Bead is your key to executing so many elegant drywall designs, from stylishly trimless doors to walls that appear to float above the ground. The bead creates a sharp, clean edge reveal effect when butting up to ceilings, base trim and other finished interior architectural components.



### Installation Guide

Technical Specs

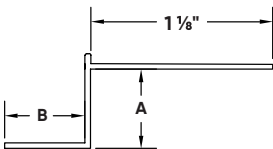

Scan Below for Installation Video



#### Before Installation:

Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

#### Step 1:

Spray the bead with 2 coats of Trim-Tex 847 Spray Adhesive.

#### Step 2:

Press the bead in place, applying pressure to the mud legs.


#### Step 3:

Staple every 6"-8" using 1/2" staples.

#### Step 4:

Finish with drywall compound.

#### Step 1:

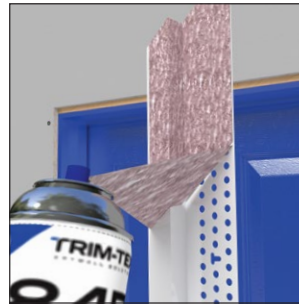

#### Step 2:



#### Step 3:



#### Step 4:

