


1½" Jumbo Bullnose Corner Bead

Our largest bullnose profile creates sweeping rounded edges! Whether you're looking to soften your corners for a safer recreational environment or add a traditional/Southwestern look to your room, Trim-Tex's 1½" Jumbo Bullnose Corner Bead is always a great choice to elevate a room beyond the ordinary.

Installation Guide

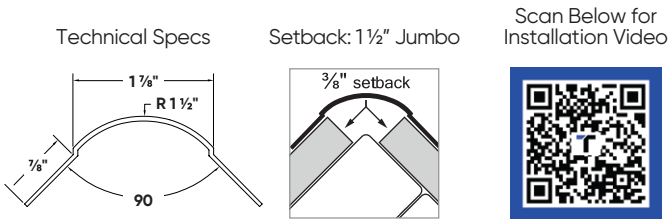

Before Installation:

Ensure setbacks are even with the corner edge. Measure, cut and dry fit the bead, leaving a ½" gap at the floor.

Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

Step 2:

Press the bead in place, applying pressure to the mud legs.

Step 3:

Staple every 6"-8" using ½" staples.

Step 4:

Finish with drywall compound.




Step 1:



Step 2:



Step 3:

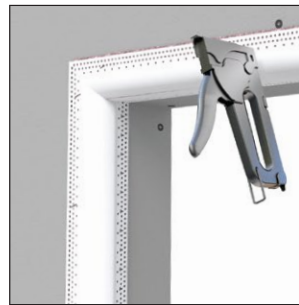

Step 4:

