




## 3/4" Large Bullnose Splayed Corner Bead

With a soft, rounded profile, our 3/4" Large Bullnose Splayed Corner Bead is designed to fit off-angle 135-degree outside corners. Whether you're looking to soften your corners for a safer recreational environment or add a traditional/southwestern look to your room, you can't go wrong with this popular style.

### Installation Guide

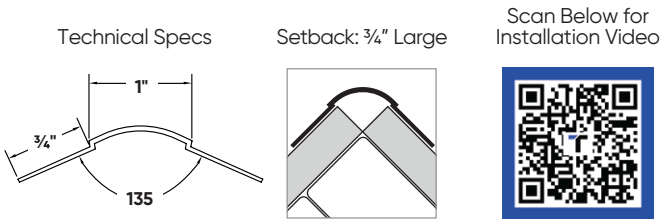

#### Before Installation:

Ensure setbacks are even with the corner edge. Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

#### Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

#### Step 2:

Press the bead in place, applying pressure to the mud legs.

#### Step 3:

Staple every 6"-8" using 1/2" staples.

#### Step 4:

Finish with drywall compound.


#### Step 1:



#### Step 2:



#### Step 3:

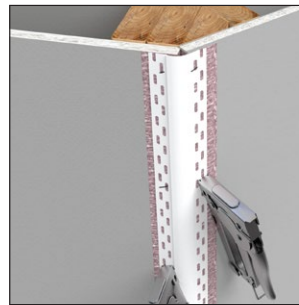

#### Step 4:

