


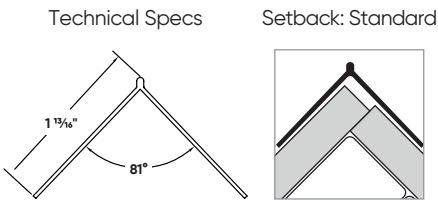

## Rigid Jumbo Closed Angle Corner Bead

This bead is an unevenly framed corner's biggest enemy – its tight, 81-degree angle and extra-wide mud legs can level out even the most warped drywall corners. Try Rigid Jumbo Closed Angle as a super-sized alternative to metal corner bead; its more acute angle means the mud legs won't buckle or flare out upon installation the way some beginners find 90-degree vinyl beads can.

### Installation Guide



#### Before Installation:

Use minimal drywall setback on outside corners. Measure, cut and dry fit the bead, leaving a 1/2" gap at the floor.

#### Step 1:

Coat both the bead and edge of drywall with Trim-Tex 847 Spray Adhesive.

#### Step 2:

Press the bead in place, applying pressure to the mud legs.

#### Step 3:

Staple every 6"-8" using 1/2" staples.

#### Step 4:

Finish with drywall compound.

#### Note:

When working with especially uneven framing – where applying extra pressure to the bead in order to fit it onto the corner is necessary – installing Rigid Jumbo Closed Angle Corner Bead with 847 Spray Adhesive may not be useful. In these cases, use a laser or chalk line for precision, push the bead into place and install with 1/2" staples only, every 2"-4".

#### Step 1:



#### Step 2:



#### Step 3:



#### Step 4:

